



BINTELLI

49cc Scorch Parts List



The Scorch has been produced in different factories. On this parts diagram, different part numbers are listed for each manufacturing facility. When ordering parts for this model of scooter, please be sure to check your vin number to be sure your order the correct part number for your scooter. If you have any questions, please do not hesitate to contact us. All parts can be purchased on www.BintelliParts.com.

Scorch (ZN50QT-29) #1

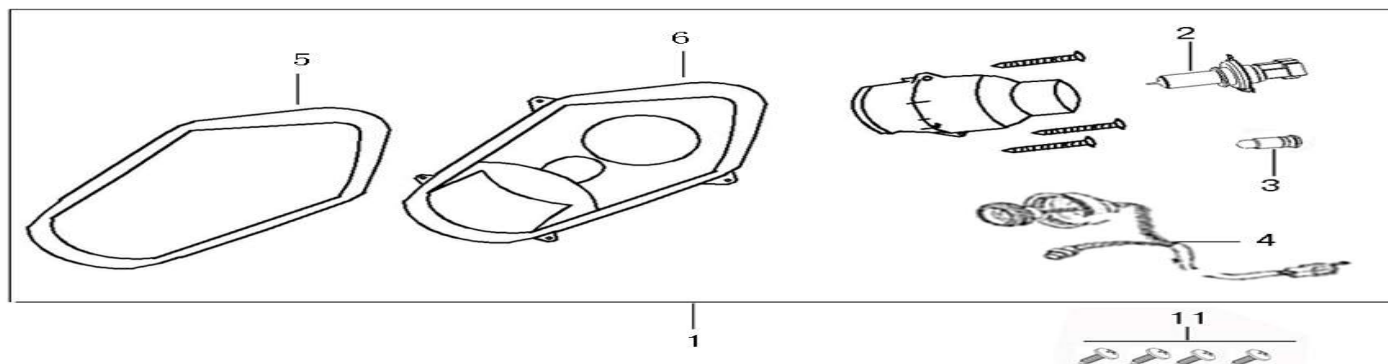


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	GST2018F350028	GST2018F350028	Scorch Headlight Assembly
2	34901-F35-9000-Y	34901-F35-9000-Y	Headlight Bulb (3 prong)
3	34903-F35-9000-Y	34903-F35-9000-Y	Headlight bulb (1 Prong)
4	33130-F35-9000-Y	33130-F35-9000-Y	Scorch Headlight Harness
5	N/A	N/A	
6	N/A	N/A	
11	93401-42012-03-Y	93401-42012-03-Y	Tapping Screw 4.2 x 12

Scorch (ZN50QT-29) #2

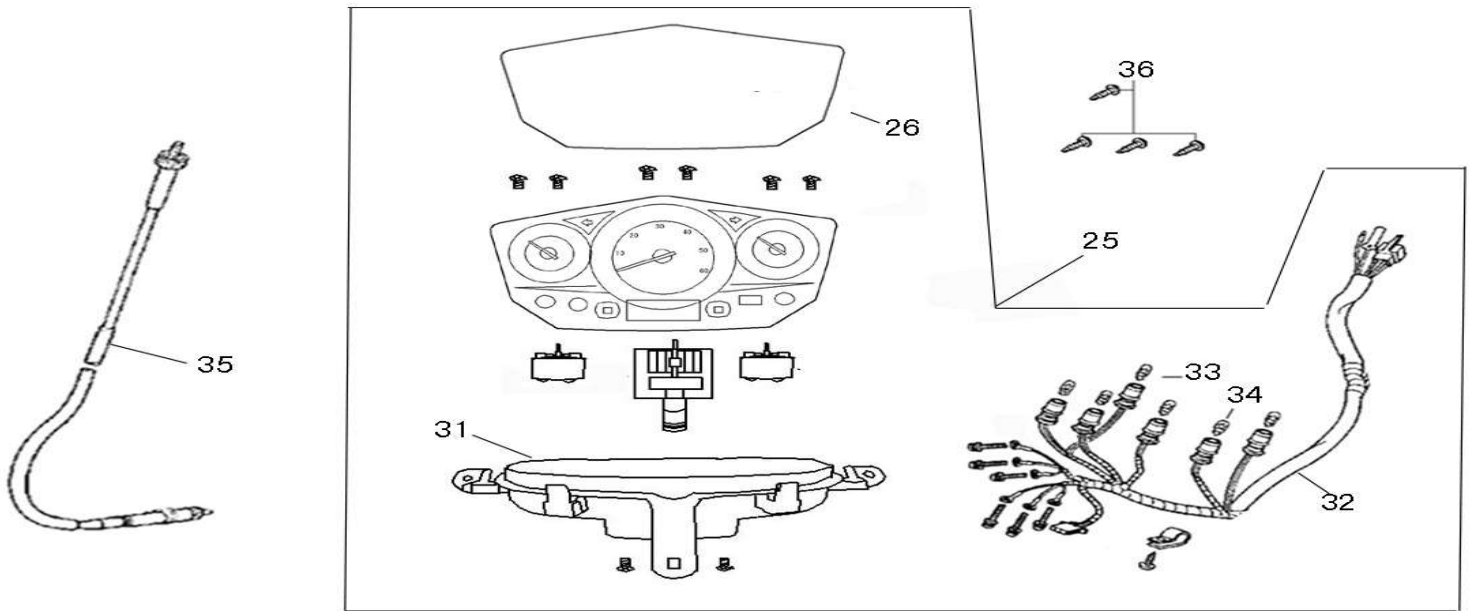


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
25	GST2018F350067	GST2018F350067	Scorch Speedometer Cluster
26	N/A	N/A	
31	N/A	N/A	
32	37224-F35-9000-Y	37224-F35-9000-Y	Scorch Speedometer Harness
33	N/A	N/A	
34	N/A	N/A	
35	GST2018F350065	GST2018F350065	Scorch Speedo Cable
36	93401-42012-03-Y	93401-42012-03-Y	Tapping Screw 4.2 x 12

Scorch (ZN50QT-29) #3

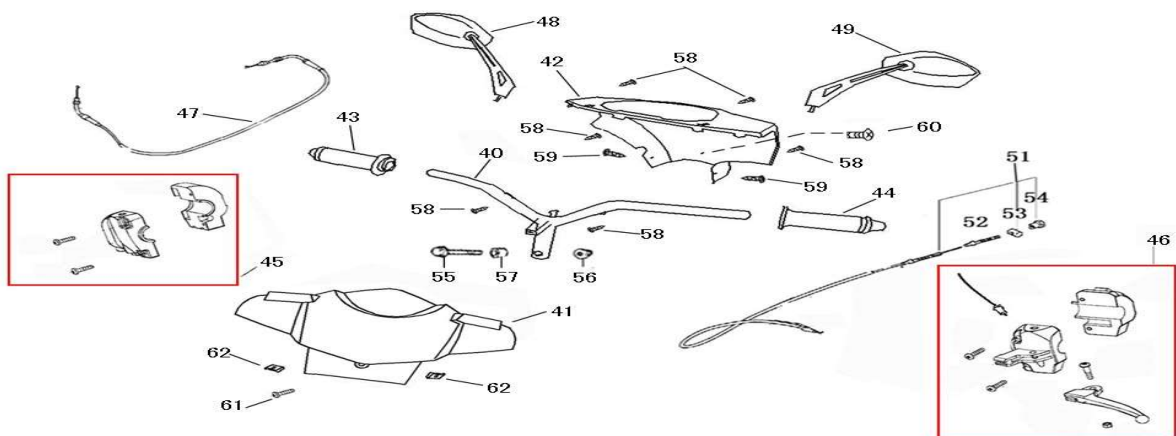


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
40	GST2018F350041	GST2018F350041	Scorch Handlebar
41	GST2018F350001	GST2018F350001	Scorch Speedometer plastic (Front)
42	GST2018F350010	GST2018F350010	Scorch Speedometer plastic (Rear)
43	GST2018F350072	53140-B08-9000-J	Throttle Grip
44		53166-B08-9000-J	Left Grip
45	3515A-B08-9000-Y	3515A-B08-9000-J	Scorch Right Switch Assembly
46	3520A-B08-9000-Y	3520A-B08-9000-J	Scorch left Switch Assembly
47	GST2018F350064	17910-B08-9100-J	Scorch Throttle Cable
48,49	GST2018F350114	88120/88110-B08-E000-J	Mirror Set
51	GST2018F350063	GST2018F350063	Scorch Rear Brake Line
52	N/A	N/A	
53	N/A	N/A	
54	N/A	N/A	
55	92201-10050-03-Y	92201-10050-03-Y	Handlebar Flange Bolt
56	95401-10000-03-Y	95401-10000-03-Y	Nut 10mm
57	53125-F8-9000-Y	53125-F8-9000-Y	Handlebar Bushing
58	93401-42012-03-Y	93401-42012-03-Y	Tapping Screw 4.2 x 12
59	93401-48016-03-Y	93401-48016-03-Y	Screw Tapping 4.8x16
60	92701-06016-02-Y	92701-06016-02-Y	Screw Tapping 6x16
61	93201-05030-02-Y	93201-05030-02-Y	Screw Pan 5x30
62	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm

Scorch (ZN50QT-29) #4

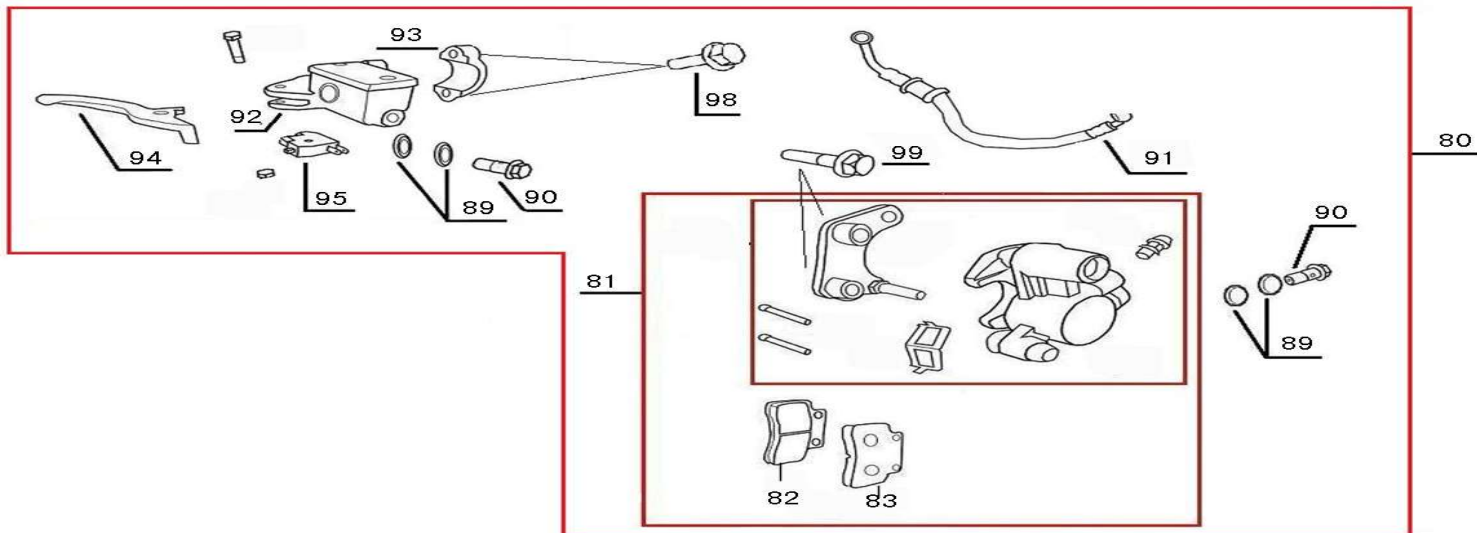


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
80	GST2018F350056	GST2018F350056	Front Brake Master Assembly
81	N/A	N/A	
82, 83	45105-B08-E000-Y	45105-B08-E000-Y	Brake Pad Set
89	N/A	N/A	
90	N/A	N/A	
91	45126-B08-9000-Y	45126-B08-9000-Y	Front Brake Line
92	45500-LF-9000-Y	45500-LF-9000-Y	Brake Master Cylinder
93	N/A	N/A	
94	53175-LF-9000-Y	53175-LF-9000-Y	Right Brake Handle
95	10099-LF-9000-Y	10099-LF-9000-Y	Brake Switch
98	92101-06025-03-Y	92101-06025-03-Y	Bolt Flange 6x25
99	92901-08035-03-Y	92901-08035-03-Y	Bolt Flange 8x35

Scorch (ZN50QT-29) #5

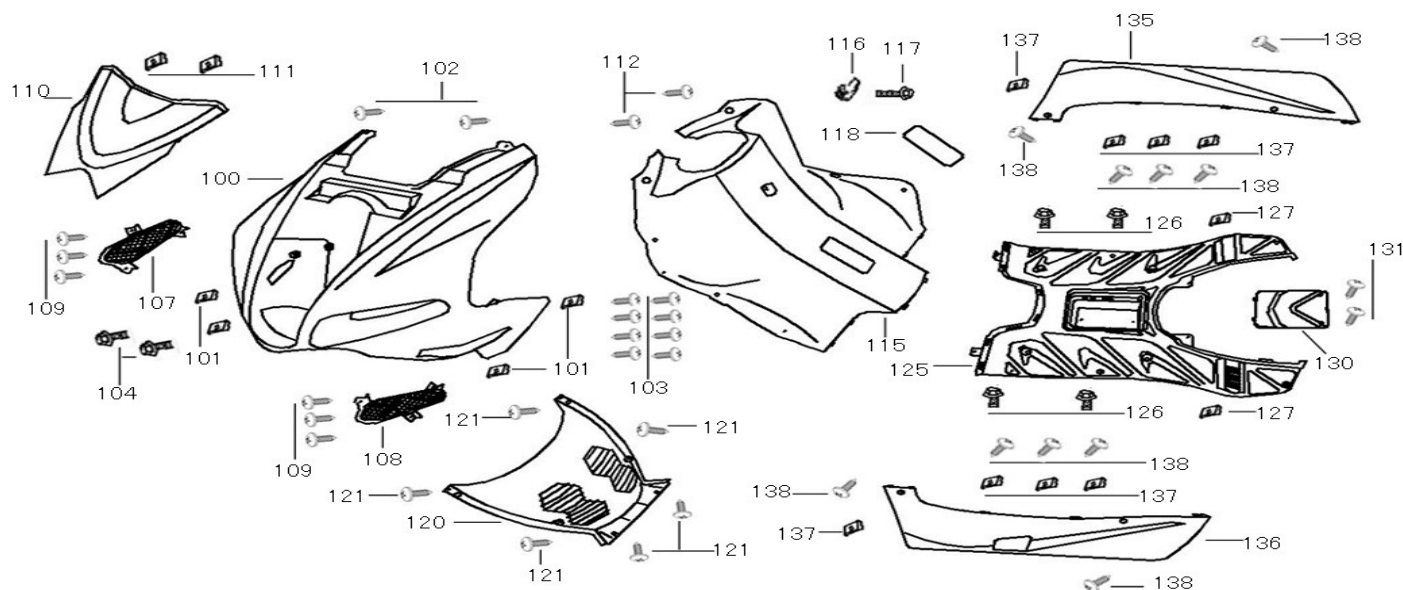


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
100	GST2018F350003-Black	GST2018F350003-Black	Scorch Front Plastic (Black)
.	GST2018F350003-Green	GST2018F350003-Green	Scorch Front Plastic (Green)
.	GST2018F350003-MatteBlue	GST2018F350003-MatteBlue	Scorch Front Plastic (Matte Blue)
.	GST2018F350003-Red	GST2018F350003-Red	Scorch Front Plastic (Red)
.	n/a	64301-F35-9000-004-J	Scorch Front Plastic (Blue)
.	n/a	64301-F35-9000-012-J	Scorch Front Plastic (Silver)
.	n/a	64301-F35-9000-040-J	Scorch Front Plastic (Orange)
101	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm

102	93401-42012-03-Y	93401-42012-03-Y	Screw Tapping 4.2x12
103	93401-42012-03-Y	93401-42012-03-Y	Screw Tapping 4.2x12
104	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
107	GST2018F350023	GST2018F350023	Scorch Right Vent Grid
108	GST2018F350022	GST2018F350022	Scorch Left Vent Grid
109	93401-42012-03-Y	93401-42012-03-Y	Tapping Screw 4.2 x 12
110	GST2018F350002	GST2018F350002	Scorch Front Lid Plastic
111	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm
112	93401-48016-03-Y	93401-48016-03-Y	Screw Tapping 4.8x16
115	GST2018F350011	GST2018F350011	Leg Shield
116	GST2018F350101	GST2018F350101	Luggage Hook
117	92101-06030-03-Y	92101-06030-03-Y	Bolt Flange 6x30
118	GST2018F350021	GST2018F350021	Leg Shield Lid
120	GST2018F350012	GST2018F350012	Frame Fender
121	93401-48016-03-Y	93401-48016-03-Y	Screw Tapping 4.8x16
125	GST2018F350014	GST2018F350014	Floorboard
126	93001-06017-03-Y	93001-06017-03-Y	Bolt Flange 6x17
127	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm
130	GST2018F350015	GST2018F350015	Battery Cover
131	93401-42016-03-Y	93401-42016-03-Y	Screw Tapping 4.2x16
135	GST2018F350006-Black	GST2018F350006-Black	Scorch Right Floorboard (Black)
.	GST2018F350006-Green	GST2018F350006-Green	Scorch Right Floorboard (Green)
.	GST2018F350006-Matte Blue	GST2018F350006-Matte Blue	Scorch Right Floorboard (Matte Blue)
.	GST2018F350006-Red	GST2018F350006-Red	Scorch Right Floorboard (Red)
.	n/a	64305-F35-9000-004-J	Scorch Right Floorboard (Blue)
.	n/a	64305-F35-9000-012-J	Scorch Right Floorboard (Silver)
.	n/a	64305-F35-9000-040-J	Scorch Right Floorboard (Orange)
136	GST2018F350005-Black	GST2018F350005-Black	Scorch Left Floorboard (Black)
.	GST2018F350005-Green	GST2018F350005-Green	Scorch Left Floorboard (Green)
.	GST2018F350005-MatteBlue	GST2018F350005-MatteBlue	Scorch Left Floorboard (Matte Blue)
.	GST2018F350005-Red	GST2018F350005-Red	Scorch Left Floorboard (Red)
.	n/a	64306-F35-9000-004-J	Scorch Left Floorboard (Blue)
.	n/a	64306-F35-9000-012-J	Scorch Left Floorboard (Silver)
.	n/a	64306-F35-9000-040-J	Scorch Left Floorboard (Orange)
137	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm
138	93401-48016-03-Y	93401-48016-03-Y	Screw Tapping 4.8x16

Scorch (ZN50QT-29) #6

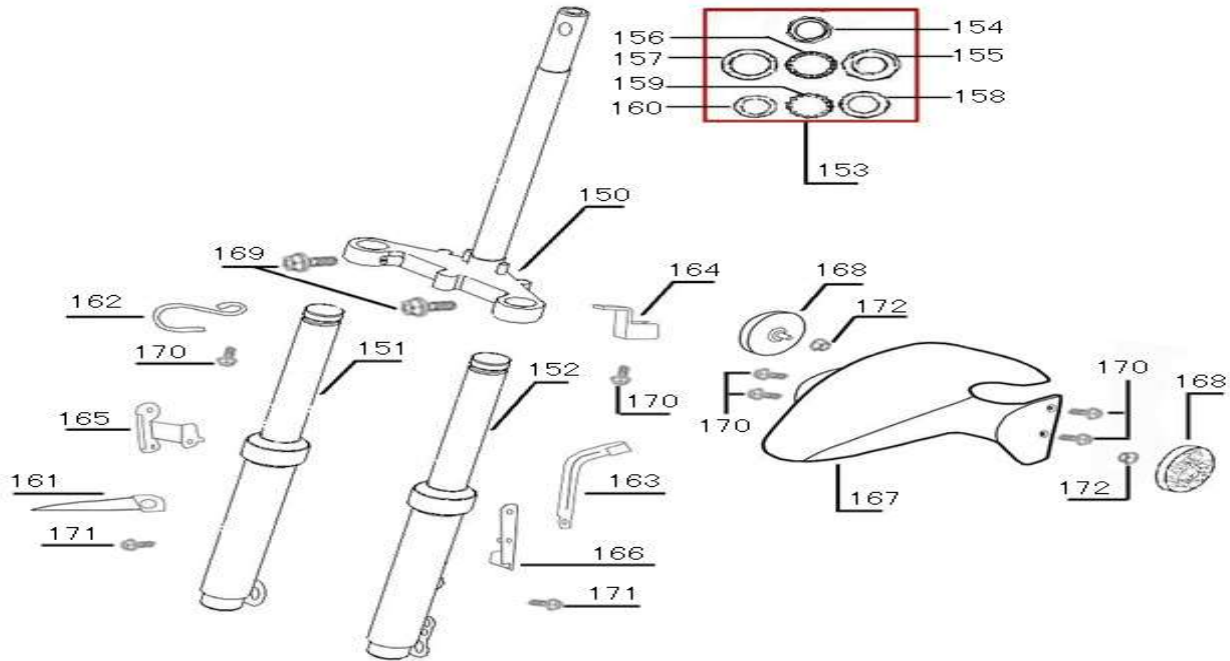


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
150	GST2018F350045	GST2018F350045	Triple Tree
151	GST2018F350054-Left	51400-B08-9200-HU01-J	Front Shock (Right)
152	GST2018F350054-Right	51500-B08-9200-HU01-J	Front Shock (Left)
153	GST2018F350112	GST2018F350112	Triple Tree Bearing Set
161	GST2018F350117	GST2018F350117	Cable Clamp
162			
163			
164	GST2018F350117	GST2018F350117	Cable Clamp
165	GST2018F350050	GST2018F350050	Front Right Fender Bracket
166	GST2018F350049	GST2018F350049	Front Left Fender Bracket
167	GST2018F350004	GST2018F350004	Scorch Front Fender
168	GST2018F350035	GST2018F350035	Circular Reflector (Orange)
169	92101-10030-09-Y	92101-10030-09-Y	Bolt Flange 10x30
170	92101-06012-09-Y	92101-06012-09-Y	Bolt Flange 6x12
171	92101-06016-09-Y	92101-06016-09-Y	Bolt Flange 6x16
172	95101-06000-08-Y	95101-06000-08-Y	Nut Flange 6mm

Scorch (ZN50QT-29) #7

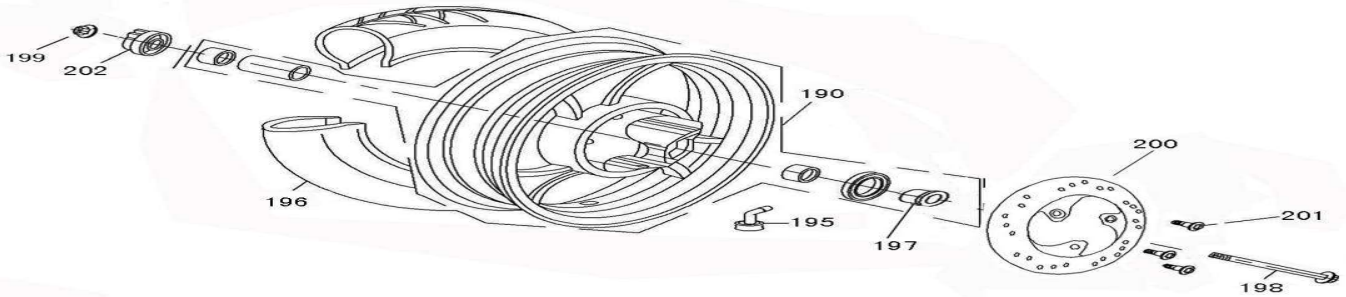


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
190	GST2018F350058	44600-B08-9000-J	WHEEL SET FR
not shown		44601-B08-9000-J	WHEEL FR CAST
not shown		90754-F8-0000-J	DUST SEAL
not shown		44620-B08-9000-J	COLLAR FR DIST
not shown		90912-F8-9000-J	BEARING 6201 LLU
195	GST2018F350062	GST2018F350062	Valve Stem
196	GST2018F350060	44710-F8-9000-A/B/C/D-J	TIRE ASSY(120/70-12)
197	GST2018F350111	44311-B08-9000-J	COLLAR FR WHEEL SIDE
198	GST2018F350110	44301-B08-9000-J	AXLE FR WHEEL
199	95501-12000-03-Y	95501-12000-03-J	NUT U FLANGE 12MM (G)
200	GST2018F350057	45121-B08-E000-B-J	DISK FR BRAKE
201	93601-08025-02-Y	93601-08025-02-J	BOLR DISK
202	GST2018F350073	44800-B08-9000-J	GEAR BOX ASSY

Scorch (ZN50QT-29) #8

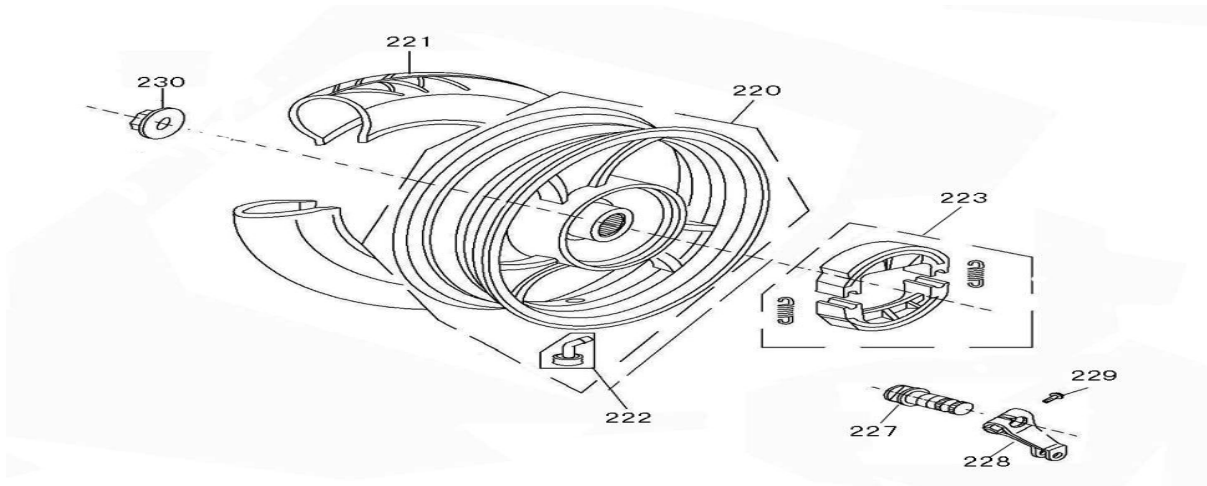


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
220	GST2018F350059	42600-B08-9100-J	WHEEL COMP RR CAST
221	GST2018F350061	44710-F8-9000-A/B/C/D-J	TIRE ASSY(120/70-12)
222	GST2018F350062	GST2018F350062	Valve Stem
223	N/A	N/A	
not shown	N/A	N/A	
not shown	N/A	N/A	
227	43141-DGW-9100-Y	43141-DGW-9100-Y	Rear Brake Cam
228	43410-DGW-9100-Y	43410-DGW-9100-Y	Arm Comp RR Brake
229	92101-06032-03-Y	92101-06032-03-Y	Bolt Flange 6x32
230	95502-16000-03-Y	95502-16000-03-Y	Flange Nut M16

Scorch (ZN50QT-29) #9

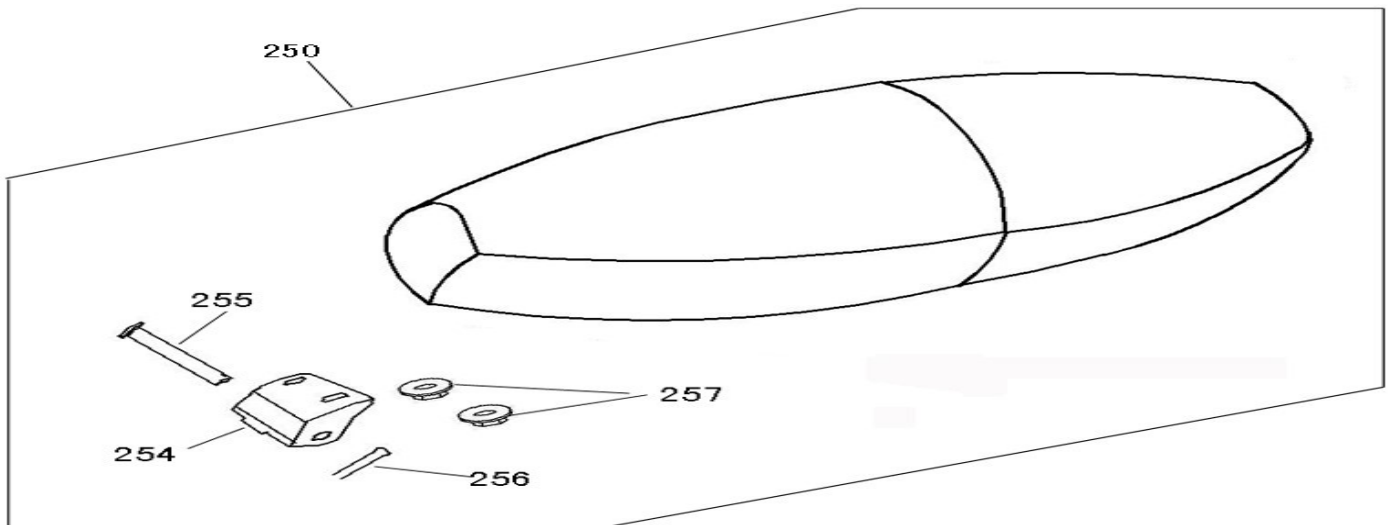


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
250	GST2018F350027	GST2018F350027	Seat Assembly
not shown	77103-F35-9000-Y	77103-F35-9000-Y	Bolt Lock Plate Set
not shown	N/A	N/A	
not shown	N/A	N/A	
254	GST2018F350046	GST2018F350046	HINGE SEAT
255			AXIS
256			SPLIT PIN
257			Nut Flange 6mm

Scorch (ZN50QT-29) #10

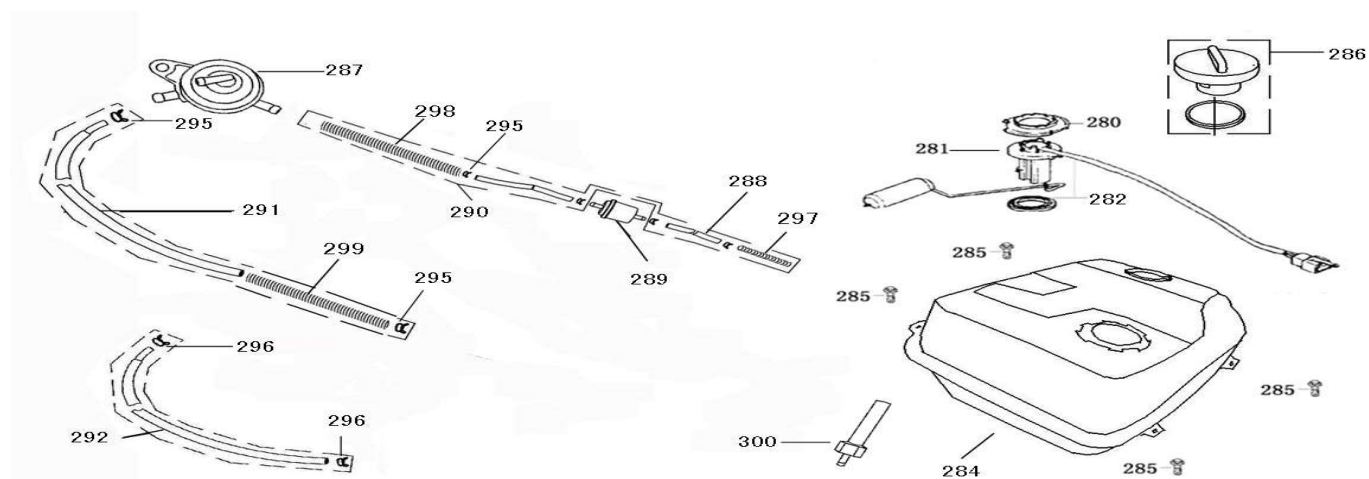


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
280	37802-F8-9000-Y	37802-F8-9000-Y	Fuel Gasket
281	3780A-LY-9000-Y	3780A-LY-9000-Y	Fual Float
282	37801-F8-9000-Y	37801-F8-9000-Y	Fuel Float Gasket
284	GST2018F350053	GST2018F350053	Fuel Tank
285		92101-06012-03-Y	Bolt Flange 6x12
286		17620-F8-9000	Gas Cap
287		GST2018F350091	Fuel Petcock
288	GST2018F350084	GST2018F350084	Fuel Line
289	GST2018F350090	GST2018F350090	Fuel Filter
290	GST2018F350084	GST2018F350084	Fuel Line
291	GST2018F350084	GST2018F350084	Fuel Line
292	GST2018F350086	GST2018F350086	Vacuum Line
295	19411-F8-9000-Y	19411-F8-9000-Y	Hose Clip
296-300	N/A	N/A	

Scorch (ZN50QT-29) #11

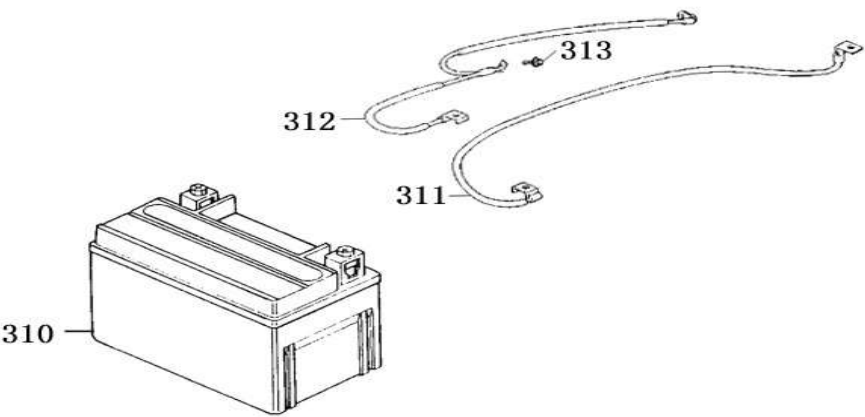


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
310	GST2018F350116	GST2018F350116	Battery
311	N/A	N/A	
312	N/A	N/A	
313	92101-06012-03-Y	92101-06012-03-Y	Bolt Flange 6x12

Scorch (ZN50QT-29) #12

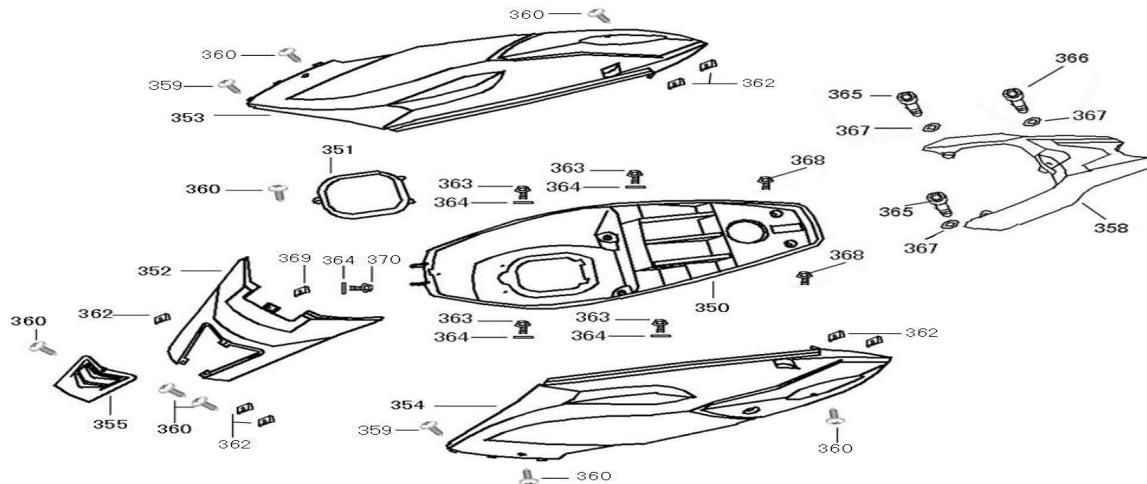


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
350	GST2018F350016	GST2018F350016	Underseat Storage
351	GST2018F350018	GST2018F350018	Carb Access Door
352	GST2018F350017	GST2018F350017	Front Luggage Cover
353	GST2018F350007-B	GST2018F350007-B	Right Fender (Matte Blue)
.	GST2018F350007-BLK	GST2018F350007-BLK	Right Fender (Black)
.	GST2018F350007-G	GST2018F350007-G	Right Fender (Green)
.	GST2018F350007-R	GST2018F350007-R	Right Fender (Red)
.	n/a	83500-F35-9000-004-J	Right Fender (Blue)
.	n/a	83500-F35-9000-012-J	Right Fender (Silver)
.	n/a	83500-F35-9000-040-J	Right Fender (Orange)
354	GST2018F350008-B	GST2018F350008-B	Left Fender (Matte Blue)
.	GST2018F350008-BLK	GST2018F350008-BLK	Left Fender (Black)
.	GST2018F350008-G	GST2018F350008-G	Left Fender (Green)
.	GST2018F350008-R	GST2018F350008-R	Left Fender (Red)
.	n/a	83600-F35-9000-004-J	Left Fender (Blue)
.	n/a	83600-F35-9000-012-J	Left Fender (Silver)
.	n/a	83600-F35-9000-040-J	Left Fender (Orange)
355	83753-F35-9000-Y	83753-F35-9000-Y	Access Panel
358	GST2018F350009	GST2018F350009	Rewar Spoiler
359	93301-42012-03-Y	93301-42012-03-Y	Screw Tapping 4.2x12
360	93301-48016-03-Y	93301-48016-03-Y	Screw Tapping 4.8x16
362	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm
363	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
364	95801-06000-03-Y	95801-06000-03-Y	Washer 6mm
365	92501-08025-03-Y	92501-08025-03-Y	Bolt Special 8x25
366	92501-08045-03-Y	92501-08045-03-Y	Bolt Special 8x45
367	95801-08000-03-Y	95801-08000-03-Y	Washer 8mm

368	93003-06014-03-Y	93003-06014-03-Y	Bolt Flange 6x14
369	90701-DGW-9000-Y	90701-DGW-9000-Y	Nut Clip 6mm
370	92101-06020-03-Y	92101-06020-03-Y	Bolt Flange 6x20

Scorch (ZN50QT-29) #13

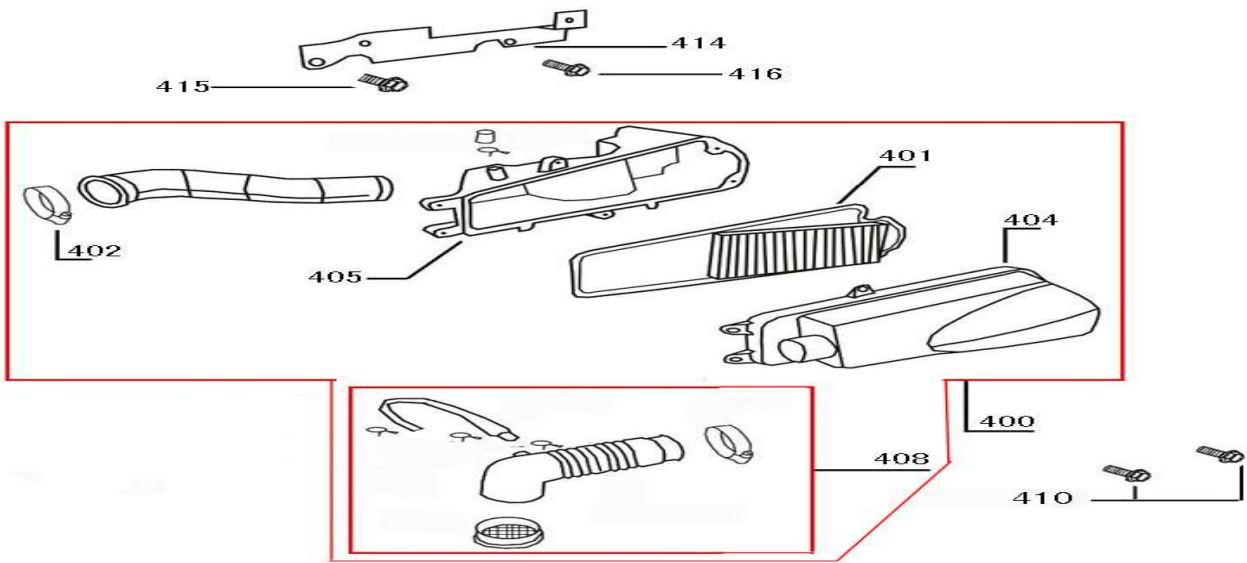


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
400	GST2018F350094	GST2018F350094	Air Box
401		17211-B08-9100-J	Air Filter
402		90652-DGW-9100-J	Intake Tube Clamp
404		N/A	
405		N/A	
408		N/A	
410		92401-06025-03-Y	Bolt Flange 6x25
414		N/A	
415		92101-08012-03-J	Bolt 5x12
416		92101-06012-03-Y	Bolt Flange 6x12

#14

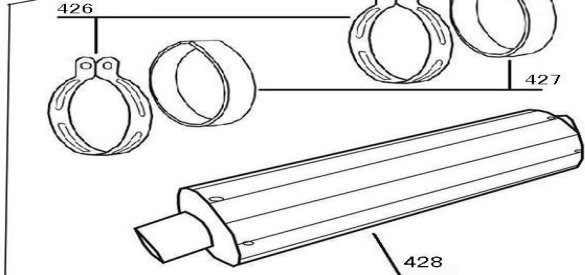


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
420	GST2018F350095	1830A-B08-E100-A/B-J	Exhaust Assembly
421	N/A	18310-B08-9100-A/B-J	Exhaust Pipe
422	N/A	18311-B08-9000-A/B-J	Muffler Connector Gasket
423	N/A	92201-08025-03-J	Bolt Washer 8x25
424	N/A	95801-08000-03-Y	Washer 8mm
425	N/A	95901-08000-03-J	SPG Washer 8mm
426	N/A	18312-B08-9000-A/B-J	Muffler Metal Hoop (Set of 2)
427	N/A	18313-B08-9000-A/B-J	Muffler Rubber Gasket (Set of 2)
428	N/A	1830A-B08-E100-A/B-J	MUFFLER COMP EXH
431	18291-F8-9000-Y	18291-F8-9000-Y	Exhaust Pipe Gasket
432	N/A	90201-F8-9000-J	Nut Cap 6mm
433	N/A	95801-06000-03-Y	Washer 6mm
434	N/A	95901-06000-03-J	SPG Washer 6mm
435	N/A	92201-08040-03-J	Bolt Washer 8x40
436	N/A	95801-08000-03-Y	Washer 8mm
437	N/A	95901-08000-03-J	SPG Washer 8mm
438	N/A	18330-B08-9100-J	Muffler Assembly Stay
439	N/A	92201-08040-03-J	Bolt Flange 8x40
440	N/A	92201-08045-03-J	Bolt Flange 8x45

Scorch (ZN50QT-29) #15

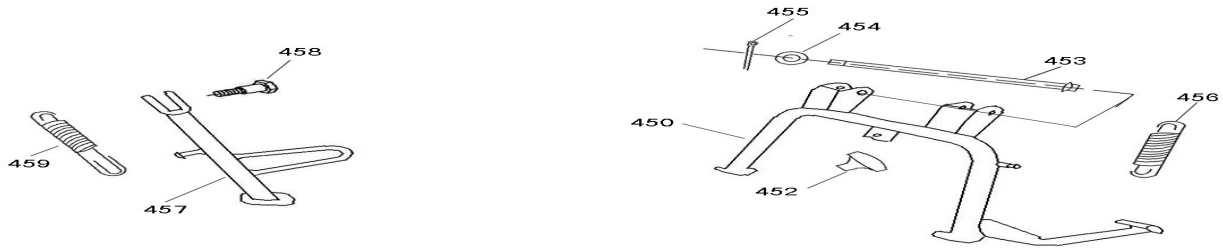


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
450	GST2018F350042	GST2018F350042	Main Stand
452	GST2018F350107	GST2018F350107	Rubber Stopper
453	50503-DGW-9100-Y	50503-DGW-9100-Y	Main Stand Axle
454	95801-08000-03-Y	95801-08000-03-Y	Washer 8mm
455	97001-16250-Y	97001-16250-Y	Split Pin 1.6x25
456	GST2018F350099	GST2018F350099	Main Kickstand Spring
457	50530-F35-E000-Y	50530-F35-E000-Y	Side Kick Stnd
458	90101-F8-9000-Y	90101-F8-9000-Y	Side Pivot Screw
459	GST2018F350098	GST2018F350098	Spring For Side Kickstand

Scorch (ZN50QT-29) #16

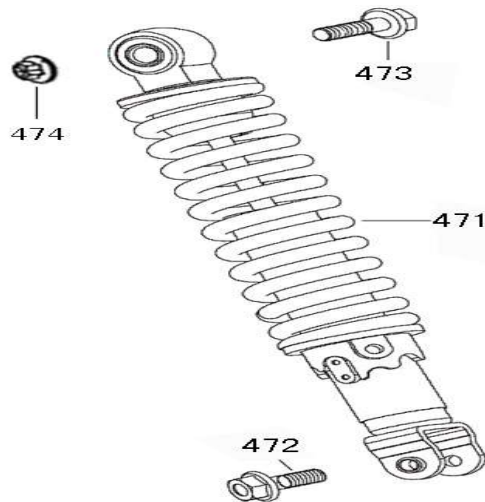


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
471	GST2018F350055	GST2018F350055	Rear Shock Absorber
472	92201-08032-03-Y	92201-08032-03-Y	Bolt Flange 8x32
473	92201-10040-03-Y	92201-10040-03-Y	Bolt Flange 8x40
474	95401-10000-03-Y	95401-10000-03-Y	Nut 10mm

Scorch (ZN50QT-29) #17

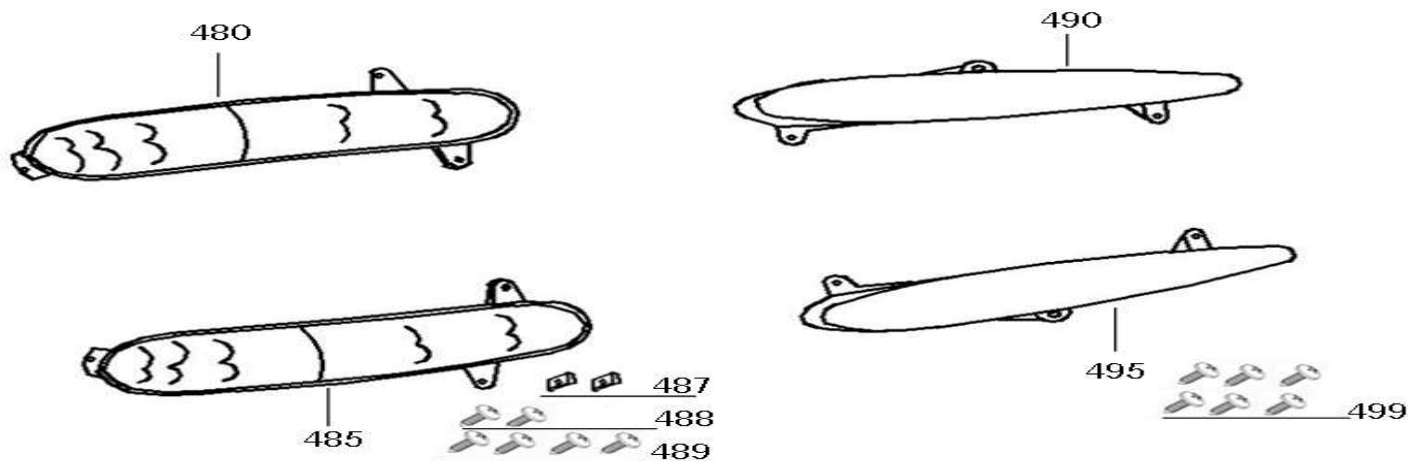


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
480	GST2018F350030	GST2018F350030	Turn Signal (Front Right)
485	GST2018F350029	GST2018F350029	Turn Signal (Front Left)
487	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm
488	93401-48012-03-Y	93401-48012-03-Y	Screw Tapping 4.8x12
489	93401-42012-03-Y	93401-42012-03-Y	Screw Tapping 4.2x12
490	GST2018F350032	GST2018F350032	Turn Signal (Rear Right)
495	GST2018F350031	GST2018F350031	Turn Signal (Rear Left)
499	93401-42012-03-Y	93401-42012-03-Y	Screw Tapping 4.2x12

Scorch (ZN50QT-29) #18

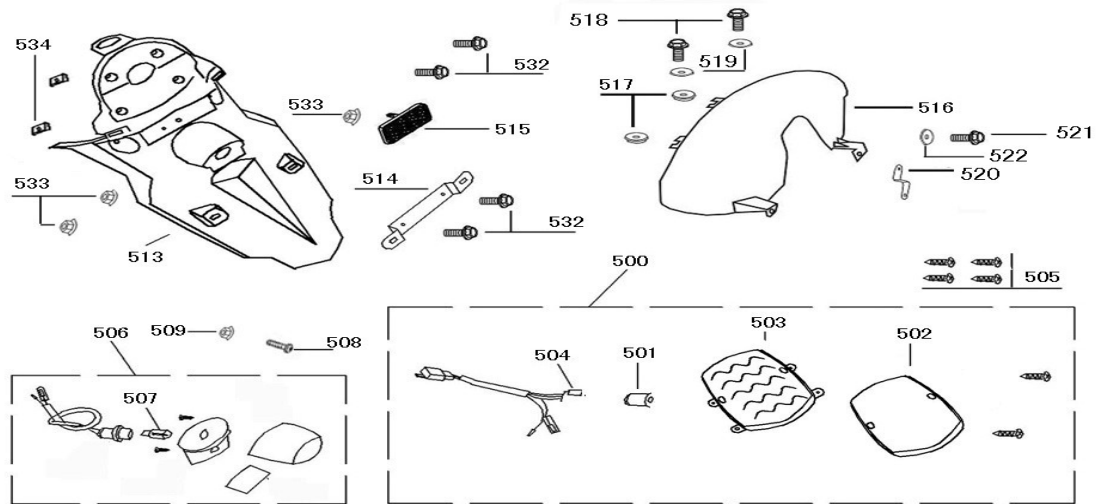


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
500	GST2018F350033	GST2018F350033	Tail Light Assembly
501			
502			
503			
504			
505	93401-48016-03-Y	93401-48016-03-Y	Screw Tapping 4.8x16
506	GST2018F350034	GST2018F350034	License Plate Light
507	34903-F8-9000-Y	34903-F8-9000-Y	BULB 12V 5W
508	93201-05016-03-Y	93201-05016-03-Y	Screw Special 4.8x16
509	95101-05000-03-Y	95101-05000-03-Y	Nut Flange 5mm
513	GST2018F350026	GST2018F350026	Rear Fender
514	GST2018F350038	GST2018F350038	License Plate Bracket
515	GST2018F350037	GST2018F350037	Reflector (Red Rectangle)
516	GST2018F350024	80102-B08-9100-J	Rear Wheel Fender
517	80108-B08-9000-Y	80108-B08-9000-Y	Plate Splash Guard
518	92101-06020-03-Y	92101-06020-03-Y	Bolt Flange 6x20
519	95801-06000-03-Y	95801-06000-03-Y	Washer 6mm
520	80109-B08-9100-Y	80109-B08-9100-J	Rear Fender Bracket
521	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
522	95801-06000-03-Y	95801-06000-03-Y	Washer 6mm
532	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
533	95201-06000-03-Y	95201-06000-03-Y	Nut Flange 6mm
534	90601-F8-9000-Y	90601-F8-9000-Y	Nut Spring 4mm

Scorch (ZN50QT-29) #19

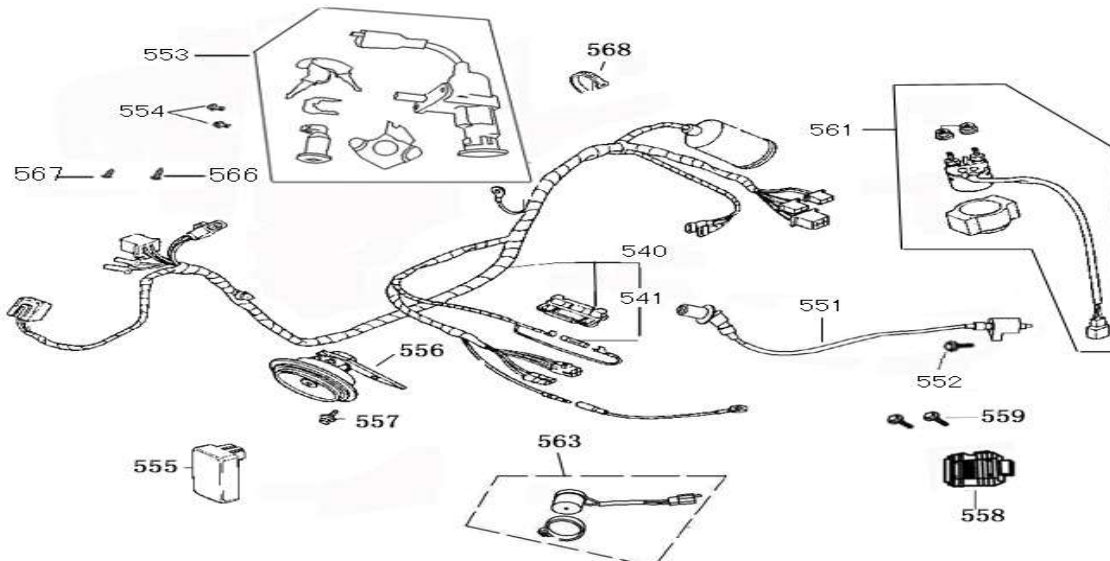


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
540	GST2018F350071	32100-F35-E100-J	Wiring Harness
not shown	38205-XF-9000-Y	38205-XF-9000-Y	Fuse Case
541	99200-11500-Y	99200-11500-Y	Fuse
551	GST2018F350079	GST2018F350079	Ignition Coil
552	92401-06025-03-Y	92401-06025-03-Y	Bolt Flange 6x25
553	GST2018F350068	35010-F22-9000-A/B-J	Ignition Set
554	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
555	GST2018F350077	GST2018F350077	CDI
556	GST2018F350074	GST2018F350074	Horn
557	92101-06012-03-Y	92101-06012-03-Y	Bolt Flange 6x12
558	GST2018F350075	31600-DGW-E000-J	Voltage Regulator
559	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
561	GST2018F350076	GST2018F350076	Starter Solenoid
not shown	95101-06000-08-Y	95101-06000-08-Y	Nut Flange 6mm
563	KM2018Pollo0075	KM2018Pollo0075	Turn Signal Relay
566	93401-38013-03-Y	93401-38013-03-Y	Screw Tapping 3.8x13
567	93401-38005-03-J	93401-38005-03-J	Screw Tapping 3.8x5
568	90006-F8-9000-Y	90006-F8-9000-Y	Wiring Strap

Scorch (ZN50QT-29) #20

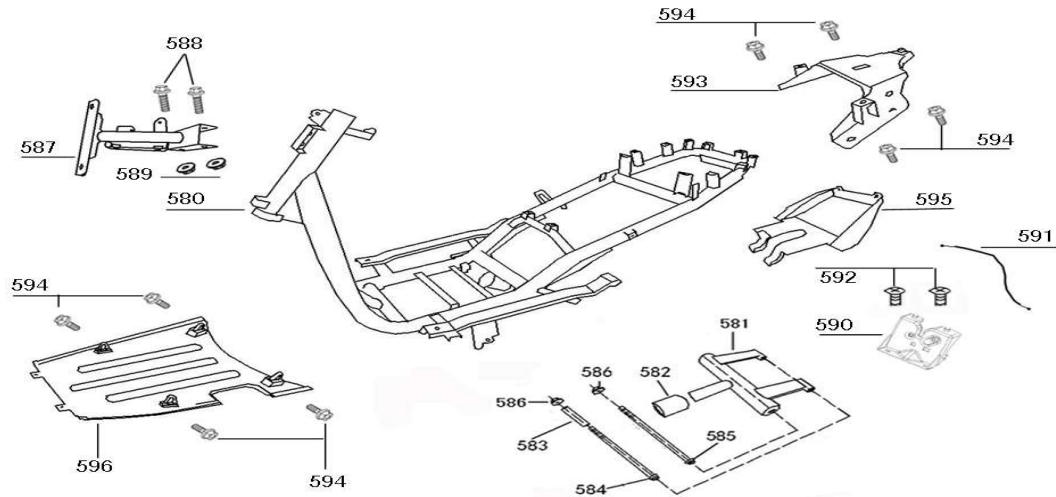


Diagram Number	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
580	N/A	N/A	
581	GST2018F350044	GST2018F350044	Engine Hangar
582	GST2018F350108	GST2018F350108	Bushing Swing Lock
583	50354-DGW-9000-Y	50354-DGW-9000-Y	Bushing
584	50356-DGW-9100-Y	50356-DGW-9100-Y	Axle Hanger A
585	50355-DGW-9000-Y	50355-DGW-9000-Y	Axle Hanger B
586	95401-10000-03-Y	95401-10000-03-Y	Nut 10mm
587	38101-F35-9000-Y	38101-F35-9000-Y	Horn Bracket
588	92101-06055-03-Y	92101-06055-03-Y	Bolt Flange 6x55
589	95201-06000-03-Y	95201-06000-03-Y	Nut Flange 6mm
590	77235-F35-9000-Y	77235-F35-9000-Y	Seat Latch
591	77240-F22-9000-Y	77240-F22-9000-Y	Seat Lock Cable
592	92701-06016-03-Y	92701-06016-03-Y	Screw Special 6x16
593	GST2018F350048	GST2018F350048	Fuel Guide Plate
594	92101-06016-03-Y	92101-06016-03-Y	Bolt Flange 6x16
595	17552-F22-9000-Y	17552-F22-9000-Y	Fuel Tank Protector
596	GST2018F350013	GST2018F350013	Cover Under

Bintelli Scooters
2137 Savannah Highway
Charleston, SC 29414
(843) 531-6833

www.BintelliScooters.com
www.BintelliParts.com

