BINTELLI™

2026

TREMOR 550

PARTS MANUAL




(866)-542-8677

support@bintelli.com

TABLE OF CONTENTS


Section	Pages
Front Suspension System	1–2
Rear Suspension System	3–4
Front Drive System (Two Door)	5–6
Front Differential Assy System	7–8
Rear Drive System	9
Rear Differential Assy System	10–11
Steering System (With EPS)	12–13
Fuel System	14
Cooling System (Two Door)	15
Air Filter and CVT Inlet/Outlet System	16
Shift and Throttle Control System	17–18
Roll Bar (Two Door)	19
Roof (Two Door)	20
Exhaust System	21
Seats (Two Door)	22
Frame	23–24
Brake System	25–26
Front Panel	27–28
Dashboard Components	29–30
Rear Mudguard and Footboard (Two Door)	31–32
Front Winch and Bumper	33
Cargo Box	34–35
Electrical Components	36–37
Engine	38
Front Door Driver's Side LH (Two Door)	39–40
Front Door Passenger's Side RH (Two Door)	41–42
Front and Rear Window (Optional)	43–44
Cylinder Head Component	45
Cylinder Block Component	46
Air Distribution Mechanism	47
Right Crankcase Cover	48
Electric Starting Mechanism	49
Magneto Motor Assembly	50
Left Crankcase Cover	51
Right Crankcase Cover	52
Left Crankcase A	53
Left Crankcase B	54–55
Crankshaft / Piston / Balance Shaft	56
Variable Speed Mechanism	57

FRONT SUSPENSION SYSTEM

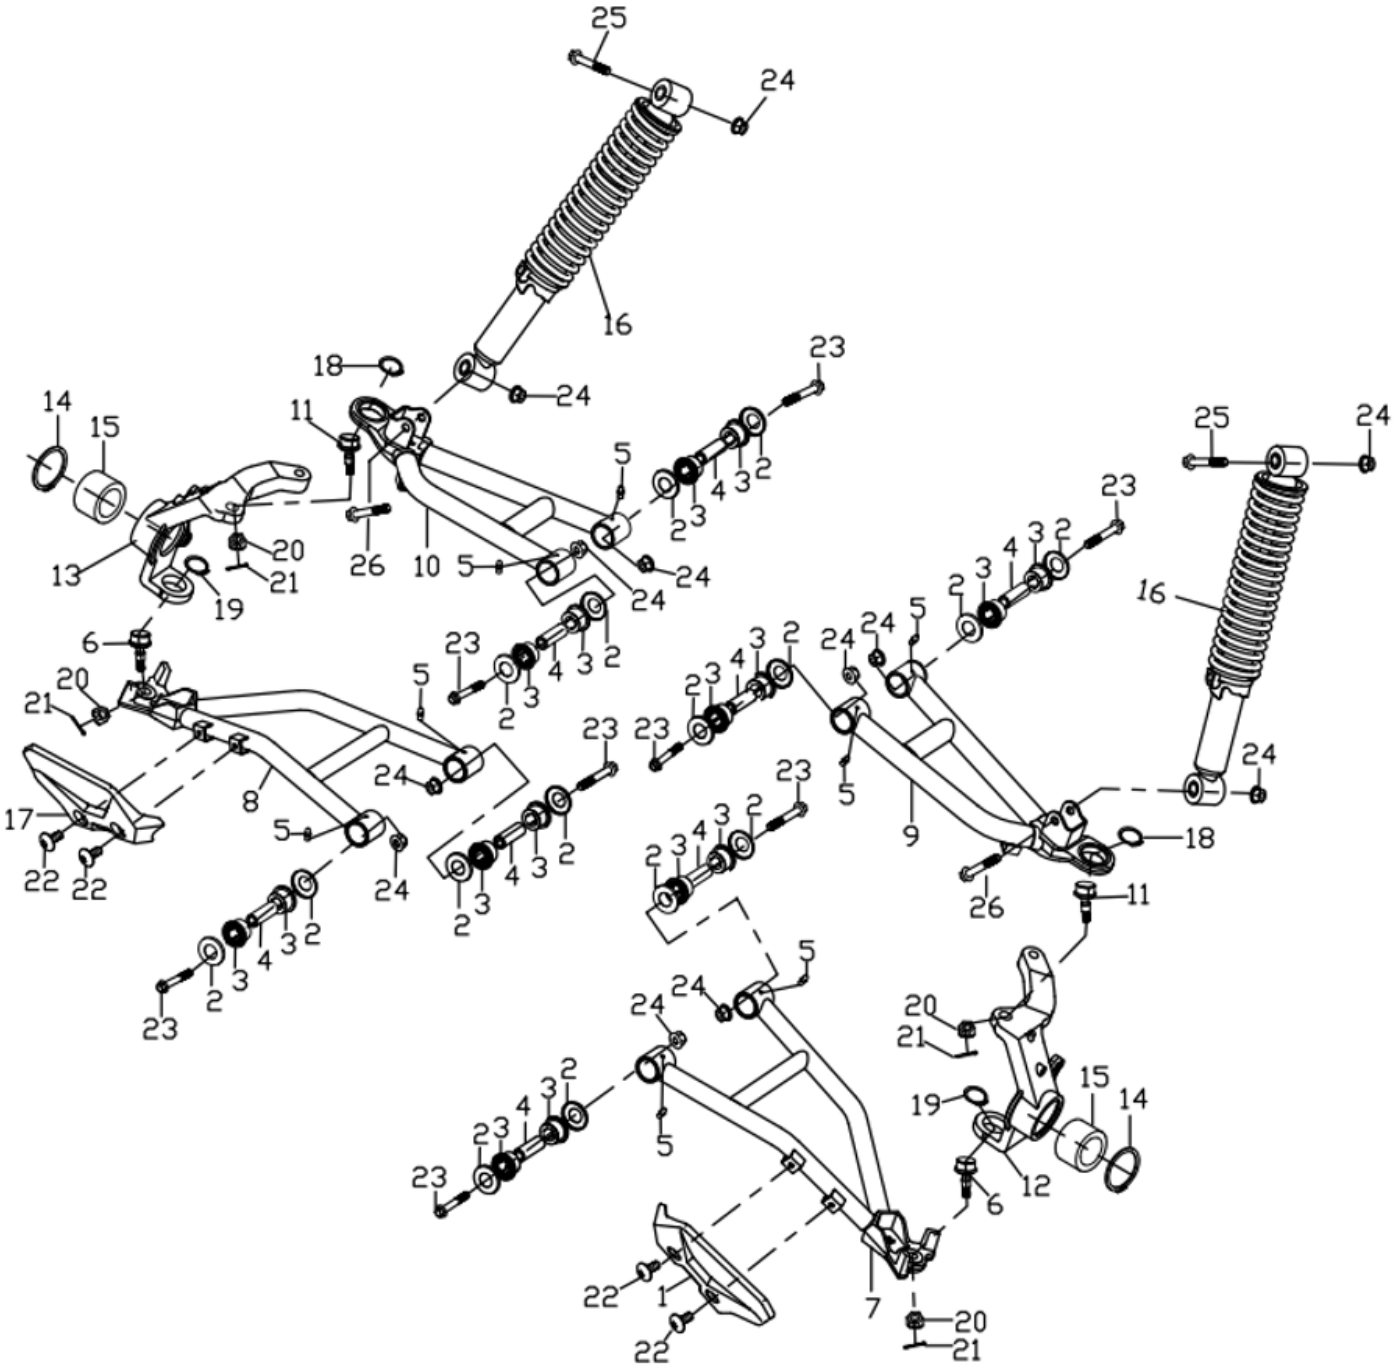


No.	Part Number	Description	Pieces
1	16801080070	Front Arm Guard,LH	1
2	13601070030	A-Arm Nylon Sleeve Cover	16
3	10401070020	A-Arm Nylon Sleeve	16
4	13601070011	A-Arm Inner Sleeve	8
5	10901070090	Grease Zerk,White	8
6	10401180000	Ball Joint φ32	2
7	19301080020	LH Lower Front Suspension Arm	1
8	19301090020	RH Lower Front Suspension Arm	1
9	19301060000	LH Upper Front Suspension Arm	1
10	19301070000	RH Upper Front Suspension Arm	1
11	10401190000	Ball Joint φ34	2
12	19305210000	Steering Knuckle Assy,LH	1
13	19305220000	Steering Knuckle Assy,RH	1

FRONT SUSPENSION SYSTEM *CONTINUED*

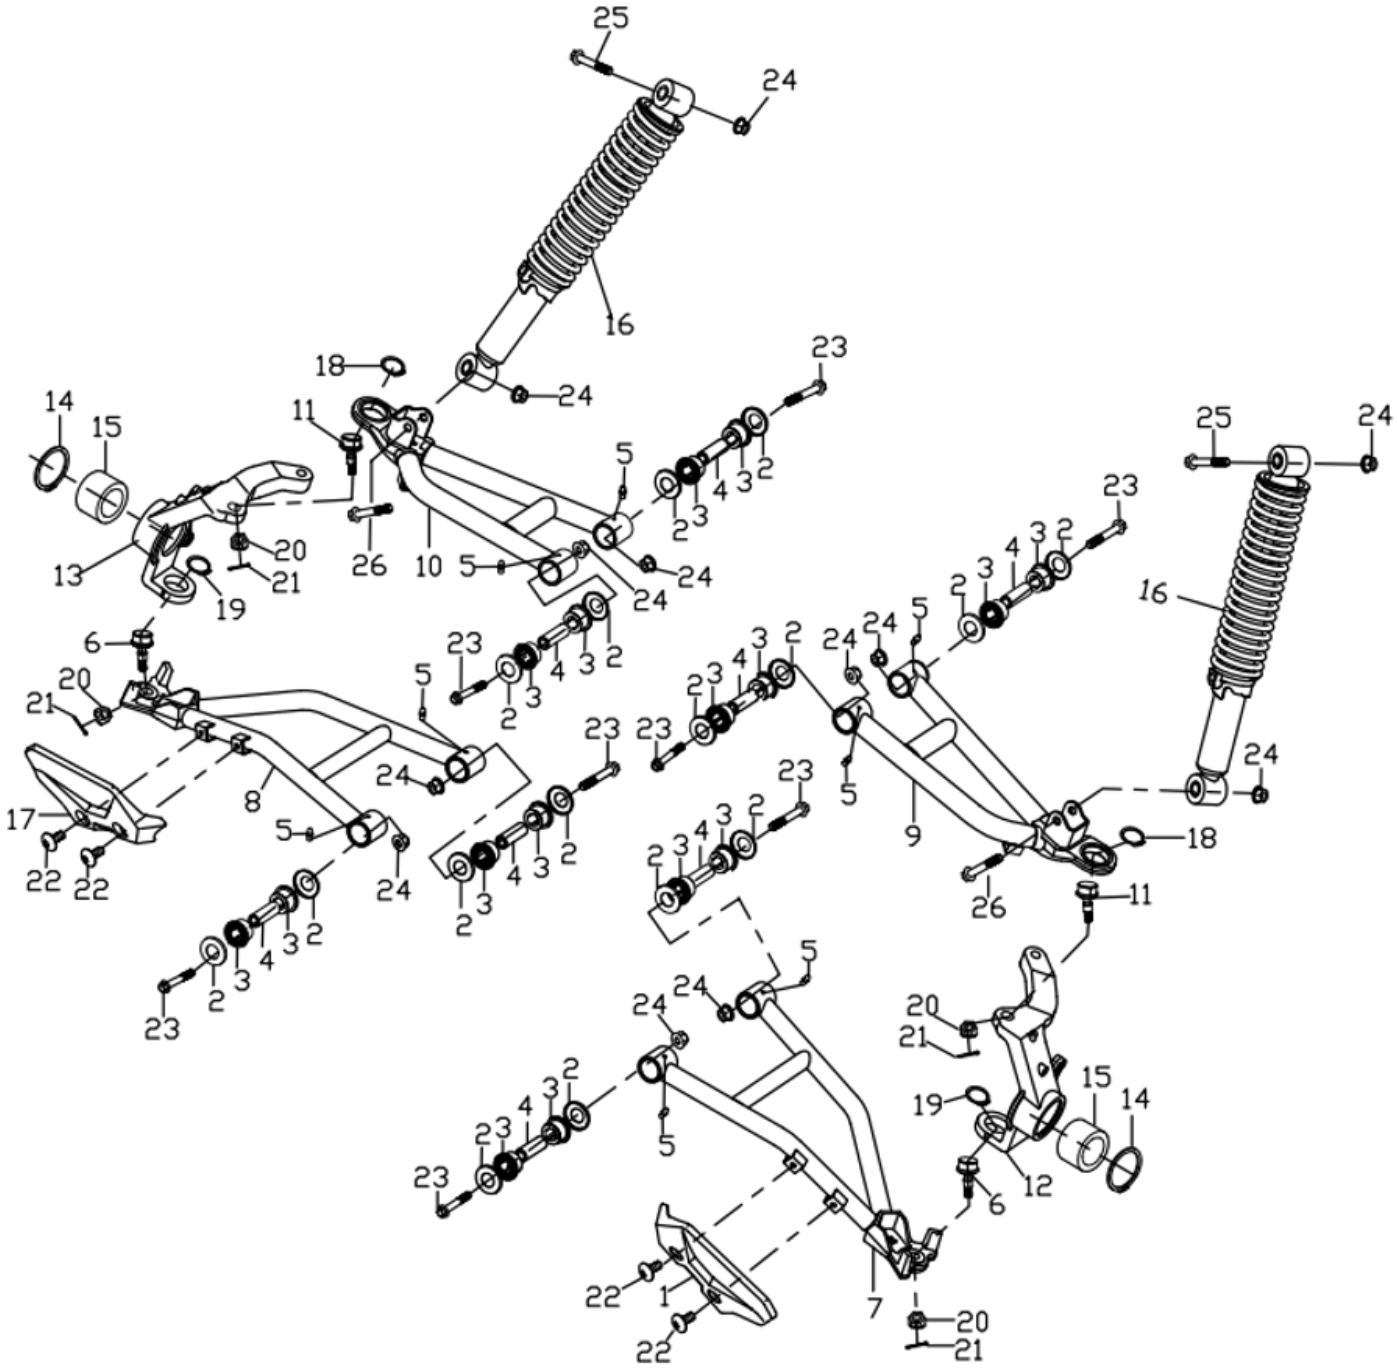


No.	Part Number	Description	Pieces
14	07011550004	Retaining Rings For Bores φ55	2
15	09560305532	Bearing DAC 3005532	2
16	19301SF0030	Basic Front Shock Absorber	2
17	16801090070	RH Front Arm Guard	1
18	07031340004	Snap Ring φ34	2
19	07031320004	Snap Ring φ32	2
20	04724120026	Castle Nut M12X1.25	4
21	05011250255	Cotter Pin φ2.5X25	4
22	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	4
23	01256100756	Hex Flange Bolt M10×75	8
24	04622100026	Hexagon Flange Locking Nut M10X1.25	4
25	01256100656	Hex Flange Bolt M10X65X1.25	2
26	01256100556	Hex Flange Bolt M10X55X1.25	2

REAR SUSPENSION SYSTEM

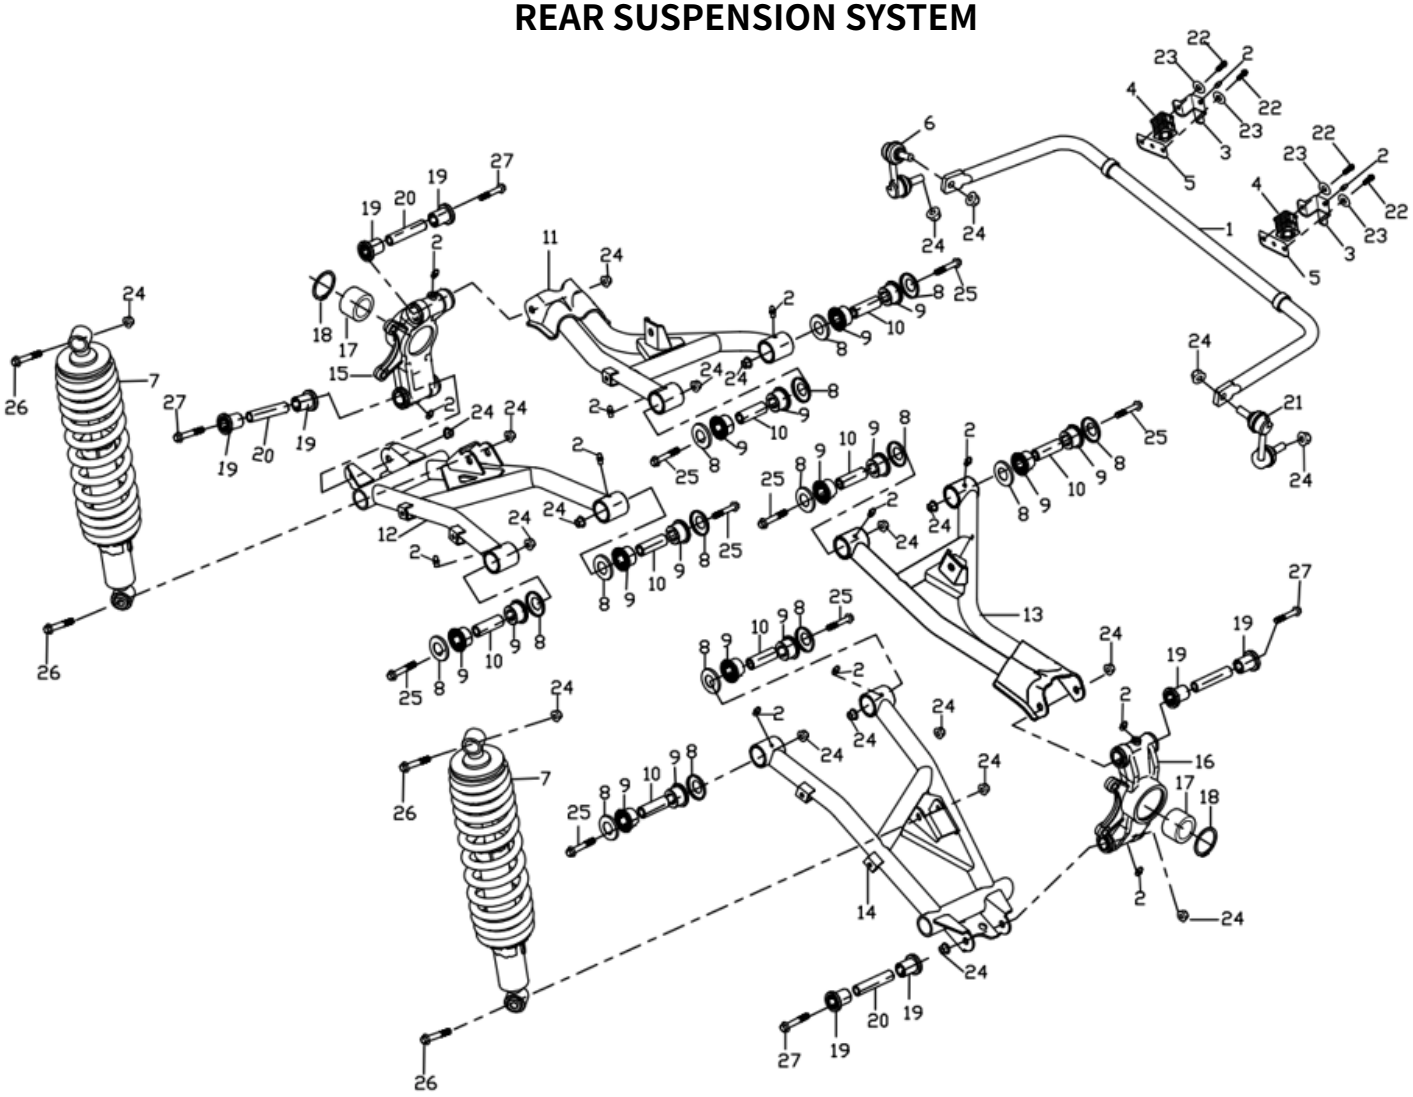


No.	Part Number	Description	Pieces
1	19301210060	Rear stabilizer bar	1
2	10901070090	Grease Zerk,White	14
3	16801210030	Stabilizer Bar Clamp	2
4	17001210040	Sway Bar Cusion	2
5	16801210080	Stabilizer Bar Support Plate	2
6	10701210050	Sway Bar Pull Rod,RH	1
7	19301SR0031	Rear shock absorber	2
8	13601070030	A-Arm Nylon Sleeve Cover	16
9	10401070020	A-Arm Nylon Sleeve	16
10	13601070011	A-Arm Inner Sleeve	8
11	19301110000	RH Upper Rear Suspension Arm	1
12	19301130020	RH Lower Rear Suspension Arm	1
13	19301100000	LH Upper Rear Suspension Arm	1
14	19301120020	LH Lower Rear Suspension Arm	1

REAR SUSPENSION SYSTEM *CONTINUED*

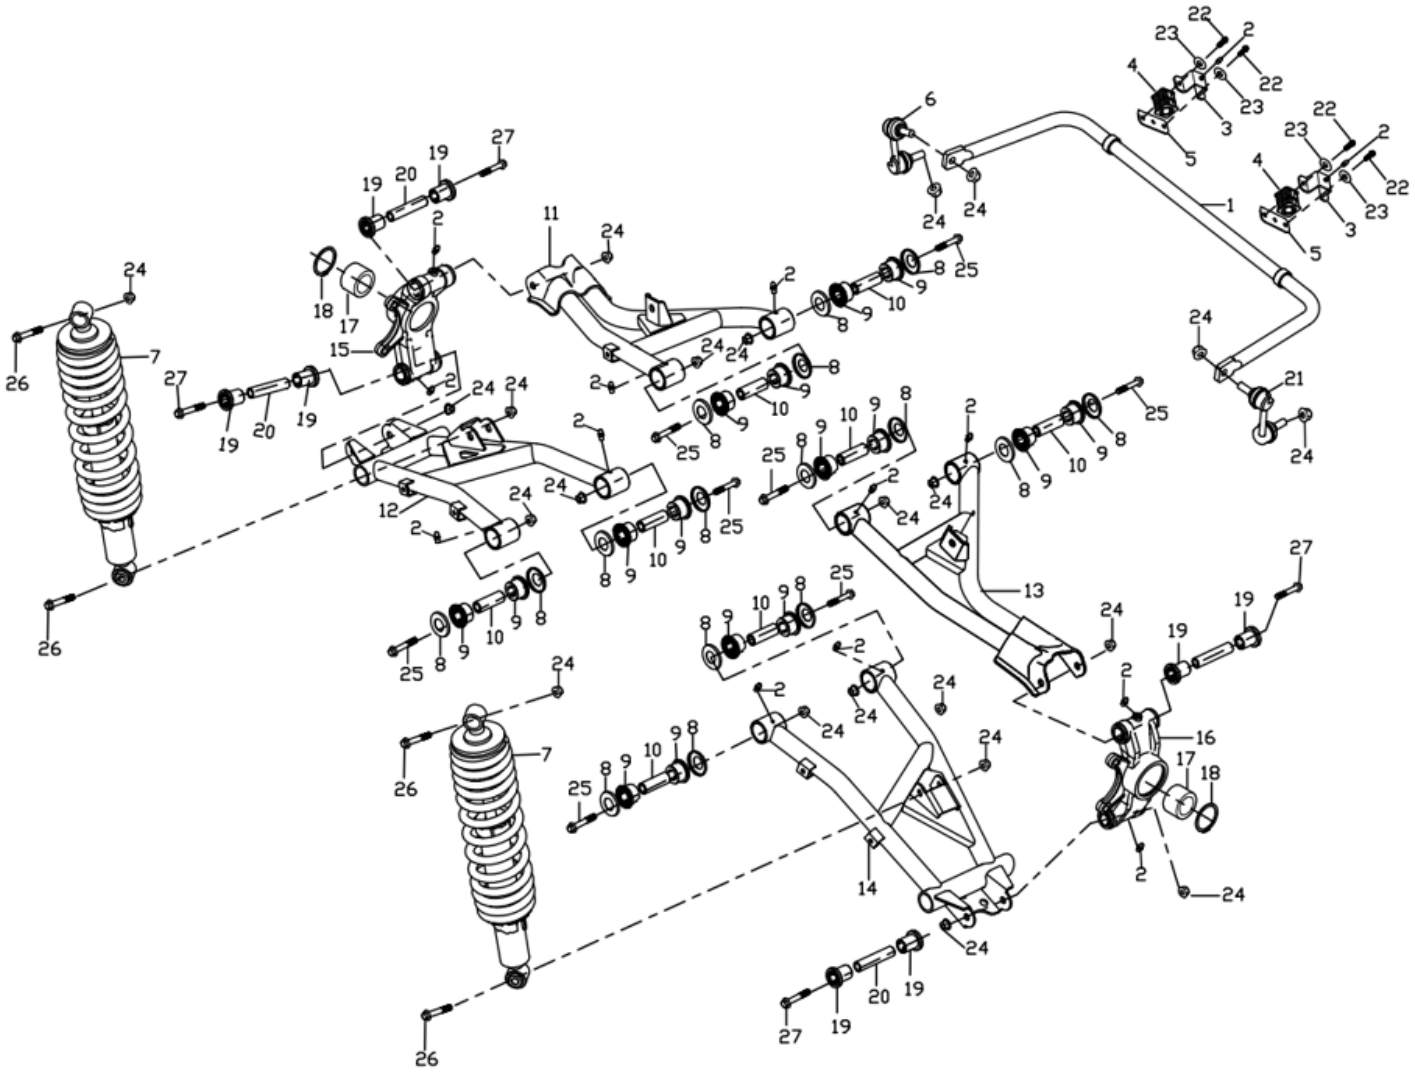


No.	Part Number	Description	Pieces
15	19301200060	Knuckle Assy,RH	1
16	19301200050	Knuckle Assy,Driver Side	1
17	09560305532	Bearing DAC 3005532	2
18	07011550004	Retaining Rings For Bores φ55	2
19	19301200030	Support section nylon sleeve	8
20	19301200040	Support section liner sleeve	4
21	10701210010	Sway Bar Pull Rod,LH	1
22	01224080206	Hex Flange Bolt M8×20	4
23	06619081405	Spring Washer φ8	4
24	04522100026	Hex Flange Locking Nut M10x1.25	4
25	01256100756	Hex Flange Bolt M10×75	8
26	01256100556	Hex Flange Bolt M10X55X1.25	2
27	01256100956	Hex Flange Bolt M10X95X1.25	4

FRONT DRIVE SYSTEM (TWO DOOR)

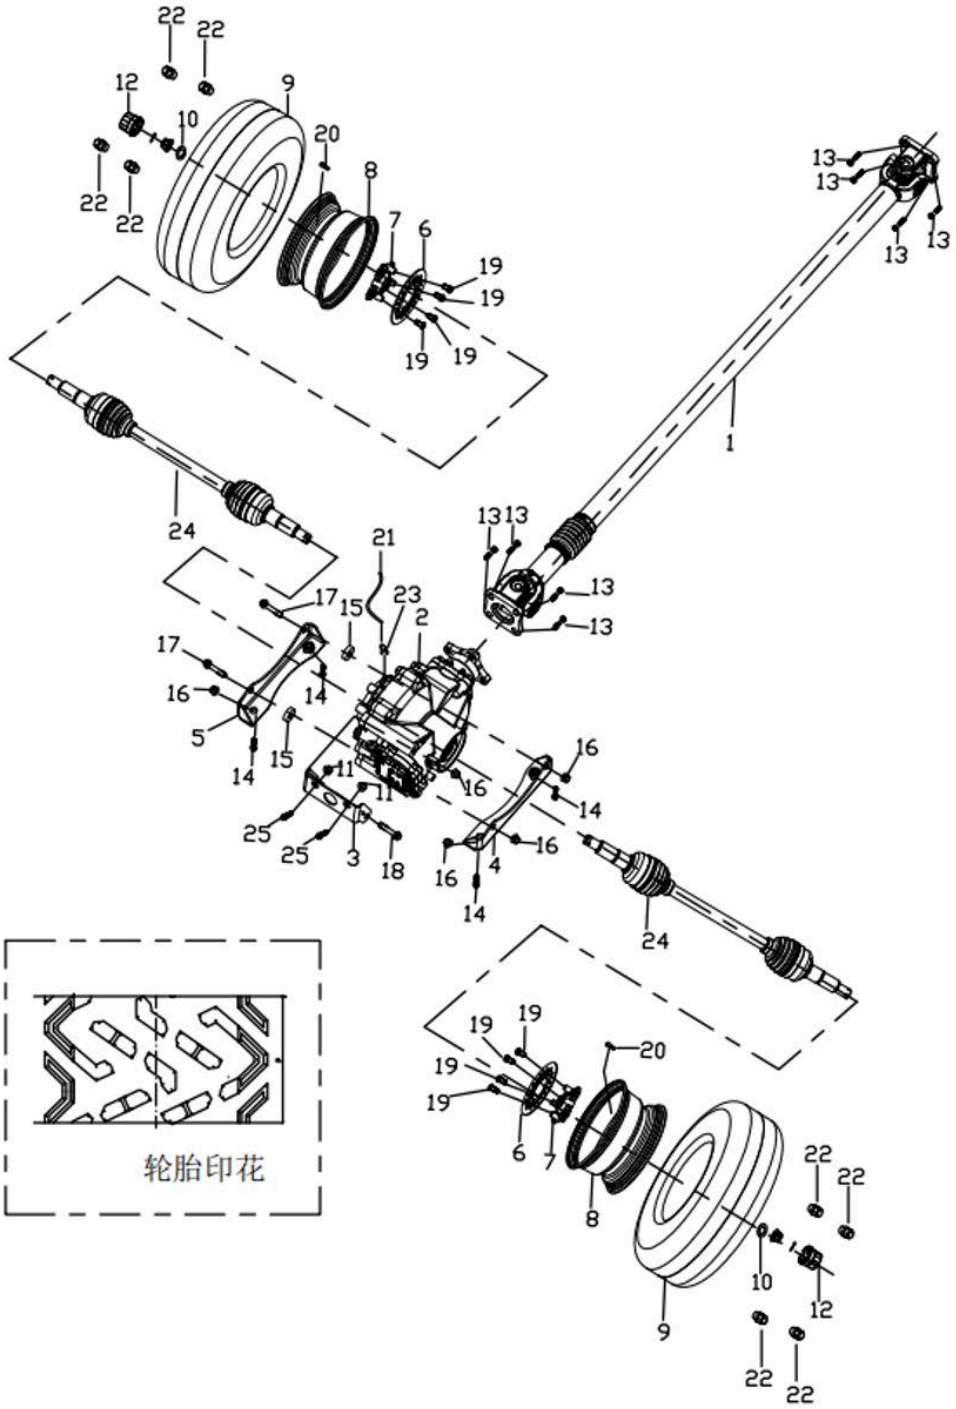


No.	Part Number	Description	Pieces
1	19303110000	Front Driveshaft	1
2	19303100000	Front Differential Assy	1
3	19308250100	Front Axle Higher Mounting Plate	1
4	19308250110	Front Axle Lower Mounting Plate(L)	1
5	19308250120	Front Axle Lower Mounting Plate	1
6	19306010040	Front Brake Disc	2
7	18801030000	Front Wheel-Hub	2
8	16805250080	Front Rim 14X7（Black）	2
9	16805030300	Rear Tire(Zhongce)	2
10	19301230010	Dish Washer (φ20.5×φ40×3)	2
11	04612080026	Hex Flange Locking Nut M8	2
12	18805040410	Wheel Dust-Proof Cover	2

FRONT DRIVE SYSTEM (TWO DOOR) *CONTINUED*

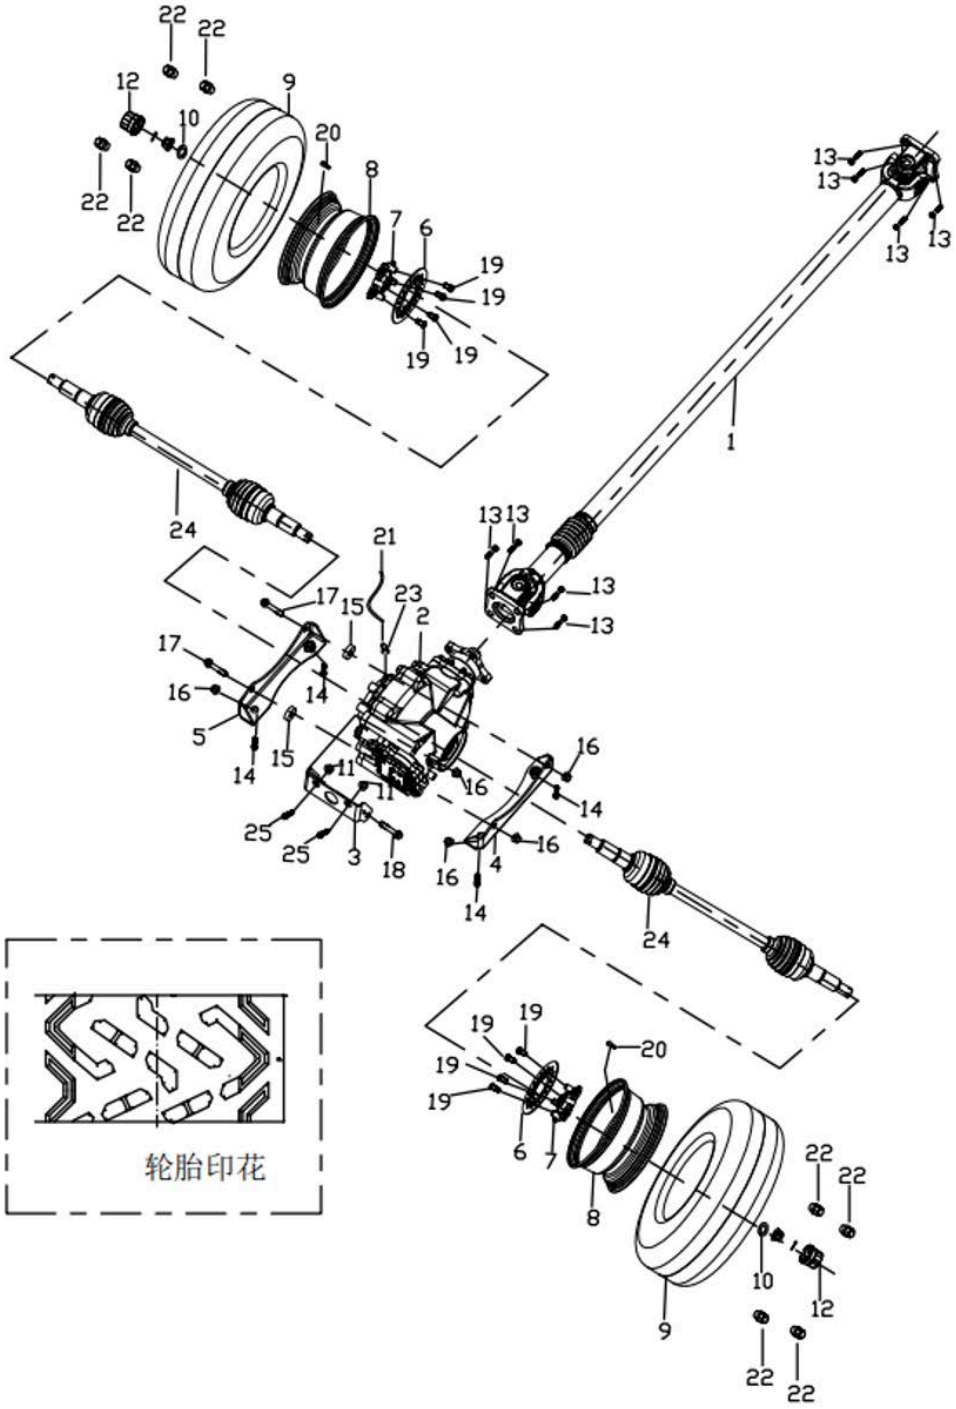

No.	Part Number	Description	Pieces
13	03344100255	Hexagon socket head cap screw M10×25×1.25	8
14	01256100206	Hex Flange Bolt M10×20×1.25	4
15	19303100930	Front Axle Bushing	1
16	04622100026	Hexagon Flange Locking Nut M10X1.25	4
17	01256101356	Hex Flange Bolt M10×135×1.25	2
18	01256101256	Hex Flange Bolt M10X125X1.25	1
19	01824080205	Allen T Type Bolt M8X20	8
20	10405230030	Air Valve	2
21	16803100920	Front Axle Vent Pipe ,L=800mm	1
22	4322100024	Acorn Nut M10×1.25	8
23	11904070030	Spring Hose Clip φ8	1
24	19301230000	Front C.V. Shaft	1
25	01224080256	Hex Flange Bolt M8X25X1.25	2

FRONT DIFFERENTIAL ASSY SYSTEM

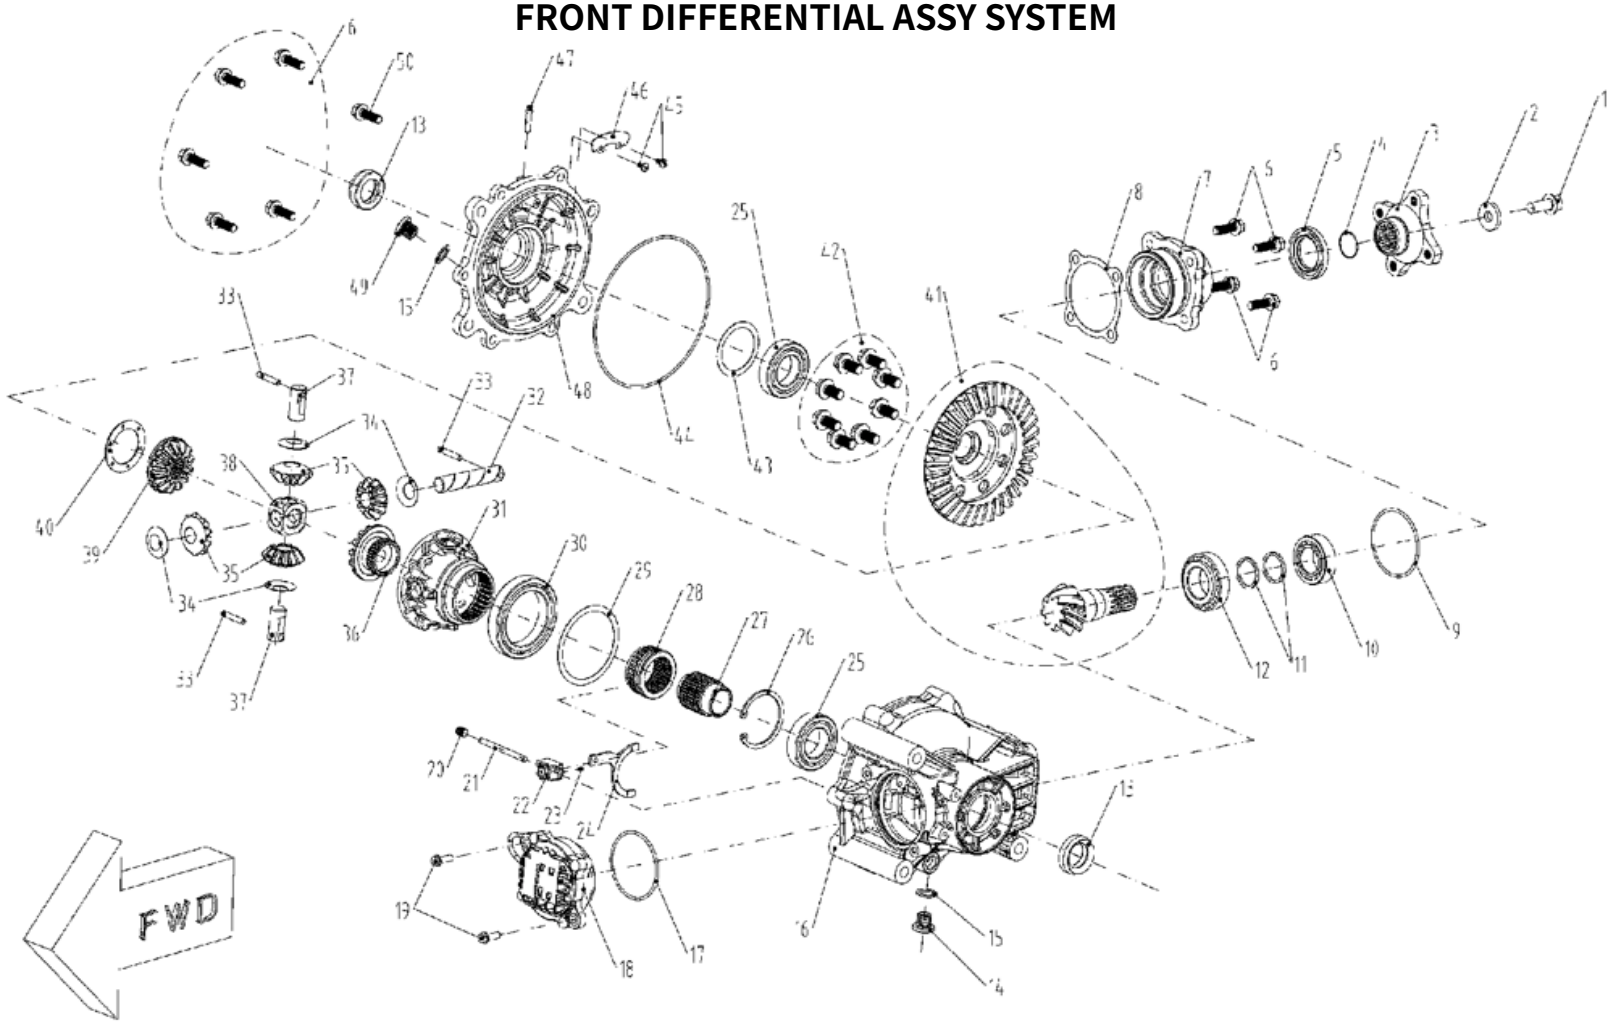


No.	Part Number	Description	Pieces
1	0GR0-062203	Bolt M10×1.25×20	
2	0GR0-062204	Washer 10×27.5×4	
3	Q850-331002	Connecting Plate	
4	0800-062205	O-Ring Seal 25×2	
5	0800-062204	Oil Seal 35×50×7	
6	0110-060011-0010	Bolt M8×28	
7	Q830-311002-00001	Bearing Housing	
8	Q830-310023-00100	Installation Distance Adjustment Washer	
	Q830-310023-00200	Installation Distance Adjustment Washer	
9	Q830-310006-10000	O-Ring Seal 55×2.5	
10	30409-02500	Tapered Roller Bearing 33005	
11	Q830-311003-00001-00100	Adjustment Washer 32×25.4	
	Q830-311003-00001-00200	Adjustment Washer 32×25.4	
	Q830-311003-00001-00300	Adjustment Washer 32×25.4	
	Q830-311003-00001-00400	Adjustment Washer 32×25.4	
	Q830-311003-00001-00500	Adjustment Washer 32×25.4	
	Q830-311003-00001-00600	Adjustment Washer 32×25.4	
	Q830-311003-00001-00700	Adjustment Washer 32×25.4	
	Q830-311003-00001-00800	Adjustment Washer 32×25.4	
	Q830-311003-00001-00900	Adjustment Washer 32×25.4	
	Q830-311003-00001-01000	Adjustment Washer 32×25.4	
	Q830-311003-00001-01100	Adjustment Washer 32×25.4	
	Q830-311003-00001-01200	Adjustment Washer 32×25.4	
	Q830-311003-00001-01300	Adjustment Washer 32×25.4	
	Q830-311003-00001-01400	Adjustment Washer 32×25.4	

FRONT DIFFERENTIAL ASSY SYSTEM *CONTINUED*


No.	Part Number	Description	Pieces
12	30409-03000	Tapered Roller Bearing 32006	
13	0180-311001	Oil Seal 24×38×8	
14	0180-332100	Magnetic Drain Bolt M14×1.25×12	
15	0180-011006	Shim 14	
16	Q890-310001-00001	Front Axle Housing	
17	Q830-310012-10000	O-Ring Seal Retainer 67.5×2	
18	Q890-314000-10000	Front Axle Motor Assembly	
19	0010-023008-0010	Bolt M6×18	
20	30130-080010810	Screw M8×10	
21	Q830-310003	Pin Shaft	
22	Q890-310010	Shift Block Assembly	
23	30913-0300550	Elastic Dowel Pin	
24	Q890-310003	Shift Fork	
25	30400-03001	Rolling Bearing 6006	
26	30800-05505	Elastic Circlip for Hole 55	
27	Q830-310014	Spline Bushing	
28	Q830-310013	Spline Shift Sleeve	
29	Q830-310015-00100	Adjustment Washer 79.5×68	
29	Q830-310015-00200	Adjustment Washer 79.5×68	
29	Q830-310015-00300	Adjustment Washer 79.5×68	
29	Q830-310015-00400	Adjustment Washer 79.5×68	
29	Q830-310015-00500	Adjustment Washer 79.5×68	
29	Q830-310015-00600	Adjustment Washer 79.5×68	
30	30400-05500	Rolling Bearing 61911	
31	Q890-313002	Differential Housing	
32	Q820-333006	Planetary Gear Shaft	
33	30906-0503000	Cylindrical Pin	
34	0181-313011	Wear Reduction Pad	
35	0180-313003-00004	Differential Intermediate Gear	
36	Q830-313004	Half Shaft Gear	
37	Q820-333005	Short Planetary Gear Shaft	
38	Q820-333008	Cross Sleeve	
39	0180-313006-00001	Differential Driven Gear	
40	Q800-313005-00100	Gear Gasket 33.5×51.5	
40	Q800-313005-00200	Gear Gasket 33.5×51.5	
41	Q890-3100A0	Front Axle Bevel Gear Assembly	
42	0181-313100-0010	Bolt M10×1.25×22	
43	Q830-310009-00100	Adjustment Washer 54.5×43	
43	Q830-310009-00200	Adjustment Washer 54.5×43	
43	Q830-310009-00300	Adjustment Washer 54.5×43	
43	Q830-310009-00400	Adjustment Washer 54.5×43	
43	Q830-310009-00500	Adjustment Washer 54.5×43	
43	Q830-310009-00600	Adjustment Washer 54.5×43	
44	0180-310005	O-Ring Seal 141×2.4	
45	30105-040008410	Screw M4×8	
46	Q820-330007-10000	Oil Baffle Plate	
47	0180-311004-0020	Breather Pipe Connector	
48	Q890-310002	Front Axle Cover	
49	0180-021008-0010	Bolt M14×1.25×12	
50	0180-330004-0010	Bolt M10×1.25×25	

REAR DRIVE SYSTEM

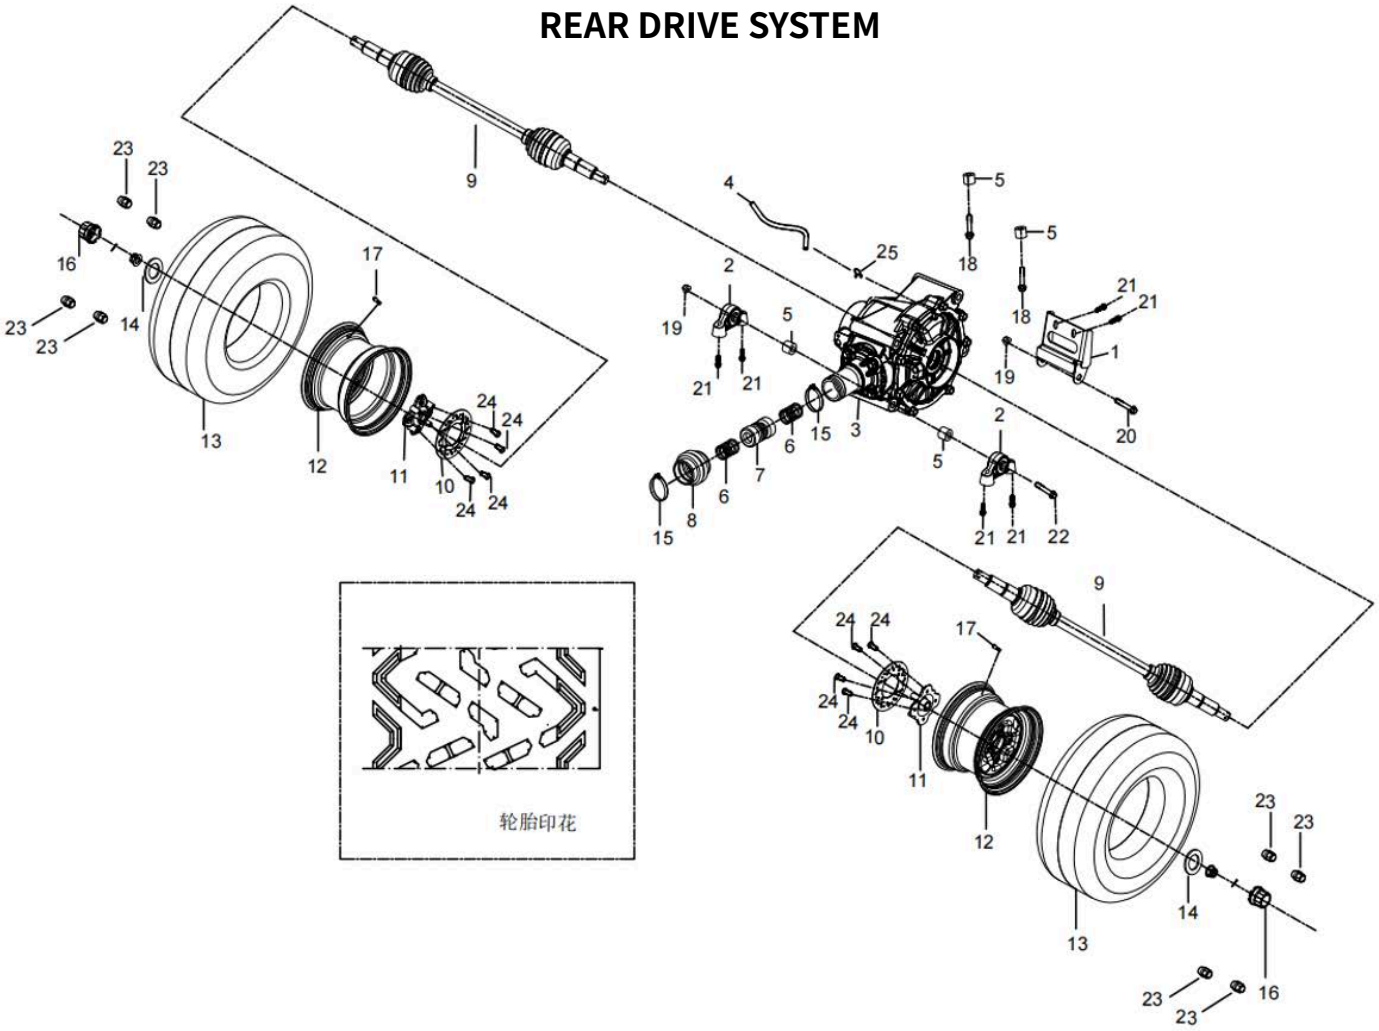


No.	Part Number	Description	Pieces
1	19308250060	Rear Axle Hanger	1
2	19308250070	Rear Axle Mount (Inner Diameter 10)	4
3	19303120100	Rear Reducer Assembly	1
4	16803100920	Front Axle Vent Pipe ,L=800mm	1
5	19303120820	Rear Axle Mounting Bushing (Diameter 20 Height 16MM)	2
6	19303121070	Compression Spring	2
7	19303130000	Rear Drive Shaft	1
8	19310320000	Drive Shaft Boot	1
9	19301240000	Rear Half Shaft	2
10	19306010050	Rear Brake Disc	2
11	18801030000	Front Wheel-Hub	2
12	16805260080	Rear Rim 14X8（Black）	2
13	16805040300	Front Tire(Zhongce)	2
14	19301230010	Dish Washer (φ20.5×φ40×3)	2
15	19301240090	Single-Ear Band Clamp	2
16	18805040410	Wheel Dust-Proof Cover	2
17	10405230030	Air Valve	2
18	01256100356	Hex Flange Bolt M10X35	2
19	04622100026	Hexagon Flange Locking Nut M10X1.25	2
20	01256101206	Hex Flange Bolt M10×120×1.25	1
21	01224080206	Hex Flange Bolt M8×20	6
22	01256101956	Hex Flange Bolt M10x195x1.25	1
23	4322100024	Acorn Nut M10×1.25	8
24	01824080205	Allen T Type Bolt M8X20	8
25	11904070030	Spring Hose Clip φ8	1

REAR DIFFERENTIAL ASSY SYSTEM

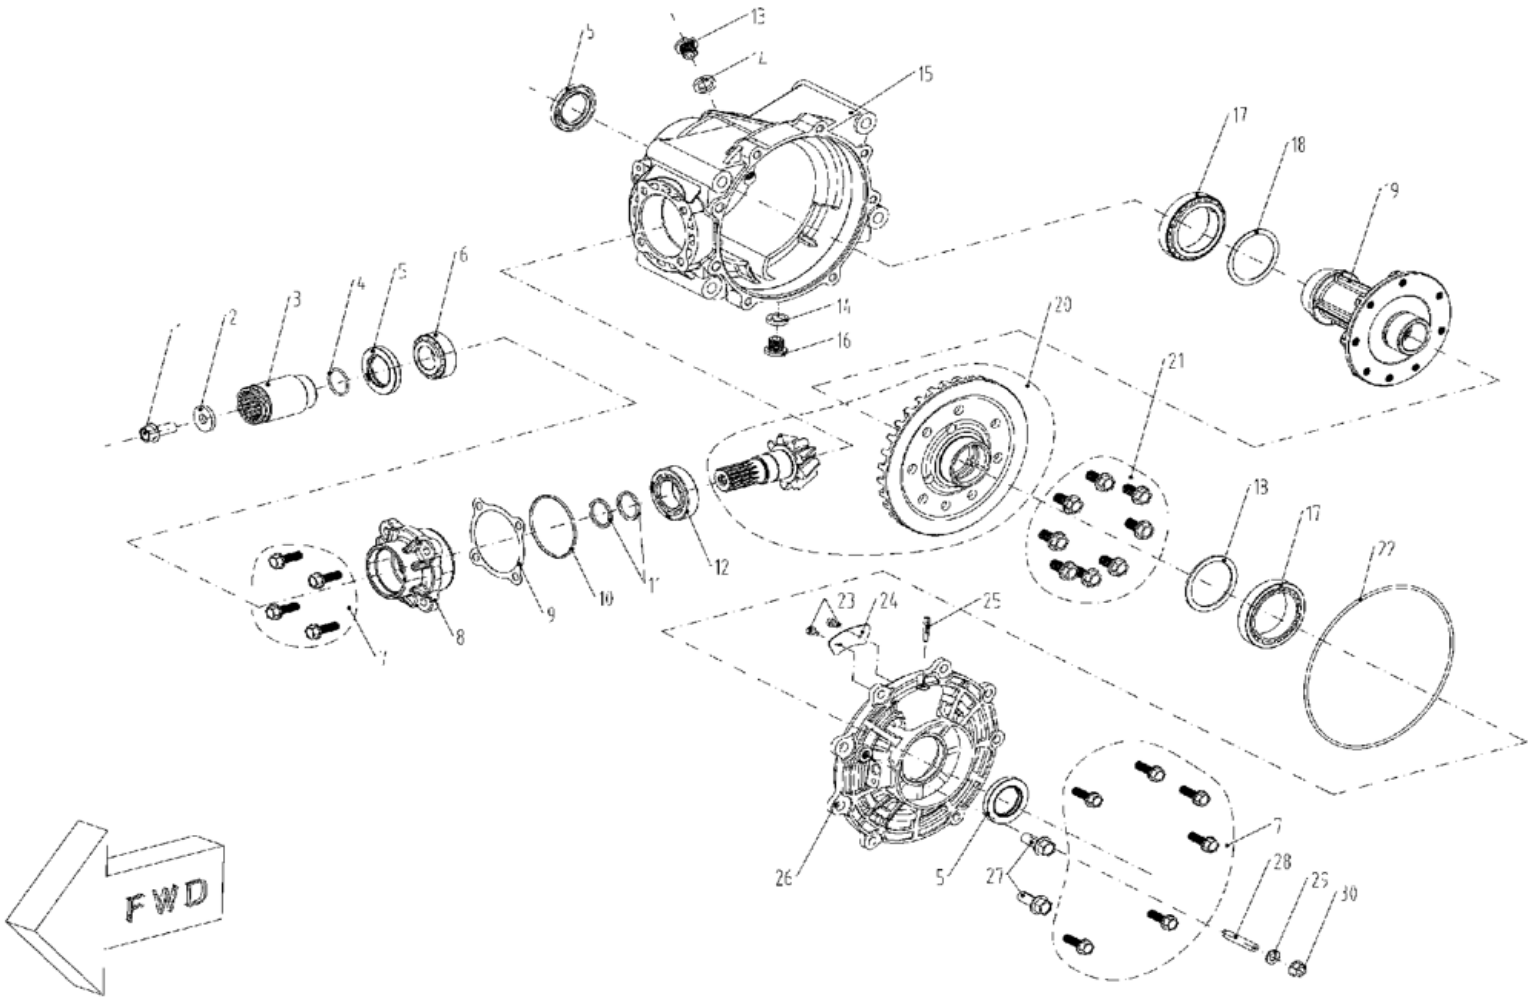


No.	Part Number	Description	Pieces
1	Q860-331002	Bolt M12×1.25×25	
2	0180-331008-00001	Washer 13×27.5×4	
3	9CR6-300201-10000	Drive Sleeve	
4	0800-062205	O-Ring Seal 25×2	
5	0800-062204	Oil Seal 35×50×7	
6	30409-02500	Tapered Roller Bearing 33005	
7	0110-060011-0010	Bolt M8×28	
8	Q830-311002-00001	Bearing Housing	
9	Q830-310023-00100	Installation Distance Adjustment Washer	
	Q830-310023-00200	Installation Distance Adjustment Washer	
10	Q830-310006-10000	O-Ring Seal 55×2.5	
11	Q830-311003-00001-00100	Adjustment Washer 32×25.4	
	Q830-311003-00001-00200	Adjustment Washer 32×25.4	
	Q830-311003-00001-00300	Adjustment Washer 32×25.4	
	Q830-311003-00001-00400	Adjustment Washer 32×25.4	
	Q830-311003-00001-00500	Adjustment Washer 32×25.4	
	Q830-311003-00001-00600	Adjustment Washer 32×25.4	
	Q830-311003-00001-00700	Adjustment Washer 32×25.4	
	Q830-311003-00001-00800	Adjustment Washer 32×25.4	
	Q830-311003-00001-00900	Adjustment Washer 32×25.4	
	Q830-311003-00001-01000	Adjustment Washer 32×25.4	
	Q830-311003-00001-01100	Adjustment Washer 32×25.4	
	Q830-311003-00001-01200	Adjustment Washer 32×25.4	
	Q830-311003-00001-01300	Adjustment Washer 32×25.4	
	Q830-311003-00001-01400	Adjustment Washer 32×25.4	
12	30409-03000	Tapered Roller Bearing 32006	

REAR DIFFERENTIAL ASSY SYSTEM *CONTINUED*

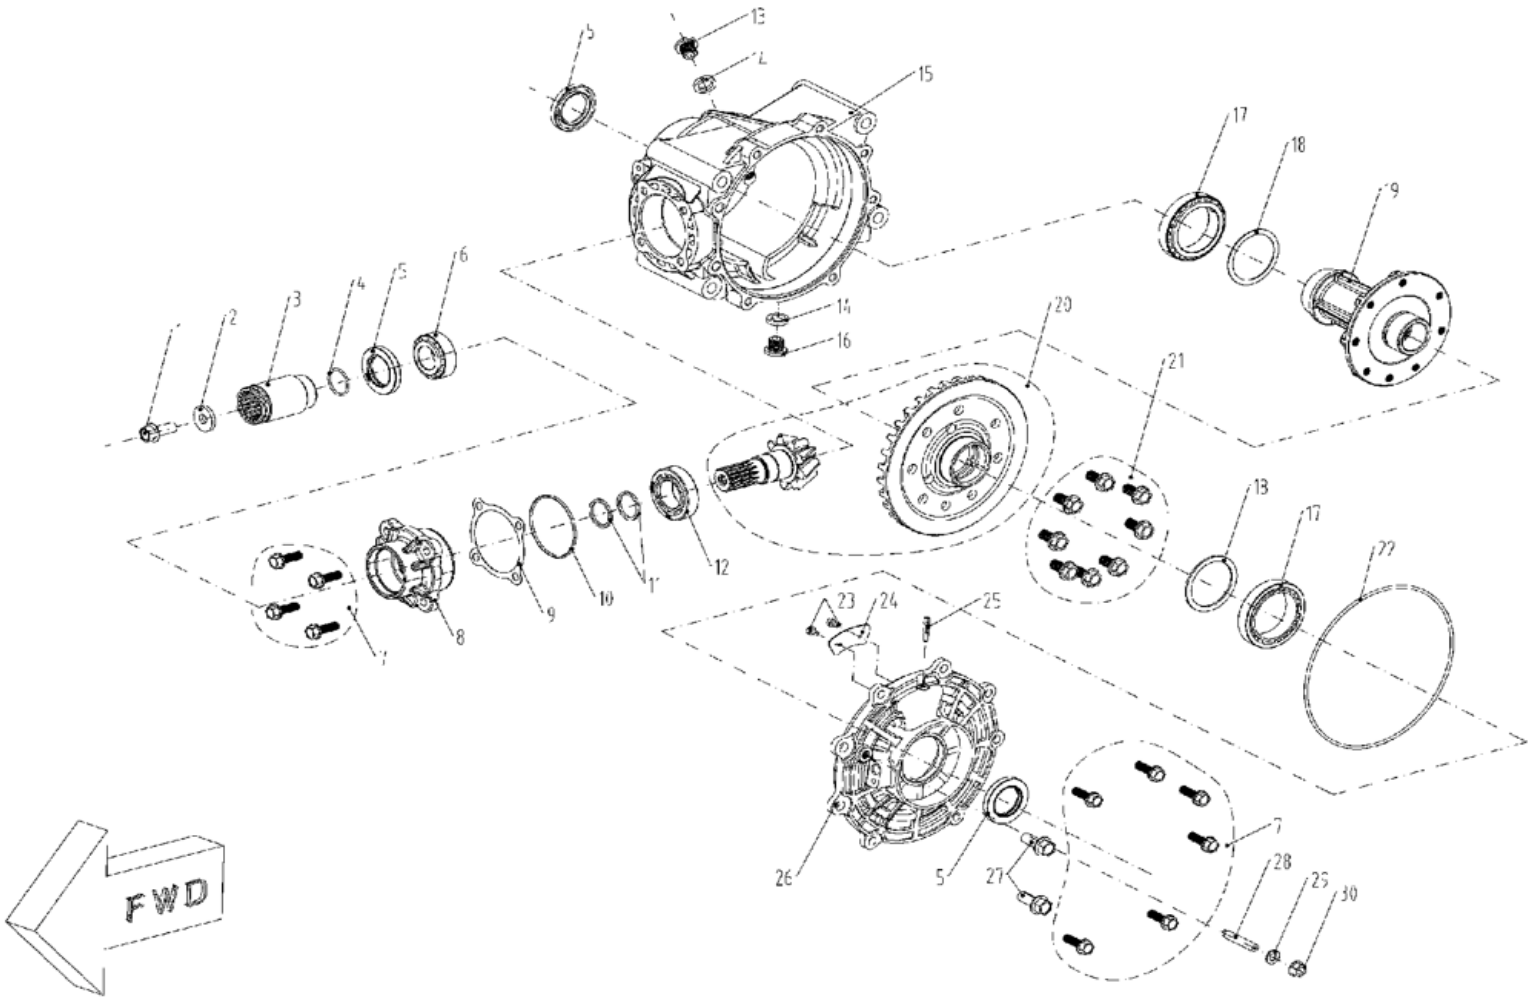


No.	Part Number	Description	Pieces
13	0180-021008-0010	Bolt M14×1.25×12	
14	0180-011006	Shim 14	
15	Q860-330001-00002	Rear Axle Housing	
16	0180-332100	Magnetic Drain Bolt M14×1.25×12	
17	30409-05000	Tapered Roller Bearing 32910	
18	Q820-330003-00100	Adjustment Washer 61×50.5	
18	Q820-330003-00200	Adjustment Washer 61×50.5	
18	Q820-330003-00300	Adjustment Washer 61×50.5	
18	Q820-330003-00400	Adjustment Washer 61×50.5	
18	Q820-330003-00500	Adjustment Washer 61×50.5	
18	Q820-330003-00600	Adjustment Washer 61×50.5	
18	Q820-330003-00700	Adjustment Washer 61×50.5	
18	Q820-330003-00800	Adjustment Washer 61×50.5	
18	Q820-330003-00900	Adjustment Washer 61×50.5	
19	Q850-330003-00001	Mounting Seat	
20	Q860-3300A0-00003	Rear Axle Bevel Gear Assembly	
21	0181-313100-0010	Bolt M10×1.25×22	
22	0180-334002	O-Ring Seal 151×3	
23	30105-040008410	Screw M4×8	
24	Q830-310022	Oil Baffle Plate	
25	0180-311004-0020	Breather Pipe Connector	
26	Q860-330002-00003	Rear Axle Cover	
27	0180-330004-0010	Bolt M10×1.25×25	
28	0180-334005-0010	Hexagon Socket Head Screw M8×45	
29	0180-334004	Gasket 8.2×15×1.5	
30	0180-334006-0010	Nut M8	

STEERING SYSTEM (WITH EPS)

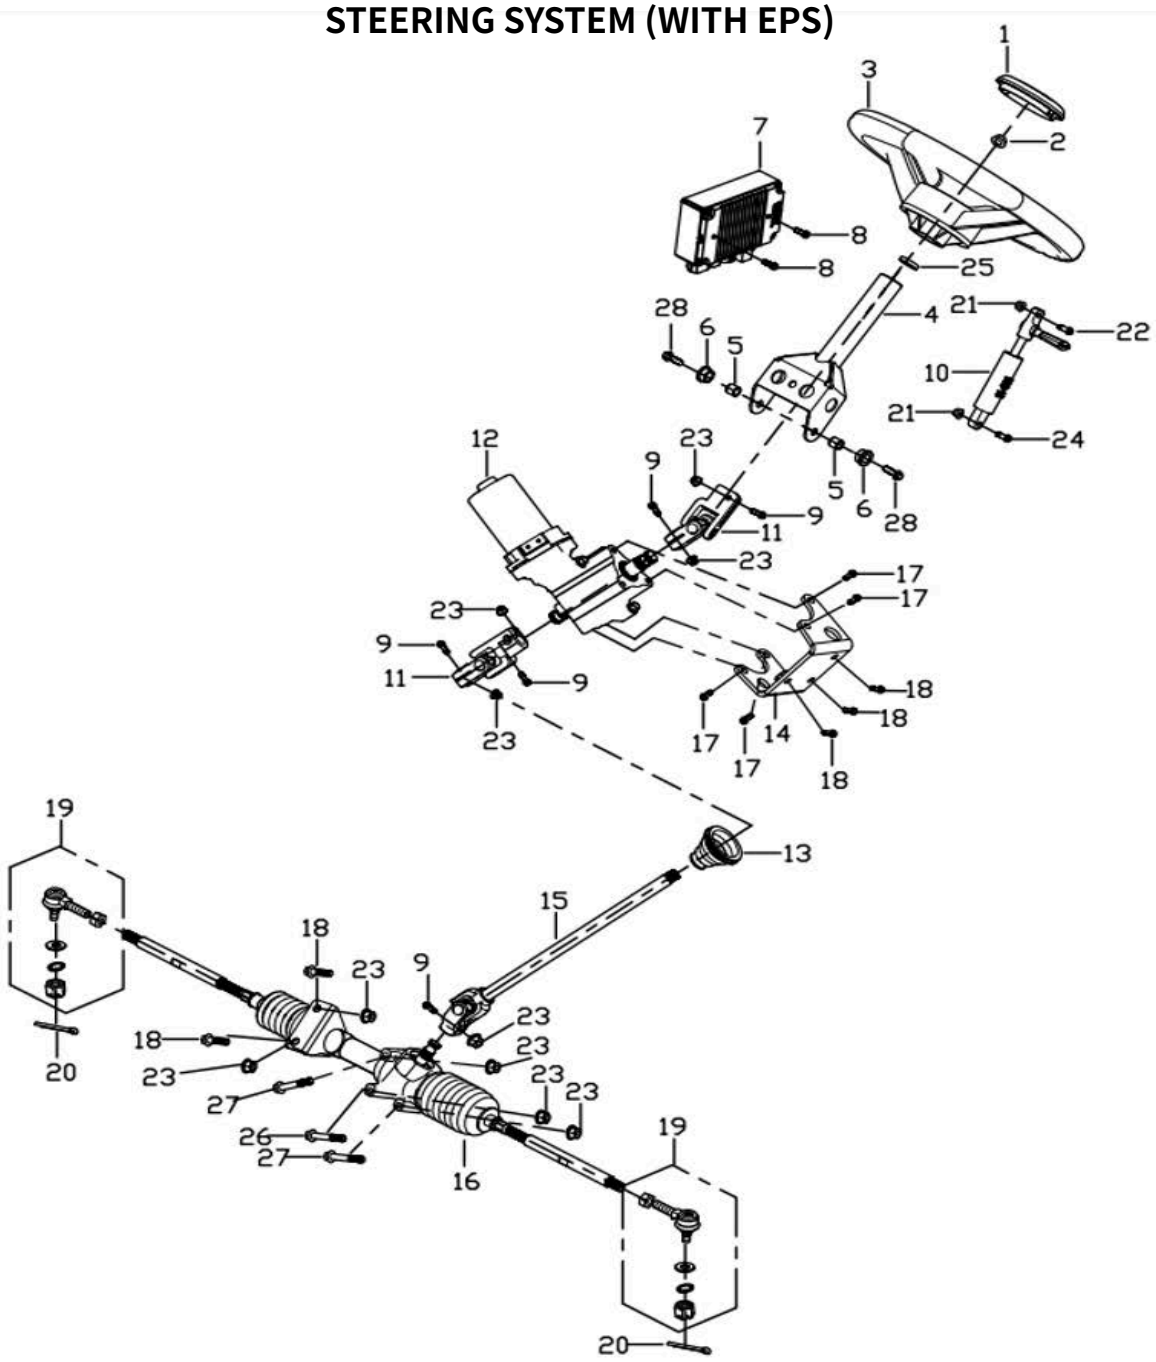


No.	Part Number	Description	Pieces
1	16805090000	Steering Wheel Center Cap	1
2	04622120026	Hex Flange Locking Nut M12X1.25	1
3	16805090080	Steering Wheel	1
4	16805060000	Steering Column Bracket	1
5	13205050070	Steering Inner Bush	2
6	13205050061	Steering Nylon Sleeve	2
7	19305270050	EPSController	1
8	01114060126	Hex Flange Bolt M6X12	2
9	01224080356	Hex Flange Bolt M8×35	5
10	16805050100	Steering Column Gas Spring	1
11	16805270020	Universal Joint	2
12	16805270010	Electric Power Steering	1
13	16805070030	Tie Rod Bellows	1
14	19305270160	Steering support bracket	1

STEERING SYSTEM (WITH EPS) *CONTINUED*

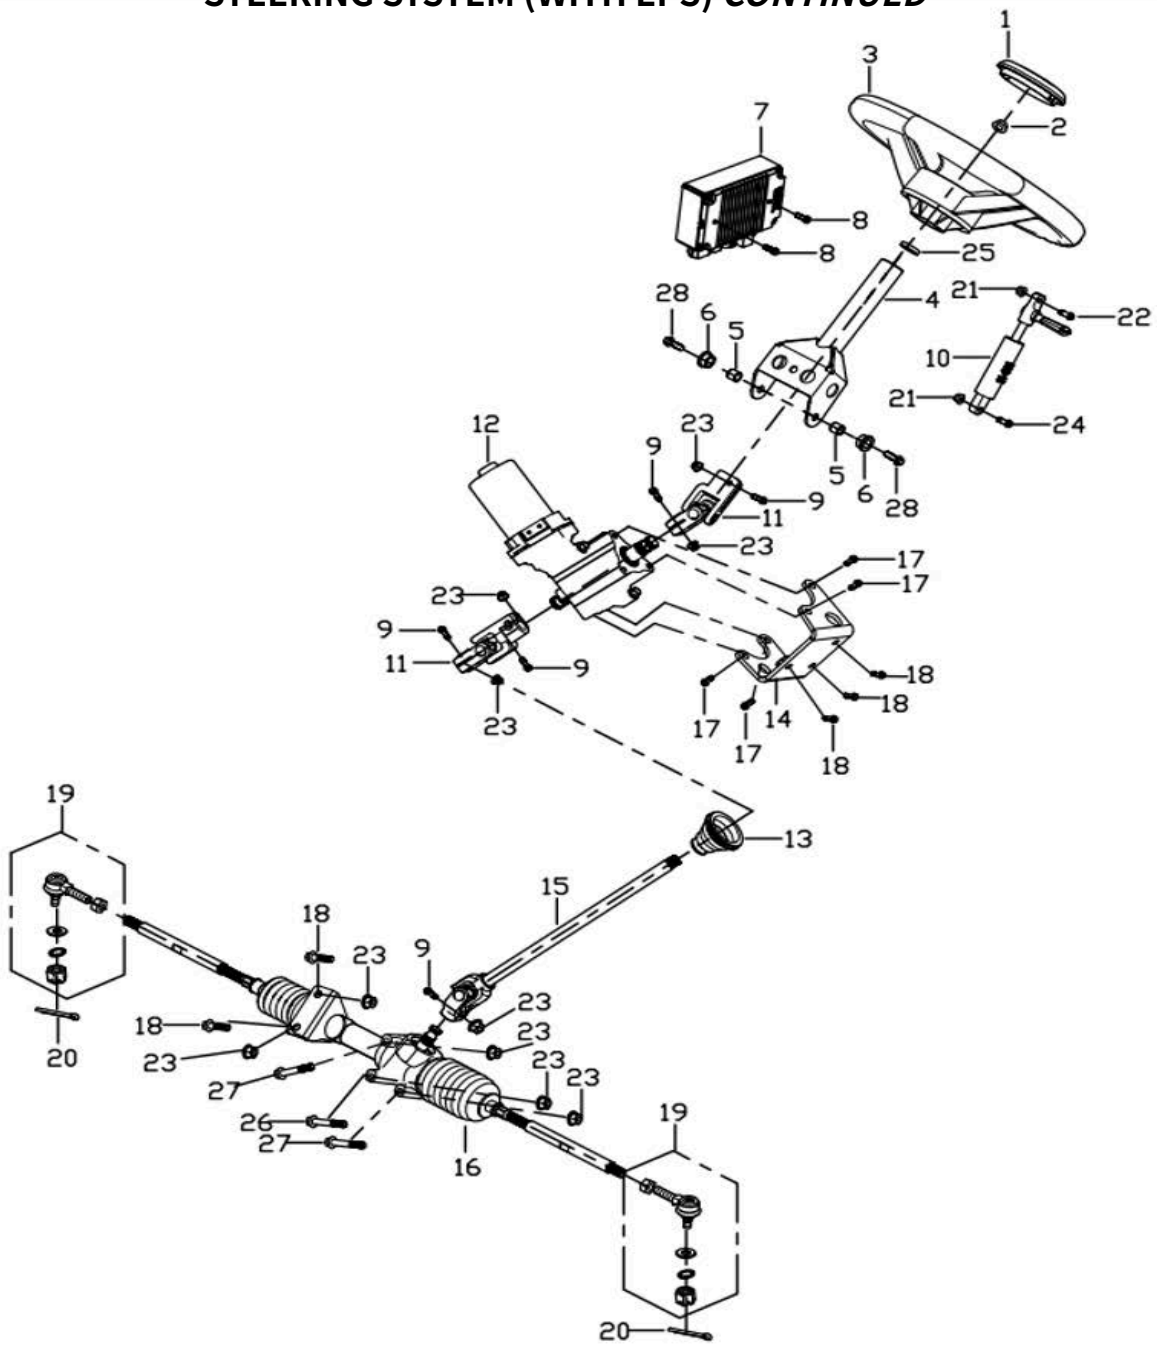


No.	Part Number	Description	Pieces
15	19305070010	Tie Rod ,Power Steering	1
16	19305100000	Redirector Assy	1
17	01224080166	Hex Flange Bolt M8×16	4
18	01224080206	Hex Flange Bolt M8×20	5
19	10905100080	Steering tie rod ball joint	
20	05011320255	Cotter Pin φ3.2X25	2
21	04612060026	Hex Flange Locking Nut M6	2
22	01824060126	T Bolt M6X12	1
23	04612080026	Hex Flange Locking Nut M8	10
24	01824061206	Hexagonal Flange Step Bolt φ8×15-M6×12	1
25	16805050010	Steering Column Bushing	1
26	01214080806	Hex Flange Bolt M8×80	1
27	01214080956	Hex Flange Bolt M8×95	2
28	01224080256	Hex Flange Bolt M8×25	2

FUEL SYSTEM

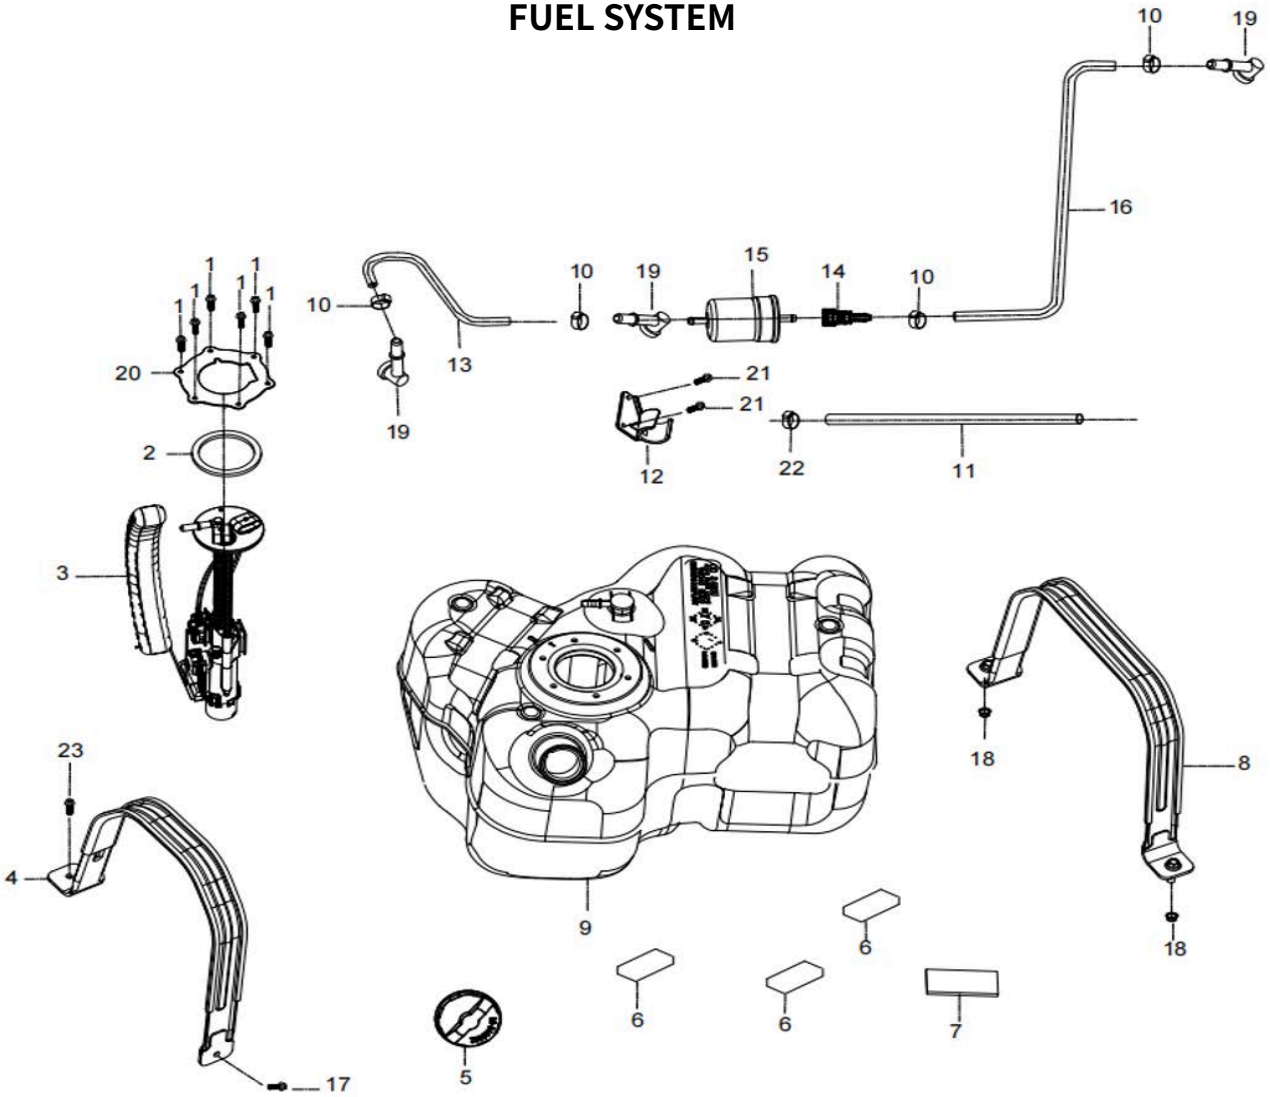


No.	Part Number	Description	Pieces
1	01224050125	Hex Flange Bolt 5x12	6
2	M0640203P-500-02	Flange Seal Gasket	1
3	19304080000	Fuel Pump	1
4	19304010260	Fuel Tank Clamp ,Rear	1
5	17304020000	Tank Cap	1
6	16804010210	Fuel Tank Cushion	3
7	17013021630	Plastic Fuel Tank Certification Label	1
8	19304010250	Fuel Tank Clamp ,Front	1
9	19304010010	Fuel Tank	1
10	17112010200	Hose Clamp 14.8mm	5
11	14604040490	Fuel Hose L=0.42m	1
12	18504060011	Fuel Filter Mounting Plate	1
13	10404040501	Fuel Hose L=300mm	1
14	18802020060	fuel injector quick connector	1
15	17004060040	Fuel Filter	1
16	10404040501	Fuel Hose L=520mm	1
17	01224080206	Hex Flange Bolt M8×20	2
18	04612080026	Hex Flange Locking Nut M8	2
19	19302020060	fuel injector quick connector	3
20	19304010190	Fuel Pump Top Cover	1
21	01254060166	Hex Flange Bolt M6×16	2
22	14604070050	Hose Clamp 14.8mm	5
23	01224080356	Hex Flange Bolt M8×35	1

COOLING SYSTEM (TWO DOOR)

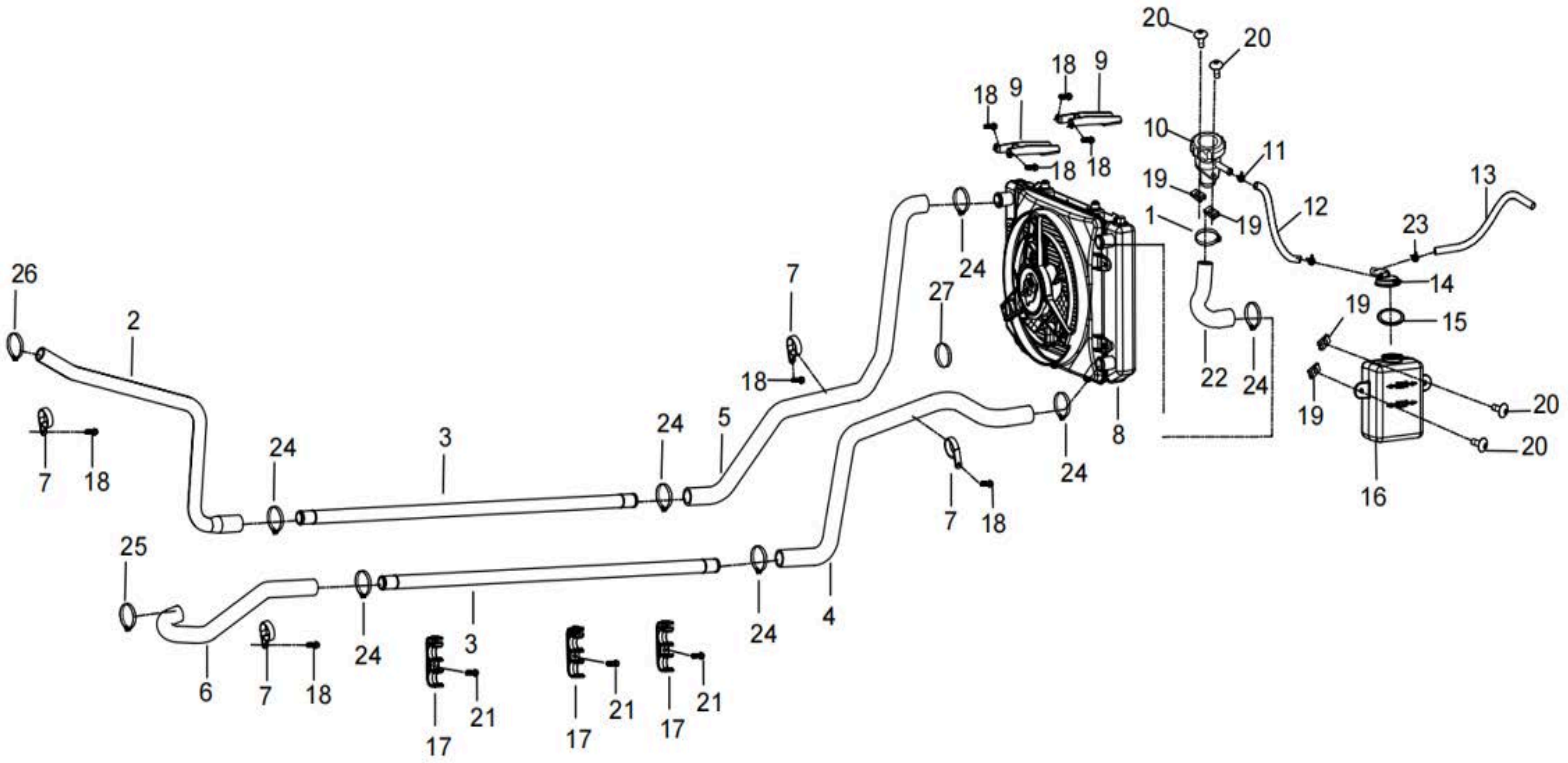


No.	Part Number	Description	Pieces
1	18812050620	Clamp	1
2	19312050110	Engine Outlet Pipe	1
3	19312050240	Connecting Aluminum Pipe,TWO DOOR	2
4	19312050010	Radiator Outlet Pipe	1
5	19312050020	Radiator Inlet Pipe	1
6	19312050040	Engine Inlet Pipe	1
7	14612080000	Clip φ36	4
8	21062401501	Radiator	1
9	19312030040	Radiator Upper Mounting Plate	2
10	21040400913	Radiator Cap	1
11	11904070030	Spring Hose Clip φ8	1
12	19312040110	Auxiliary Coolant Tank Connecting Pipe L=470	1
13	16812040080	Auxiliary Coolant Tank Vent Pipe	1
14	16812040030	Secondary Water Tank Cap	1
15	16812040120	O-Ring Seal;For Auxiliary Water Tank	1
16	19312040000	Auxiliary Water Tank	1
17	16812050090	Aluminum Pipe Clamp	3
18	01254060166	Hex Flange Bolt M6×16	8
19	04922060024	Plate Nut ,Long M6	4
20	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	4
21	01254060256	Hex Flange Bolt M6×25	3
22	19312050050	Water Inlet Pipe	1
23	14604070050	Spring Hose Clip φ12	1
24	18812050610	Water Pipe Clamp	7
25	18812050590	Water Pipe Clamp	1
26	18812050600	Water Pipe Clamp	1
27	17012050170	Water Pipe Spacer Bush	1

AIR FILTER AND CVT INLENT/OUTLET SYSTEM

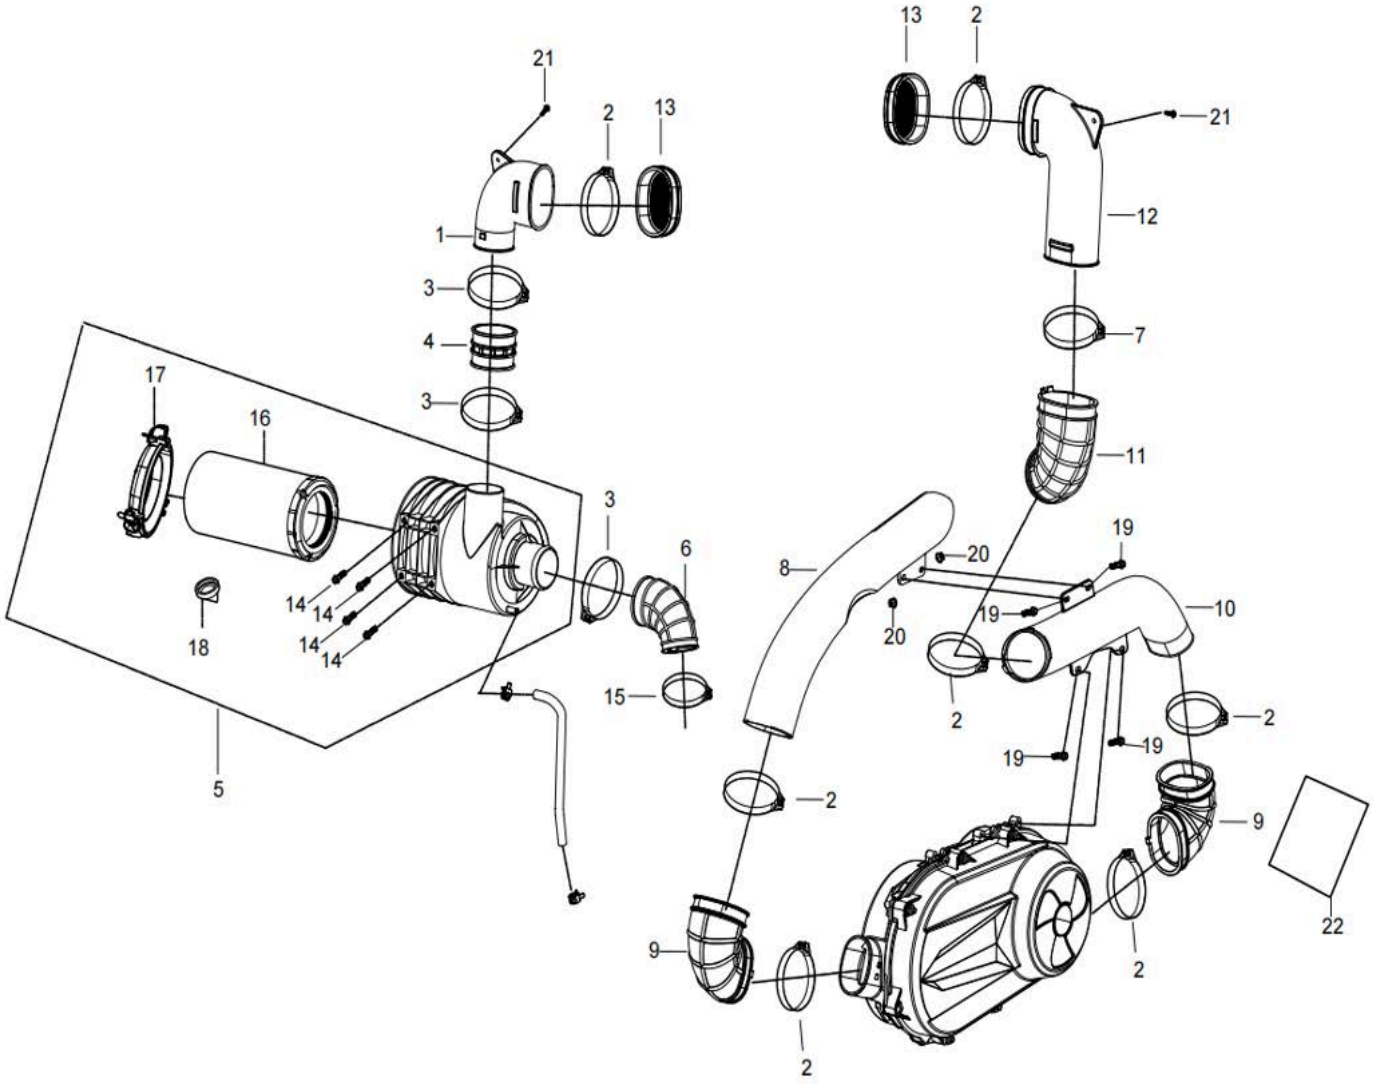


No.	Part Number	Description	Pieces
1	21062402501	Air Filter Inlet Pipe	1
2	16607030030	Clamp φ80-φ100	7
3	17007030270	Clamp φ60-80	3
4	16807020150	Primary Air Filter Rubber Sleeve	1
5	21140402301	Air Filter With Housing	1
6	21062402601	Air Filter Outlet Rubber Sleeve	1
7	14507030210	Clamp	1
8	19307040190	CVT Outlet Pipe	1
9	19307030010	CVT Inlet Pipe Boot I	2
10	19307030290	CVT Inlet Pipe II	1
11	19307030250	CVT Inlet Pipe Boot II	1
12	19307030280	CVT Inlet Pipe I	1
13	19307020190	Air Inlet Filter Screen	2
14	01224080166	Hex Flange Bolt M8×16	4
15	12304010090	Clamp φ40-60	1
16	21140402342	Air Filter	1
17	21140402321	Air Filter End Cover	1
18	21140402361	Air Filter Drain Sleeve	1
19	01254060206	Hex Flange Bolt M6×20	2
20	04612060026	Hex Flange Locking Nut M6	2
21	03714550164	Hexagonal Head Self-Tapping Screw	2
22	17014130010	Heat Insulation Film	0.2

SHIFT AND THROTTLE CONTROL SYSTEM

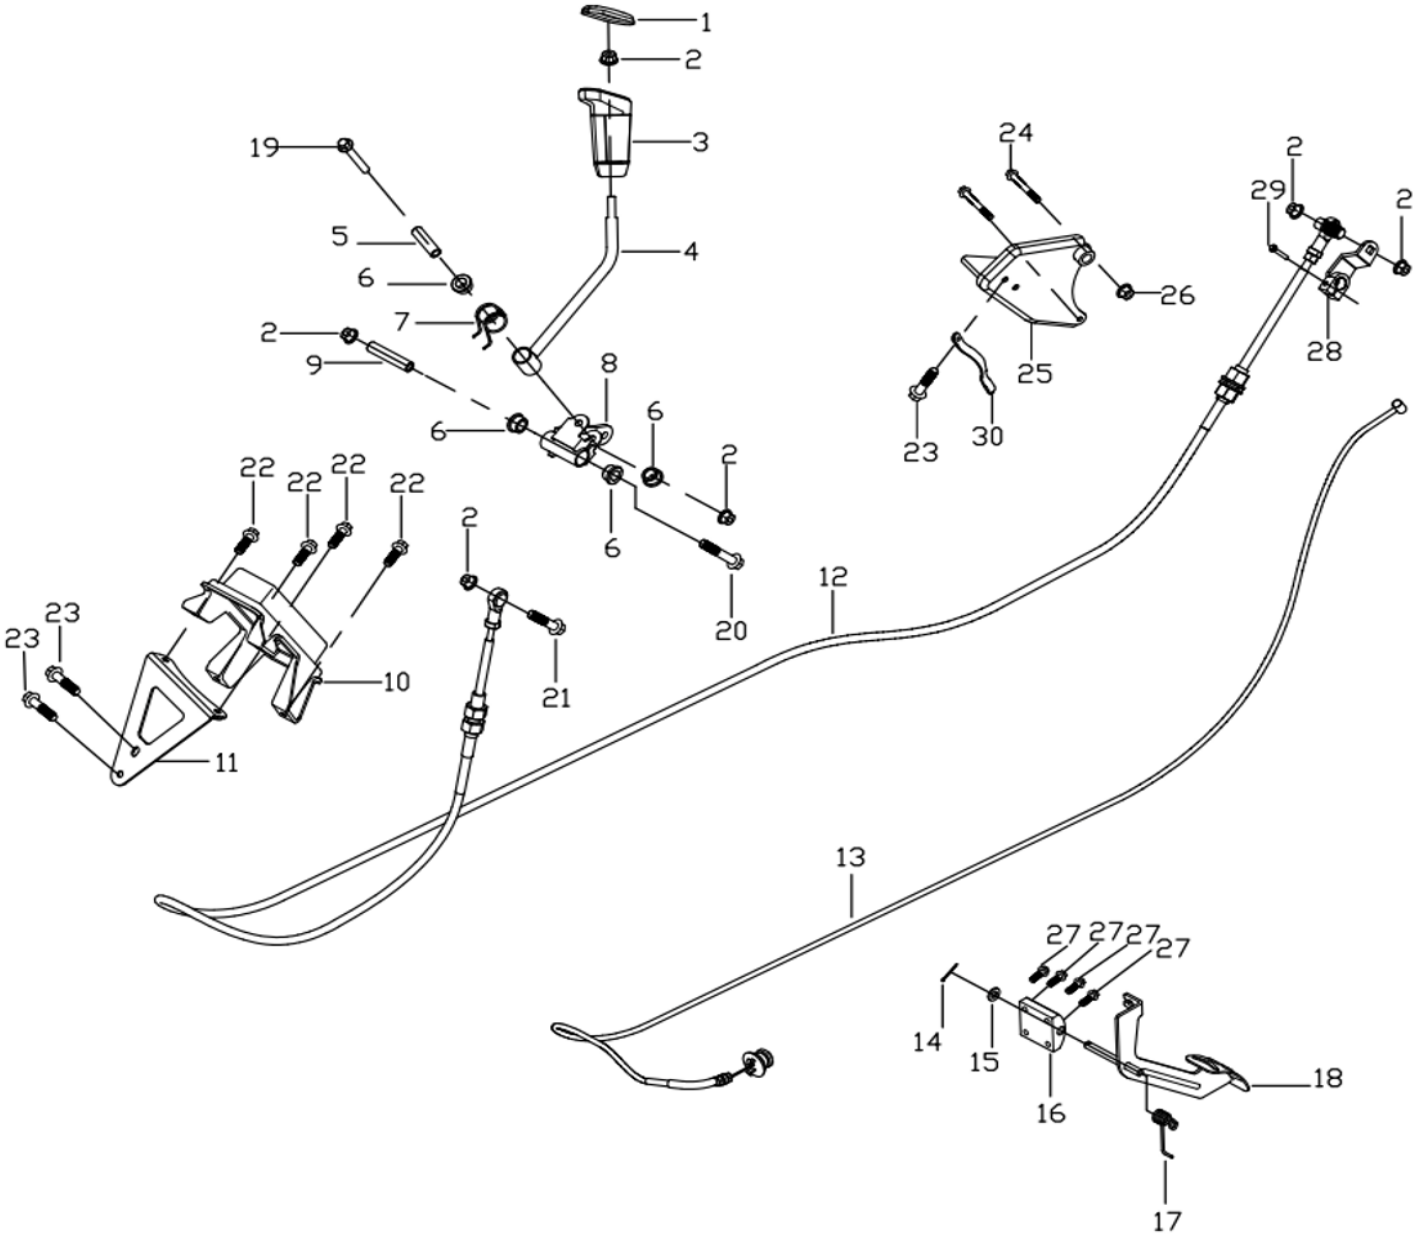


No.	Part Number	Description	Pieces
1	19311060220	Shift Lever Upper Cover	1
2	04612080026	Hex Flange Locking Nut M8	5
3	16811060230	Shift Lever Lower Cover	1
4	16811060101	Shift Lever	1
5	14711060131	Neck Bush,Short	1
6	13205050061	Steering Nylon Sleeve	4
7	16811060150	Return Spring	1
8	16811060111	Gearshift Lever Cross Shaft	1
9	14711060141	Neck Bush,Long	1
10	19310360000	Shift Plate	1
11	16811060030	Shift Support Plate	1
12	19311030000	Gearshift Cable ,Two Door	1
13	19311010190	Accelerator Cable ,Two Door	1
14	05011202505	Cotter Pin 2..0X40	1
15	06119092005	Washer φ8.5×φ20×2	1
16	16111010270	Throttle Pedal Mounting Base	1

SHIFT AND THROTTLE CONTROL SYSTEM *CONTINUED*

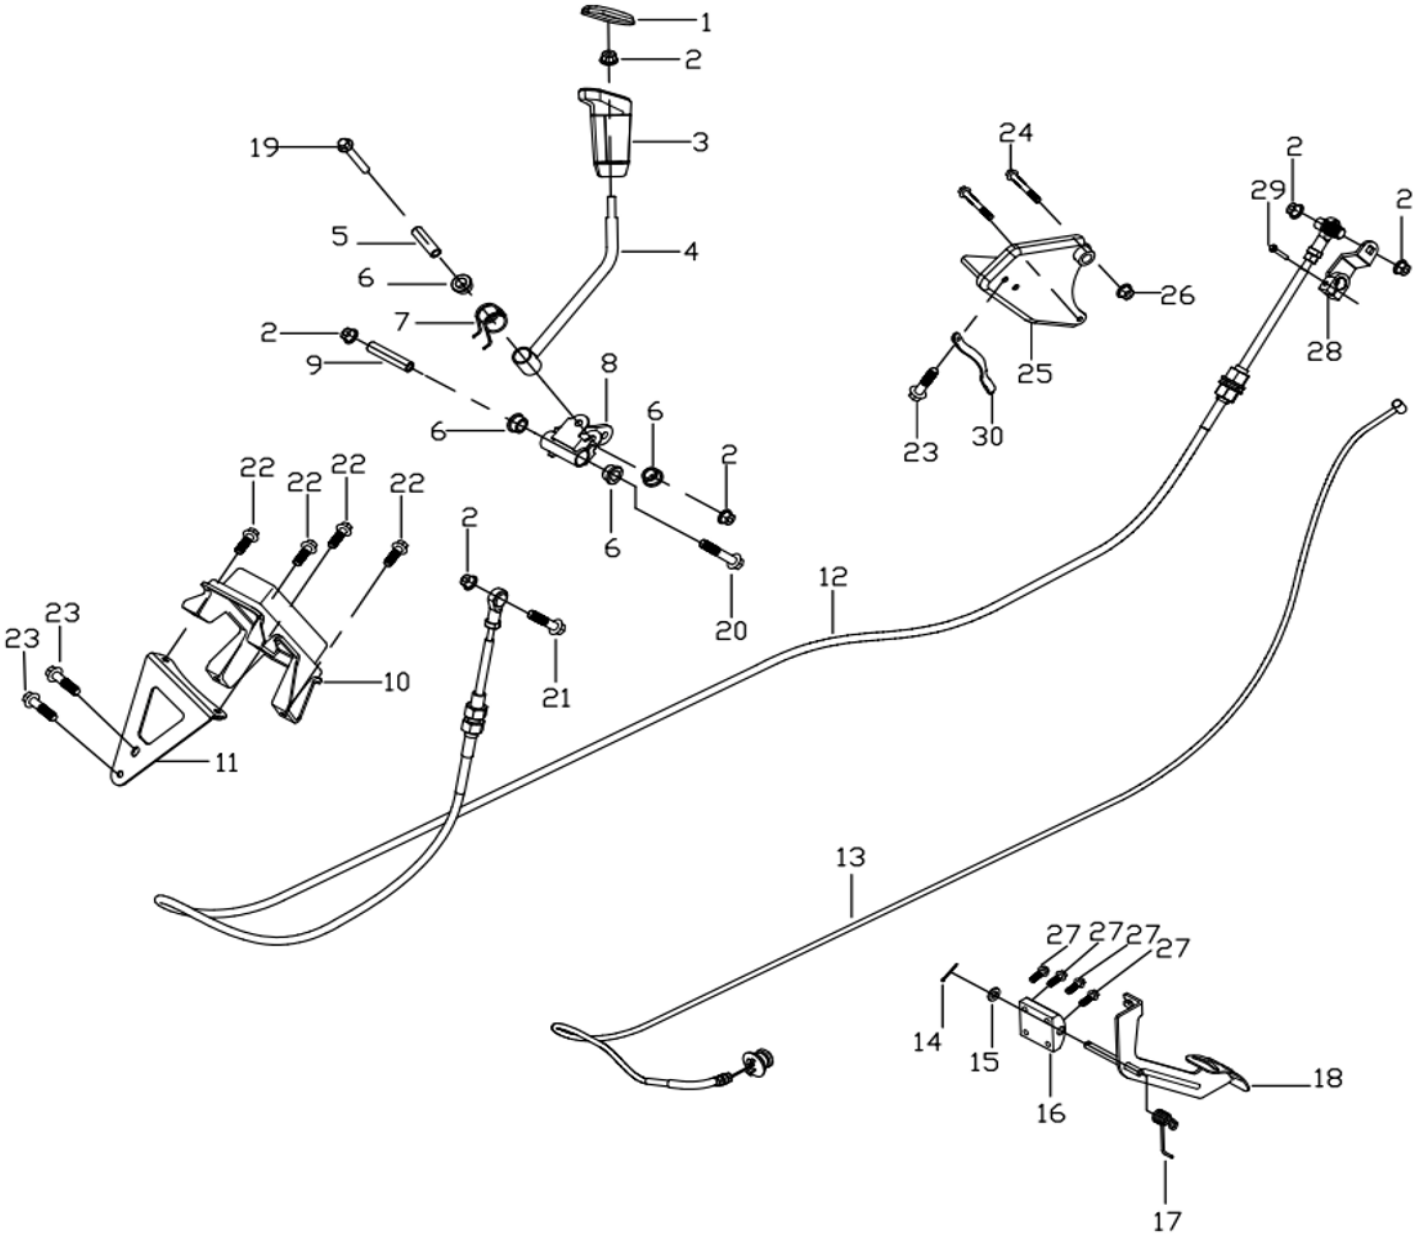


No.	Part Number	Description	Pieces
17	16111010090	Throttle Pedal Return Spring	1
18	19311010100	Throttle Pedal	1
19	01214080556	Hex Flange Bolt M8X55	1
20	01214080806	Hex Flange Bolt M8×80	1
21	01224080306	Hex Flange Bolt M8×30	1
22	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	4
23	01254060166	Hex Flange Bolt M6×16	4
24	01256121206	Hex Flange Bolt M12x120x1.25	1
25	19311060020	Fixed Plate, Gear Shift Cable	1
26	04622120026	Hex Flange Locking Nut M12X1.25	1
27	01224080206	Hex Flange Bolt M8X20	4
28	19302050010	Rocker arm	1
29	01254060256	Hex Flange Bolt M6x25	1
30	21040402401	Wire holder	1
31	01224060125	Hex Flange Bolt M6×12	1
32	17006010090	Brake Oil Pipe Clip	2

ROLL BAR (TWO DOOR)

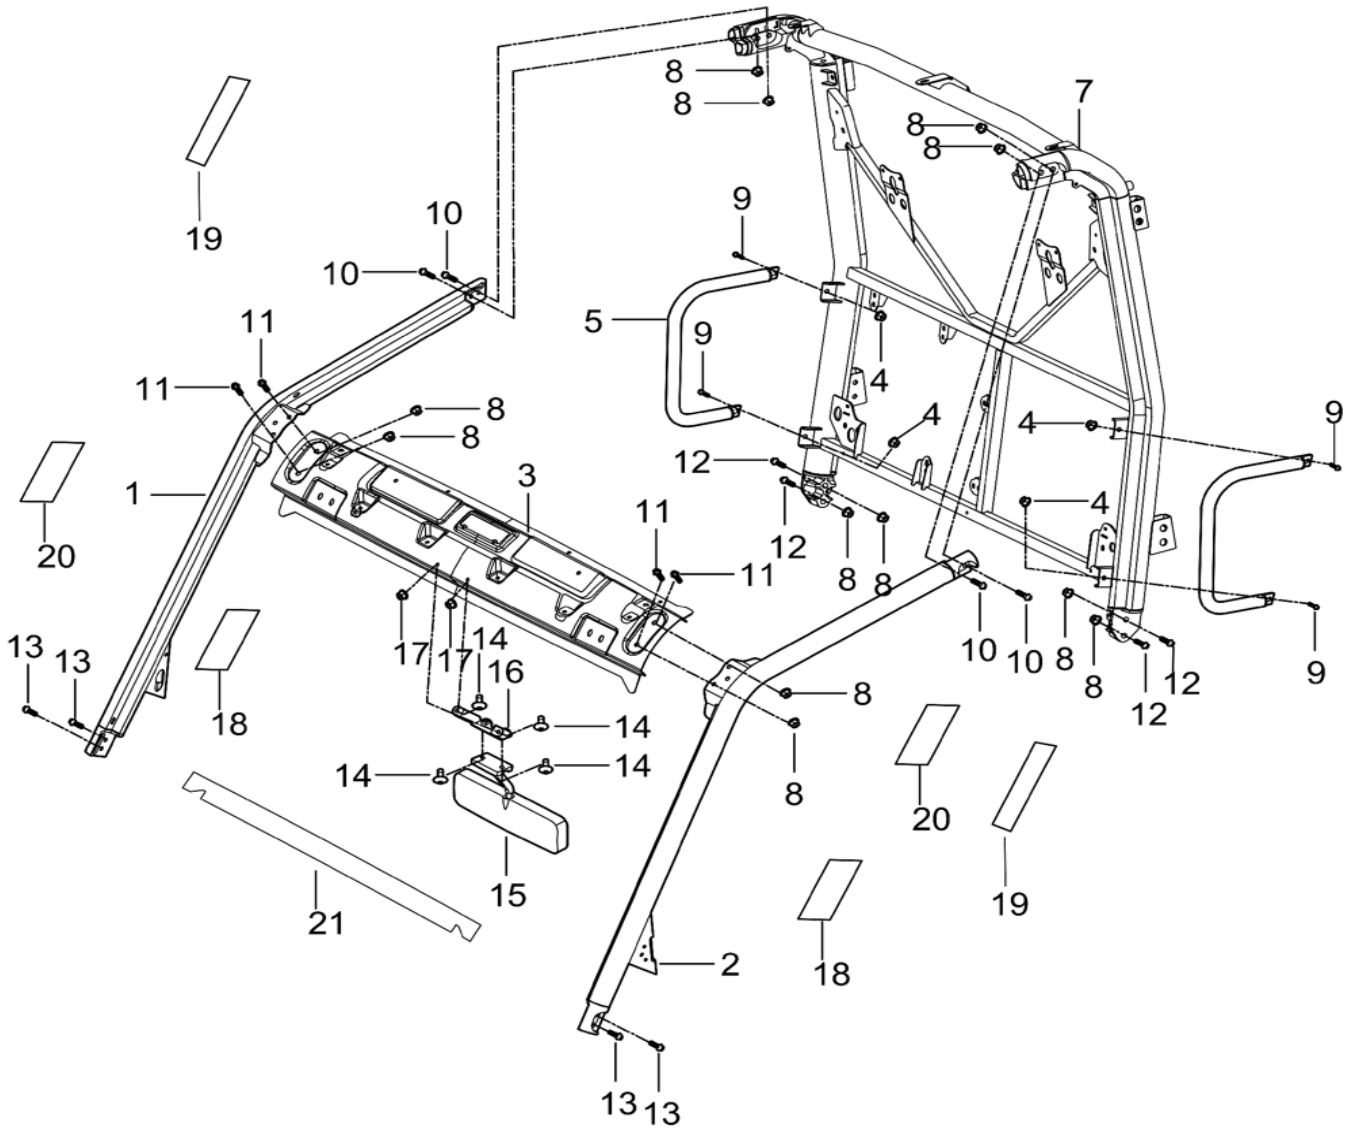


No.	Part Number	Description	Pieces
1	16808080051	Front Roll Bar,RH	1
2	16808070051	Front Roll Bar,LH	1
3	19308050160	Front Windshield Frame Connection Plate	1
4	04612080024	Hexagon Flange Locking Nut	4
5	16808080020	Hand Rail ,RH	1
6	16808070020	Hand Rail ,LH	1
7	19308060001	Rear Canopy Rod , Two Door	1
8	04622100024	Hex Flange Locking Nut M10×1.25	12
9	03414080254	Inner Hexagonalobular Socket Pan Head Screw M8×25	4
10	01256100354	Hexagonal Flange Bolts ,Black	4
11	01256100206	Hex Flange Bolt M10×20×1.25	4
12	01256100656	Hex Flange Bolt M10×65×1.25	4
13	01256100306	Hex Flange Bolt M10X30X1.25	4
14	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	4
15	16814270001	Inner Mirror	1
16	16814270010	Inner Rearview Mirror Mounting Plate	1
17	04612060026	Hex Flange Locking Nut M6	2
18	16808050170	Front Canopy Rod Connection Plate Gasket	2
19	19310080050	Pedal Anti-Vibration Pad 1	2
20	19314100220	Roof connection plate sealing gasket	2
21	19314120040	Front Tempered Glass Sealing Gasket	1

ROOF (TWO DOOR)

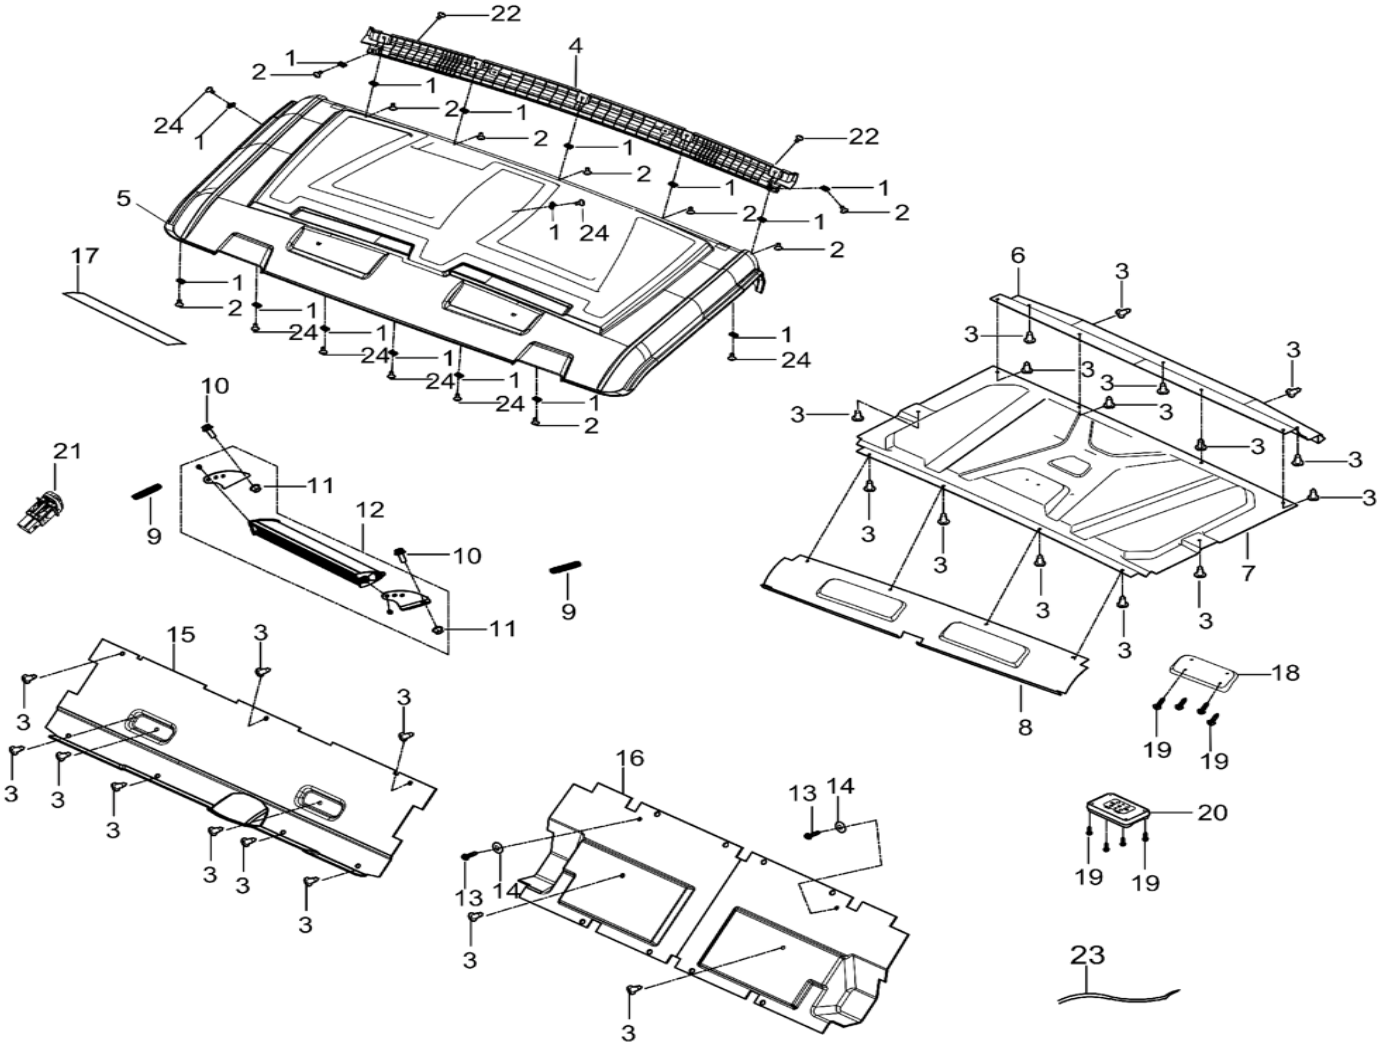


No.	Part Number	Description	Pieces
1	04922060024	Plate Nut ,Long M6	16
2	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	9
3	16510340420	Plastic Push Pin	26
4	19314100030	Roof (Rear Lining)	1
5	19314100010	Roof (Front)	1
6	19314320331	Roof Felt Rear	1
7	19314100061	Roof Felt Middle	1
8	19314100121	Roof Felt Front	1
9	16509280090	Led Light Bar Mounting Rubber	2
10	01214080204	Hex Flange Bolt M8X20	2
11	04612080024	Hexagon Flange Locking Nut	2
12	19309580000	Top Led Bar	1
13	03714350125	Tapping Screws St3.5X12	2
14	06119051805	Washer φ5×φ18×1.5	4
15	19314320300	Seat Felt	1
16	19310120040	Backrest Felt	1
17	19314100160	Roof Seal Strip	1
18	16814100321	Roof Decorative Cover	1
19	03714350125	Tapping Screws St3.5×16	8
20	16809550000	Reading Light	1
21	16809190070	Dome Light Switch	1
22	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	2
23	19309550010	Reading Lamp Wiring Harness	1
24	03414060204	Inner Hexalobular Socket Pan Head Screws M6×20	7

EXHAUST SYSTEM

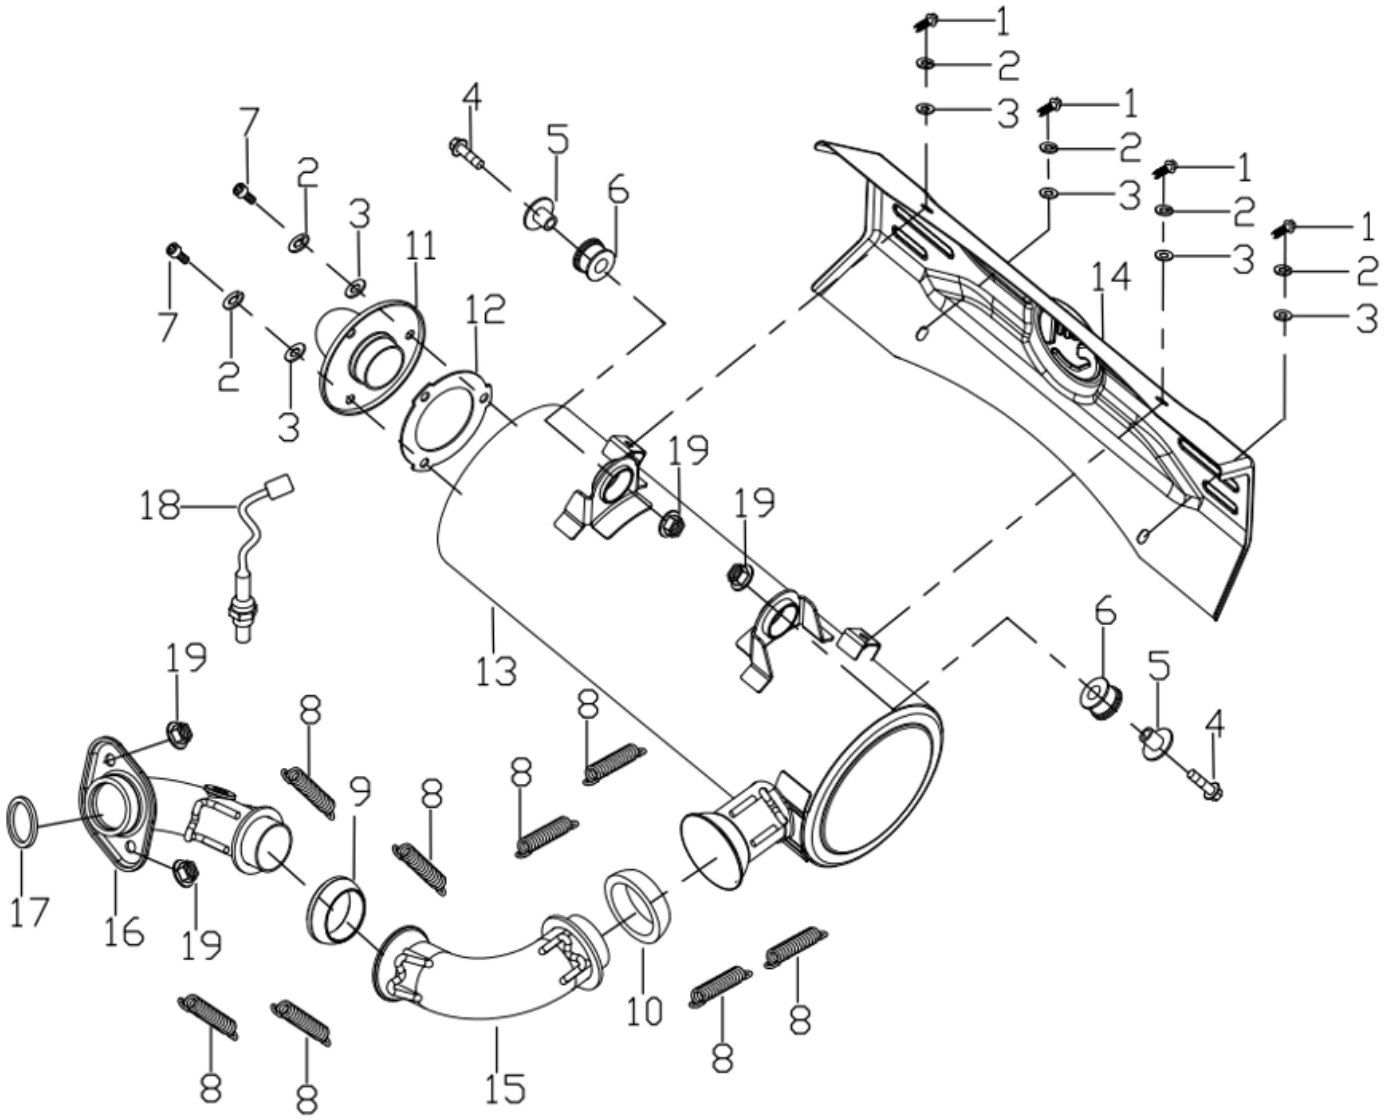


No.	Part Number	Description	Pieces
1	01254060166	Hex Flange Bolt M6×16	4
2	17007010020-3	Spring Washer φ6	6
3	17007010020-2	Washer φ6Xφ12X1	6
4	01224080356	Hex Flange Bolt M8×35	2
5	19307010190	Muffler Hang Neck Bushing	2
6	19307010140	Muffler Hang Rubber Sleeve	2
7	DIN1587	Cap Nut M6	3
8	19307010340	Exhaust Pipe Tension Spring	8
9	004-EN-1200-0001-00	Graphite Seal Cartridge	1
10	14107010540	Graphite Seal Cartridge,Small	1
11	16807010770	Tail Exhaust Assembly	1
12	17007100820	Graphite Washer	1
13	19307010000	Muffler ,500Cc	1
14	19307010110	Muffler Body Protective Board	1
15	19307010060	Exhaust Pipe II	1
16	19307010050	Exhaust Pipe I	1
17	21040400101	Exhaust Gasket	1
18	18802220000	O2 Sensor	1
19	04512080025	Hex Flange Locking Nut M8	2

SEATS (TWO DOOR)

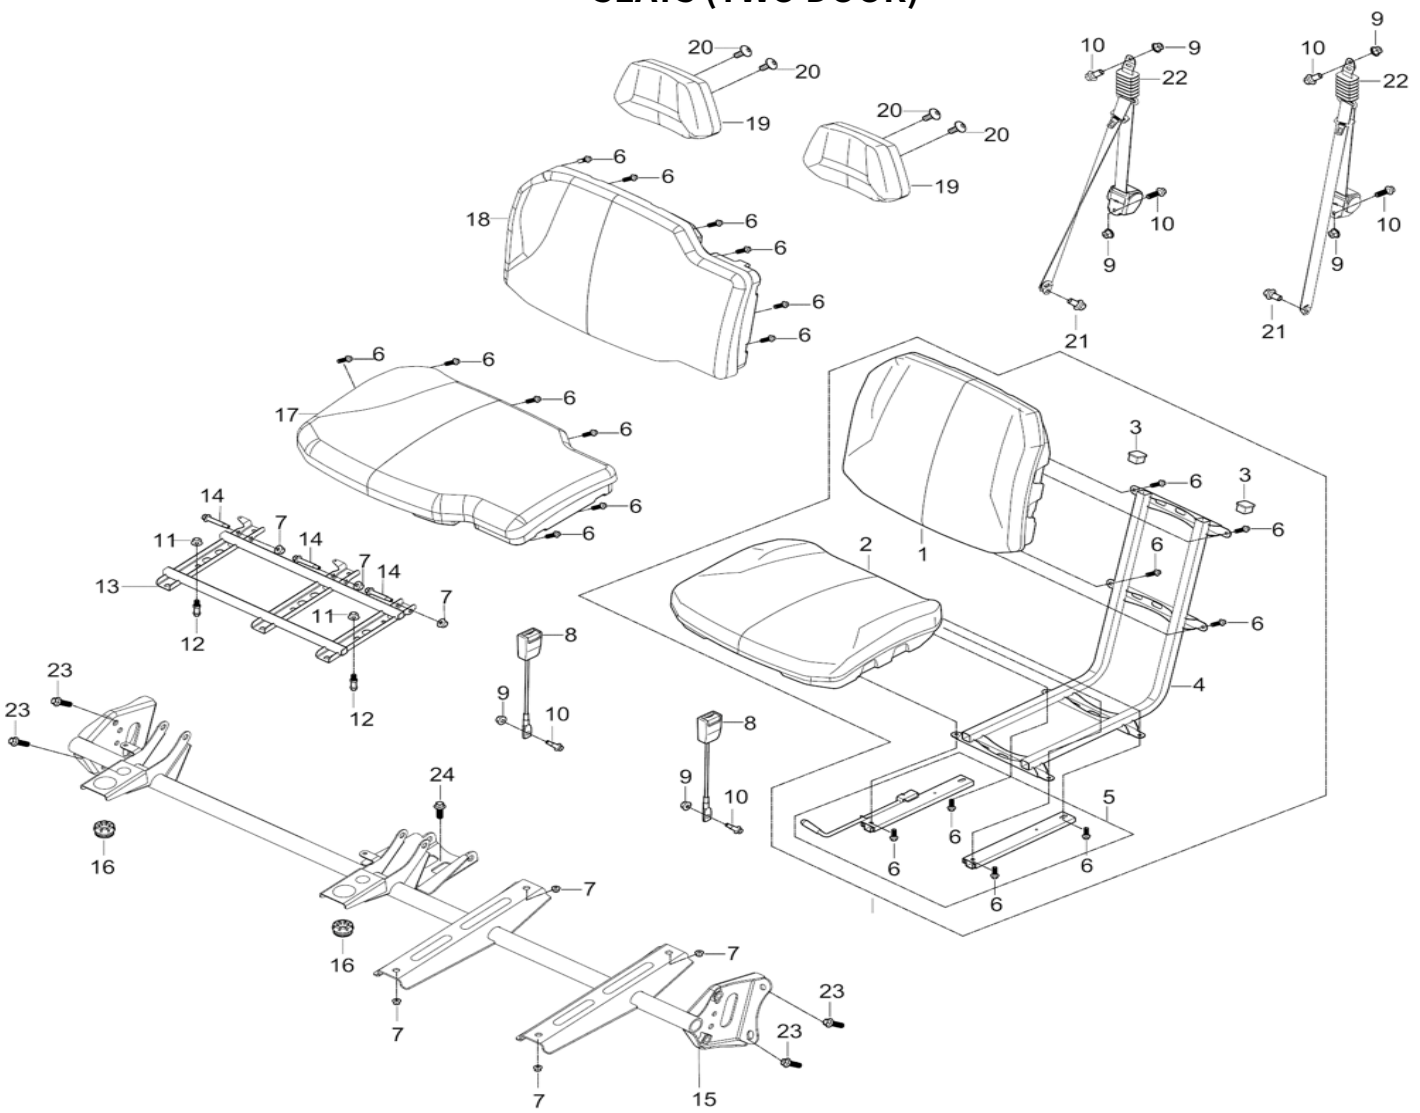

No.	Part Number	Description	Pieces
1	19314020710	Main Seat Cushion and Backrest (Black Grey)	1
2	19314020700	Main Seat Cushion (Black Grey)	1
3	16808720050	Rubber Plug	2
4	16808760010	Driver Seat Bracket	1
5	16814090071	Driver Seat Slide	1
6	03414080164	Inner Hexalobular Socket Pan Head Screws	20
7	04612080026	Hex Flange Locking Nut M8	6
8	19311090150	Seat Belt Buckle	2
9	04212110022	Hexagon Flange Locking Nut M11×1.25	6
10	01244110302	Hex Flange Bolt M11X30	6
11	04612100026	Hexagon Flange Locking Nut M10X1.5	2
12	16114090110	Seat Fixing Pin	2
13	19308230000	Passenger Seat Cushion Mounting Bracket	1
14	01824081506	Hex Flange Step Bolt M8	3
15	19308750000	Front Seat Bracket	1
16	16114020010	Seat Rubber Washer	2
17	19314020730	Passenger Seat Cushion (Black Grey)	1
18	19314020740	Passenger seat backrest (Black Grey)	1
19	16814090560	Seat Headrest	2
20	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	2
21	01224080206	Hex Flange Bolt M8×20	2
22	16811090050	Seat Belt	2
23	01256100206	Hex Flange Bolt M10×20×1.25	4


FRAME IMAGE

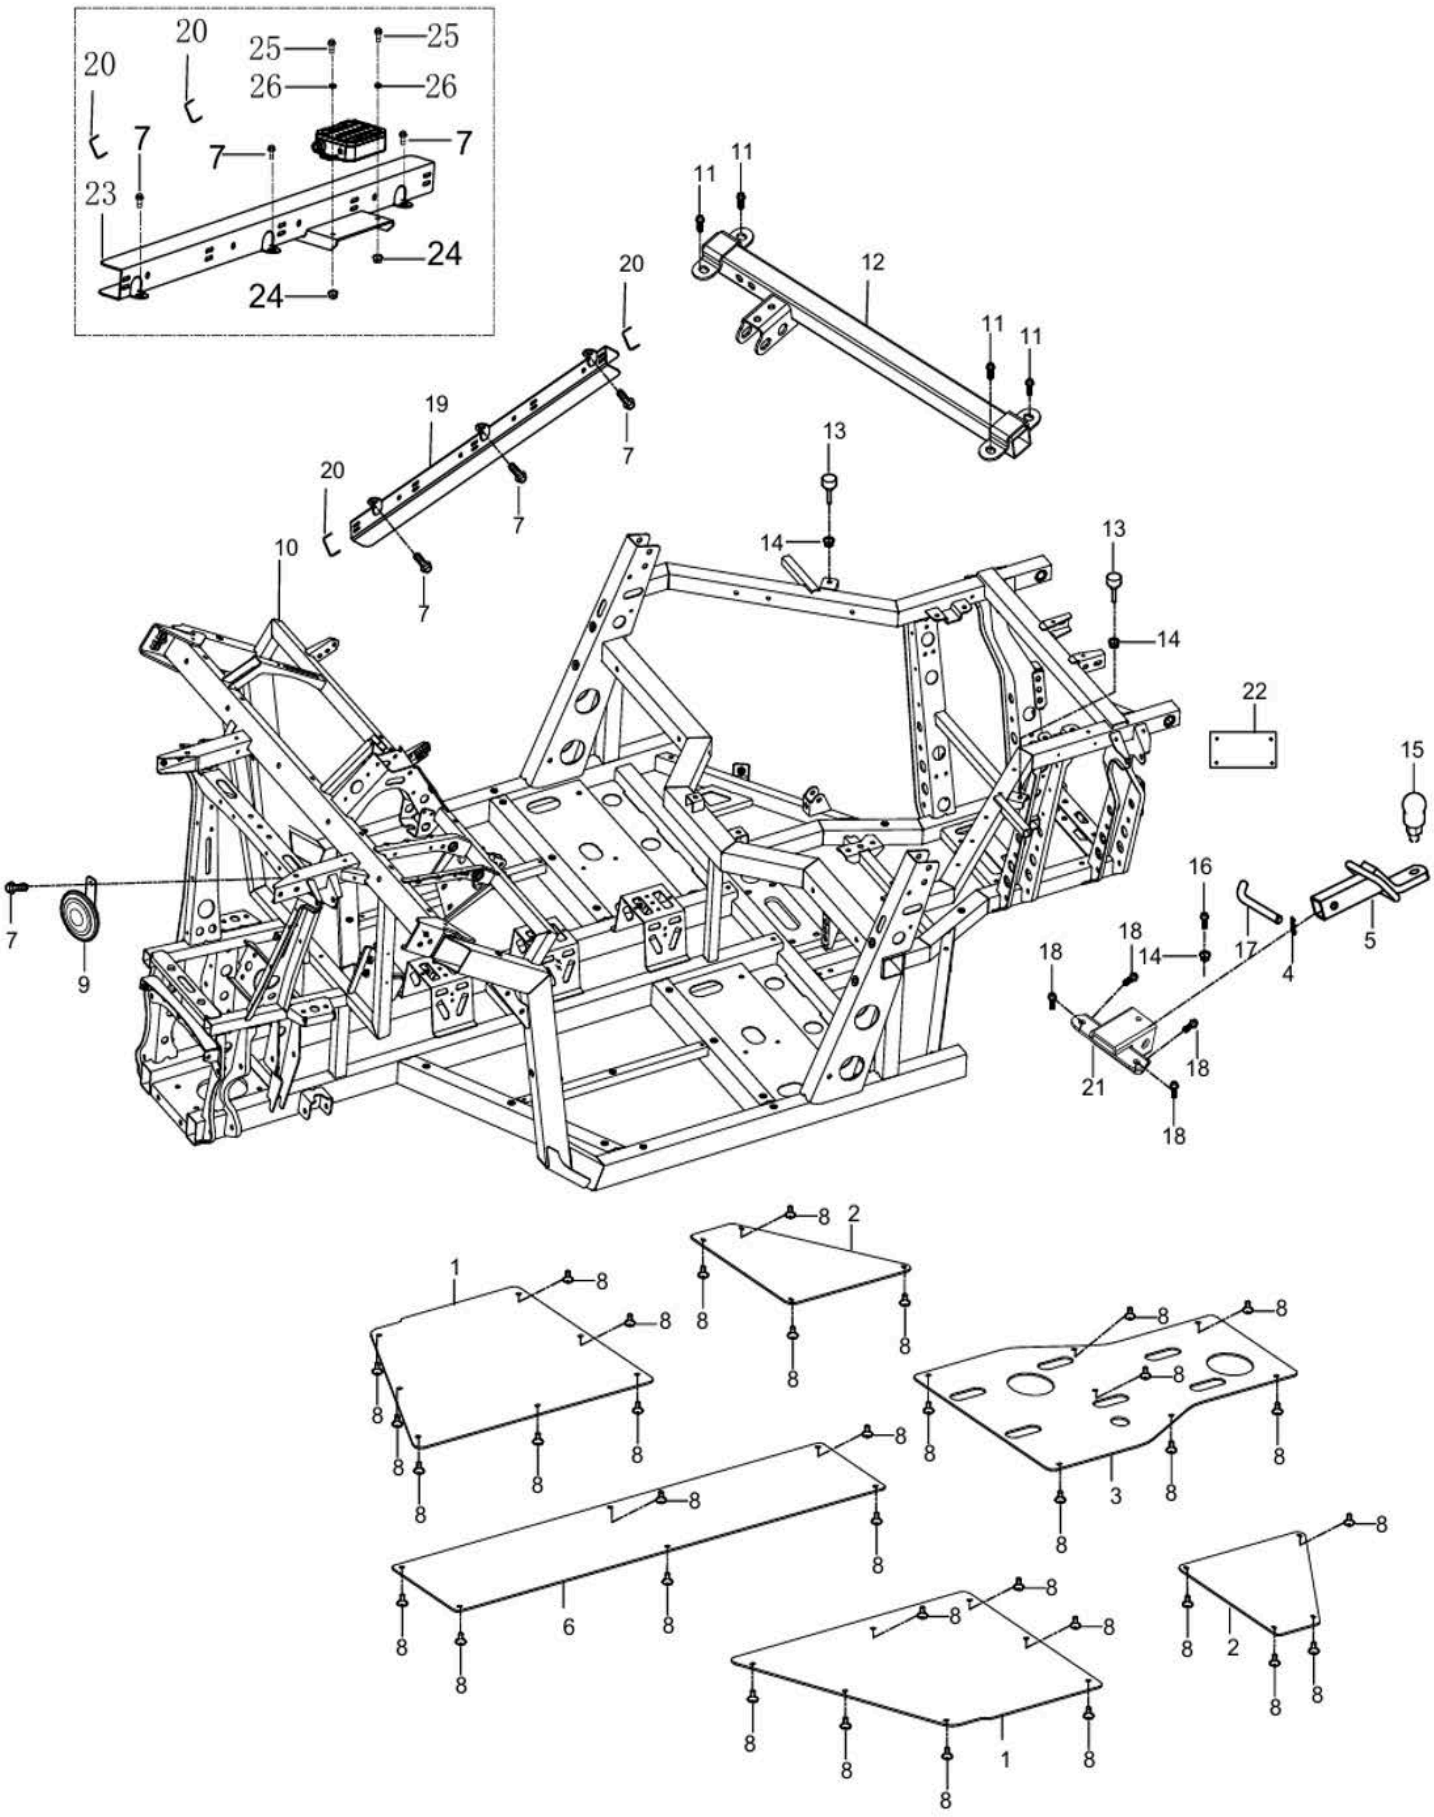

FRAME PART NUMBERS


No.	Part Number	Description	Pieces
1	19308010090	Foot Pedal Lower Guard	2
2	19308010080	Fuel Tank Bottom Guard	2
3	19308010070	Engine Underbody Guard	1
4	10908420041	Tow Ball Pin	1
5	16808420020	Trailer pothook	1
6	19308010060	Drive Shaft Bottom Plate	1
7	01254060166	Hex Flange Bolt M6×16	4
8	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	32
9	16109100001	Horn	1
10	19308010000	Frame	1
11	01224080166	Hex Flange Bolt M8×16	4
12	19308040081	Engine Upper Hanging Bracket	1
13	16810150170	Cargo Cushion Rubber Pad	2
14	04212080025	Hex. Nut M8	3
15	16808420010	Tow Ball 2"	1
16	01224080355	Hex Flange Bolt M8×35	1
17	16808420031	Trailer Arm Fixed Pin	1
18	01256100206	Hex Flange Bolt M10×20	4
19	19309010290	Wire Harness Bracket	1
20	16510340140	Windshield Scratch Guard Strip	2
21	19308420290	Trailer Hook Mounting Base	1
22	16808030050	EPA Emissions Label Mounting Plate	1
23	19309010300	Wiring Harness Bracket	1
24	04212040025	Hexagon Lock Nut M4	3
25	03344040105	Hexagon Socket Cylindrical Head Screw M4×10	2
26	06119040905	Flat Washer 4×9×1	2

BRAKE SYSTEM

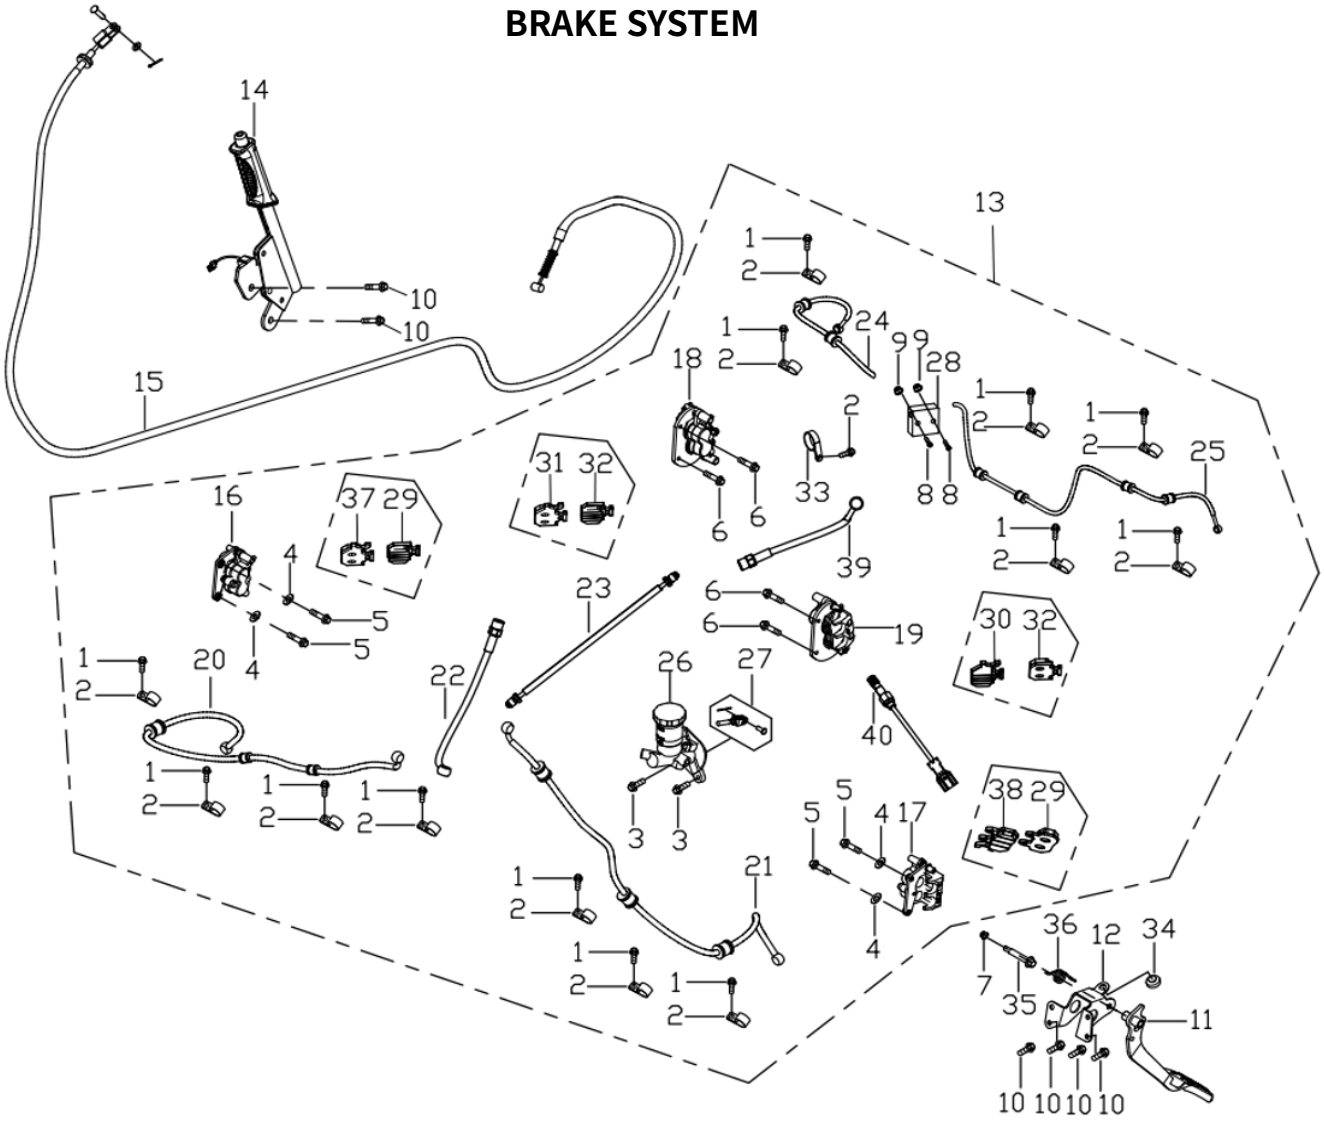


No.	Part Number	Description	Pieces
1	01224060125	Hex Flange Bolt M6×12	14
2	10406010090	Clamp ,For Brake Oil Pipe	14
3	01224080306	Hex Flange Bolt M8×30	2
4	06119102005	Washer φ10.5×φ20×2	4
5	01256100256	Hex Flange Bolt M10X25X1.25	4
6	01256100206	Hex Flange Bolt M10×20×1.25	4
7	04612080026	Hex Flange Locking Nut M8	1
8	01224060351	Hex Flange Bolt 6x35	2
9	04612060026	Hex Flange Locking Nut M6	2
10	01224080206	Hex Flange Bolt M8×20	6
11	16806030000	Foot Brake Pedal	1
12	16806020000	Foot Brake Support Plate	1
13	19306010540	Disc Brake Assembly	1
14	19306090000	Handbrake	1
15	19311020020	Parking Cable	1
16	TSK0352000R	Front Right Wheel Cylinder Assembly	1
17	TSK0352000L	Front Left Wheel Cylinder Assembly	1
18	TSK0442000R	Rear Right Wheel Cylinder Assembly	1
19	TSK0442000AL	Rear Left Wheel Cylinder Assembly	1
20	TSK0443000F	Front Right Brake Hose Assembly	1

BRAKE SYSTEM *CONTINUED*

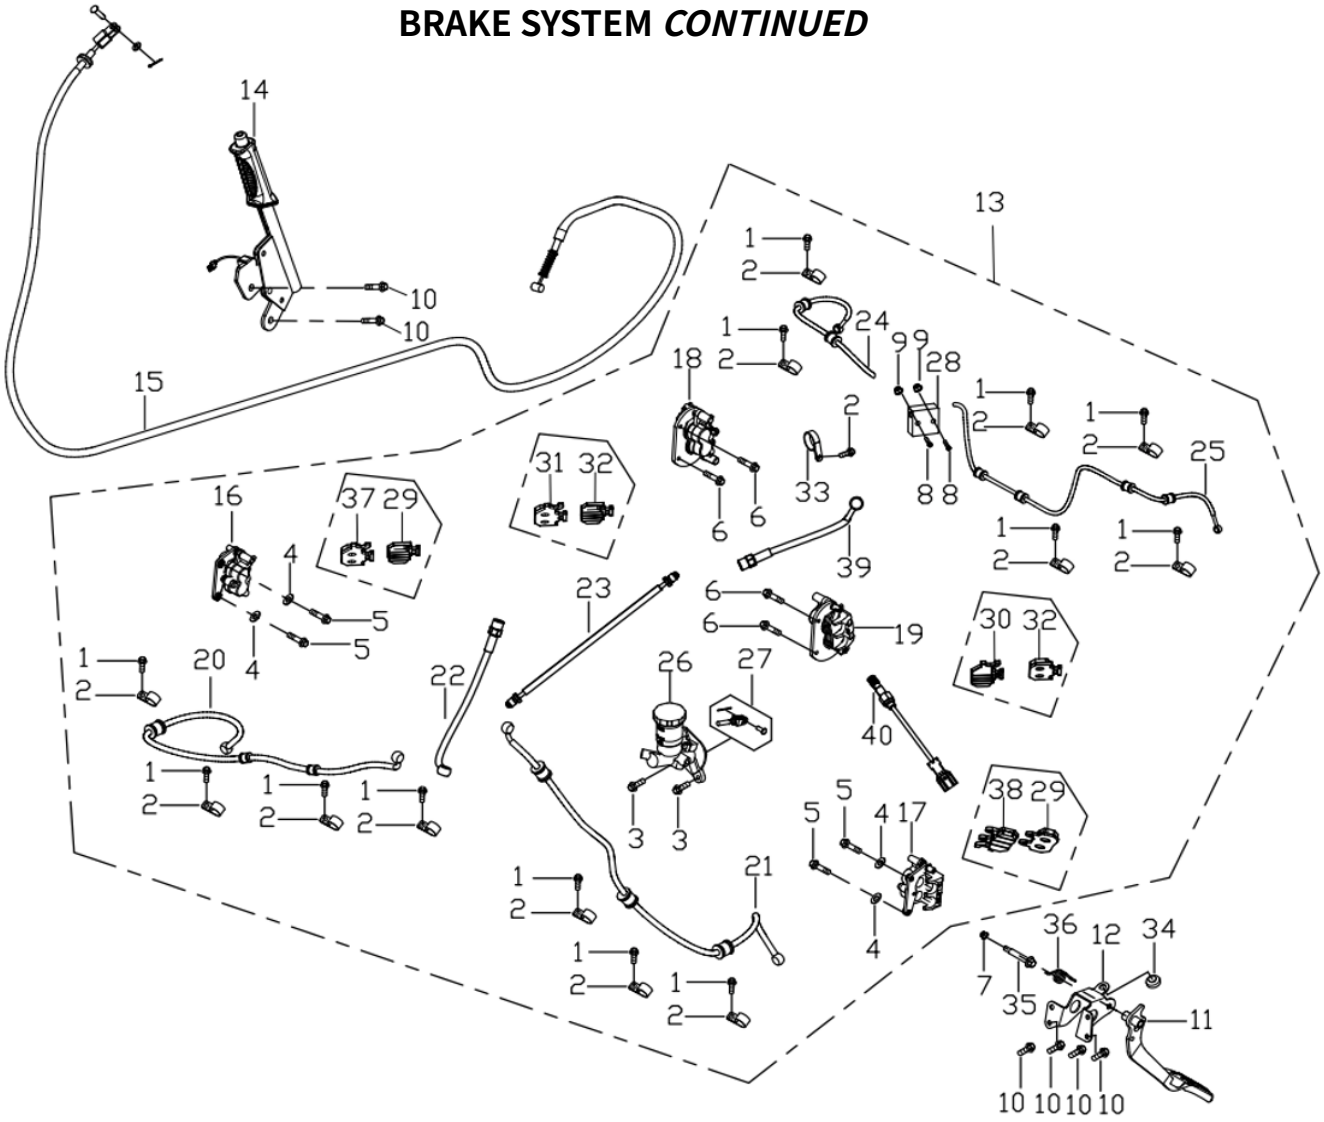

No.	Part Number	Description	Pieces
21	TSK0443000E	Front Left Brake Hose Assembly	1
22	TSK0443000D	Rear Brake Master Cylinder Hose Assembly	1
23	TSK0443000C	Steel Pipe Assembly	1
24	TSK0443000A	Rear Right Brake Hose Assembly (Flexible/Soft Brake Hose)	1
25	TSK0443000	Rear Left Brake Hose Assembly (Flexible/Soft Brake Hose)	1
26	TSK0341000A	Brake Master Cylinder Assembly	1
27	TSK0341000A-01	Front Master Pump Copper Pipe Assembly	1
28	TSK0340013	Tee Connector	1
29	TSK0352015	Inner Brake Shoe	2
30	TSK0442016L	Outer Brake Shoe	1
31	TSK0442016R	Outer Brake Shoe	1
32	TSK0442015	Inner Brake Shoe	2
33	10109380010	Wire Harness Mounting Clamp 1 φ14	1
34	10710150170	Dump Bed Rubber Rubber φ14Xφ25X16	1
35	01824081506	Hex Flange Step Bolt M8	1
36	16106030021	Brake Pedal Return Spring	1
37	TSK0352016R	Outer Brake Shoe	1
38	TSK0352016L	Outer Brake Shoe	1
39	TSK0443000B	Rear Brake Tee Connector Hose Assembly	1
40	TSK0440011	Hydraulic Switch	1


FRONT PANEL IMAGE

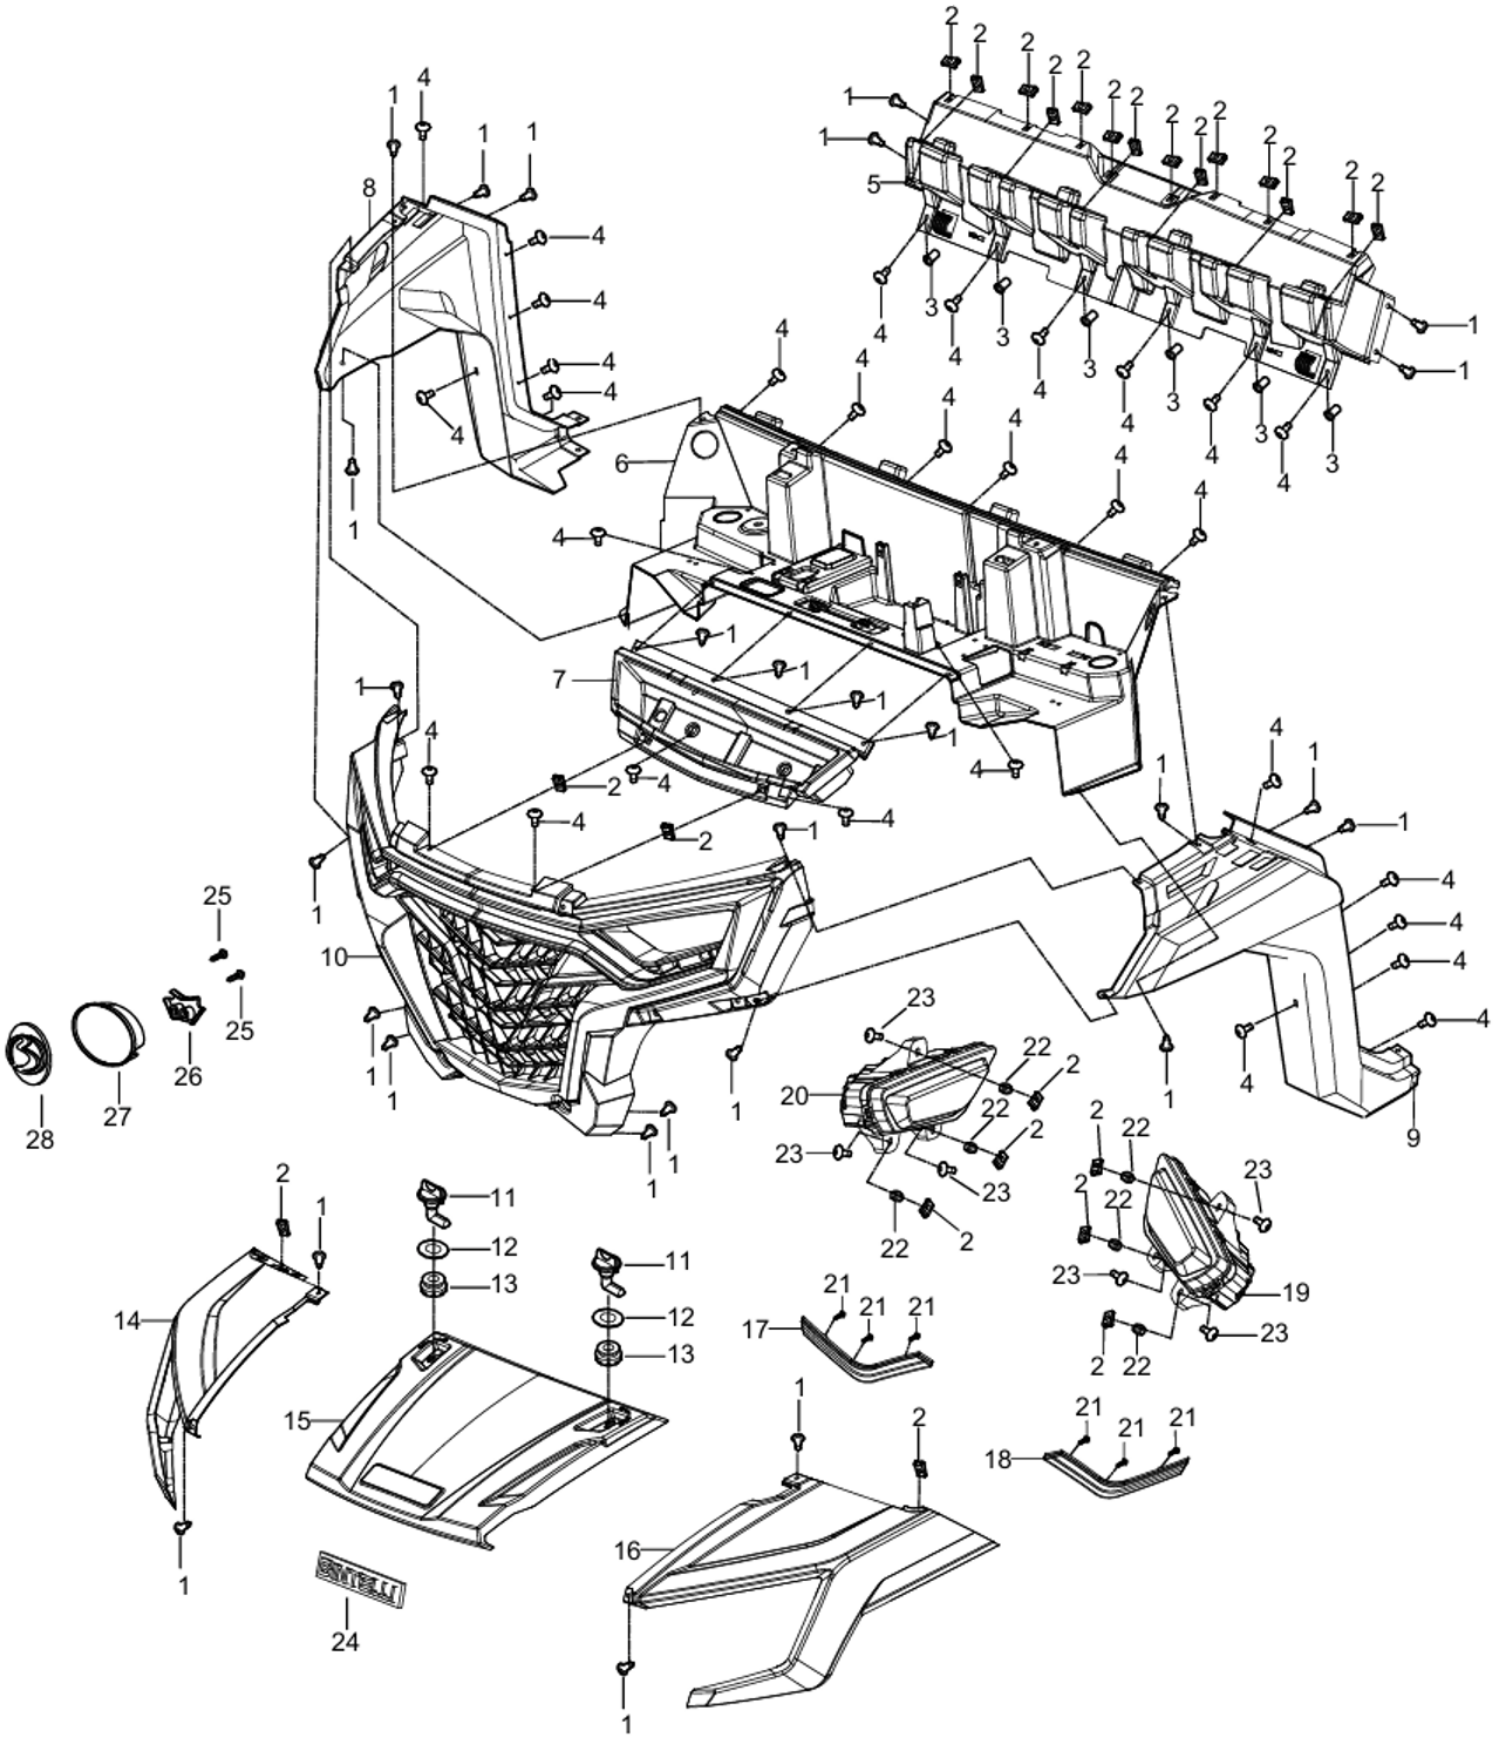

FRONT PANEL PART NUMBERS


No.	Part Number	Description	Pieces
1	10410190000	Push Pin M8X15	20
2	04922060024	Plate Nut ,Long M6	21
3	04512060127	Rivet Nut M6	8
4	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	29
5	19310270180	Dashboard Bracket	1
6	19310270190	Front Panel Liner	1
7	19310340350	Liner Plate Storage Box	1
8	16810290040	Front Guard Plate,RH	1
9	16810290030	Front Guard Plate,LH	1
10	19310200060	Front Headlight Cover	1
11	16110260130	Rotation Switch	2
12	06219162205	Washer φ16×φ22×2	2
13	16108150080	Hood Rubber Washer	2
14	19310160470	Front Panel (Right) (Titanium Gray)	1
14	19310160820	Front Panel (Right) (Obsidian Black)	1
15	19310160480	Front Panel (Middle) (Titanium Gray)	1
15	19310160830	Front Panel (Middle) (Obsidian Black)	1
16	19310160460	Front Panel (Left) (Titanium Gray)	1
16	19310160810	Front Panel (Left) (Obsidian Black)	1
17	19309450020	Front Position Light,RH	1
18	19309450010	Front Position Light,LH	1
19	18809060030	Led Headlight, LH	1
20	18809060040	Led Headlight, RH	1
21	03714550125	Tapping Screws St5.5X12	6
22	16809060420	Front Headlight Spring	4
23	03414060304	Inner Hexalobular Socket Pan Head Screws M6×30	6
24	19310030210	Letter long logo	1
25	03714420165	Tapping Screws St4.2×16	2
26	19310030030	LOGO base plate	1
27	19313040690	LOGO base	1
28	19313040680	Bintelli circular logo	1

DASHBOARD COMPONENTS

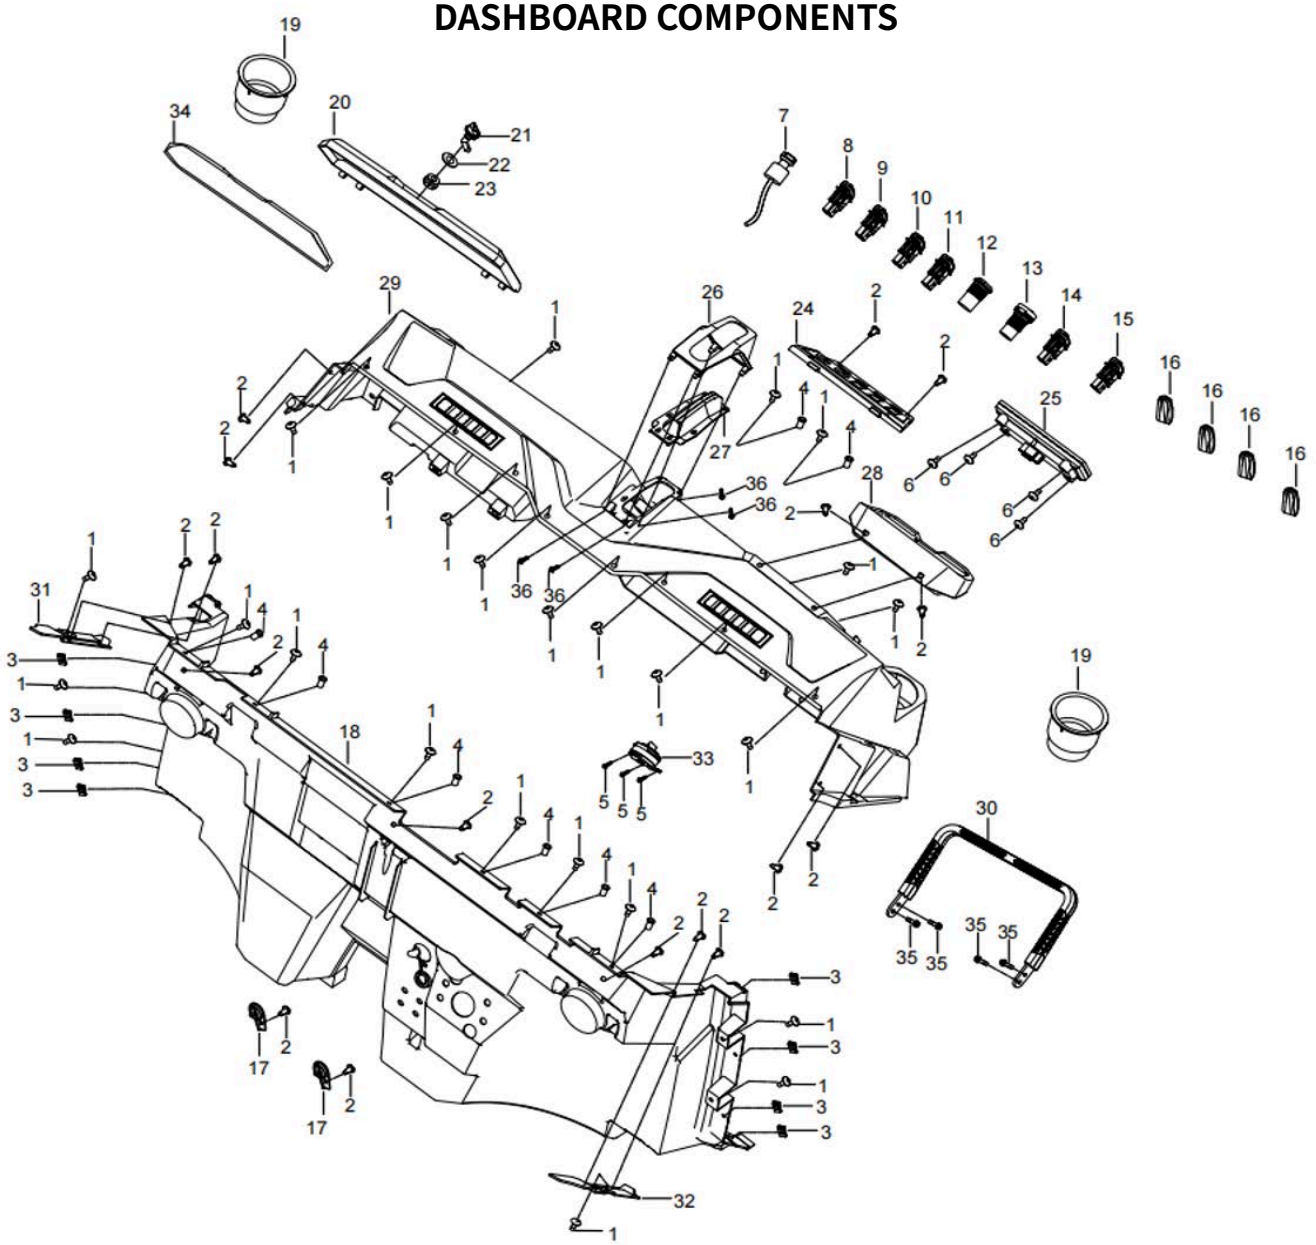


No.	Part Number	Description	Pieces
1	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	23
2	10410190000	Push Pin M8X15	33
3	04922060024	Plate Nut ,Long M6	14
4	04512060127	Rivet Nut M6	8
5	03714420125	Tapping Screws St4.2X12	7
6	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	4
7	17709040000	Ignition Switch	1
8	16809190030	Switch Of Horn	1
9	16809310000	Hazard Switch	1
10	16809190020	Turn Signal Switch	1
11	16809190150	Towing Machine Switch	1
12	13609300001	Power Socket	1
13	19309300010	Usb Socket	1
14	16809190010	Headlight Switch	1
15	16809190390	Position Light Switch	1
16	001-EL-3700-0830-00	Decorative Panel	4
17	16810650000	Throttle Cable Decorative Cover	1
18	19310580000	Front Inner Fender	1

DASHBOARD COMPONENTS *CONTINUED*

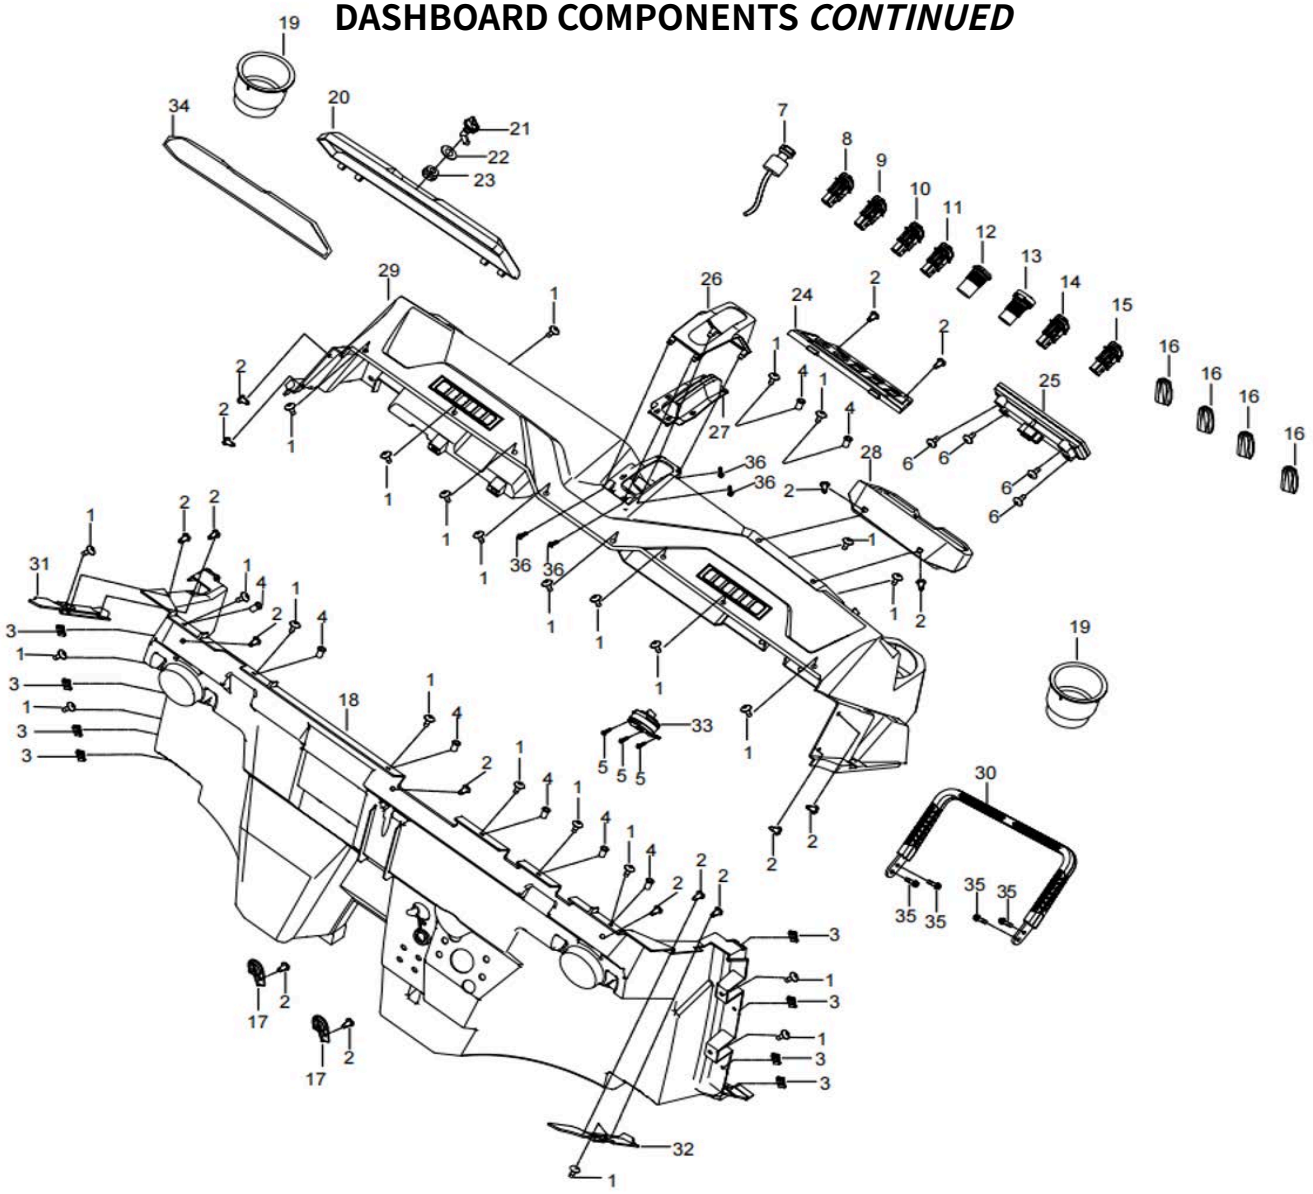


No.	Part Number	Description	Pieces
19	16810350010	Cup Holder	2
20	16810630020	Storage Box Cover	1
	19310630270	Storage Box Cover	1
21	16110260130	Rotation Switch	1
22	06219162205	Washer φ16×φ22×2	1
23	16108150080	Hood Rubber Washer	1
24	19310270060	Switch Service Cover	1
25	19309160130	Dash Display	1
26	19306010870	Parking Brake Lining Press Plate	1
27	19306010880	Parking Brake Lining	1
28	19309160070	Instrument Cover	1
29	19310270000	Dash Board	1
30	16808100000	Passenger Armrest	1
31	16810380020	Front Inner Fender Right Small Cover	1
32	16810380010	Front Inner Fender Left Small Cover	1
33	16709320000	2Wd/4Wd Switch	1
34	17010630030	Storage Box Seal Strip	1
35	01214080205	Hex Flange Bolt M8X20	4
36	03714420165	Tapping Screws St4.2×16	4

REAR MUDGUARD AND FOOTBOARD (TWO DOOR)

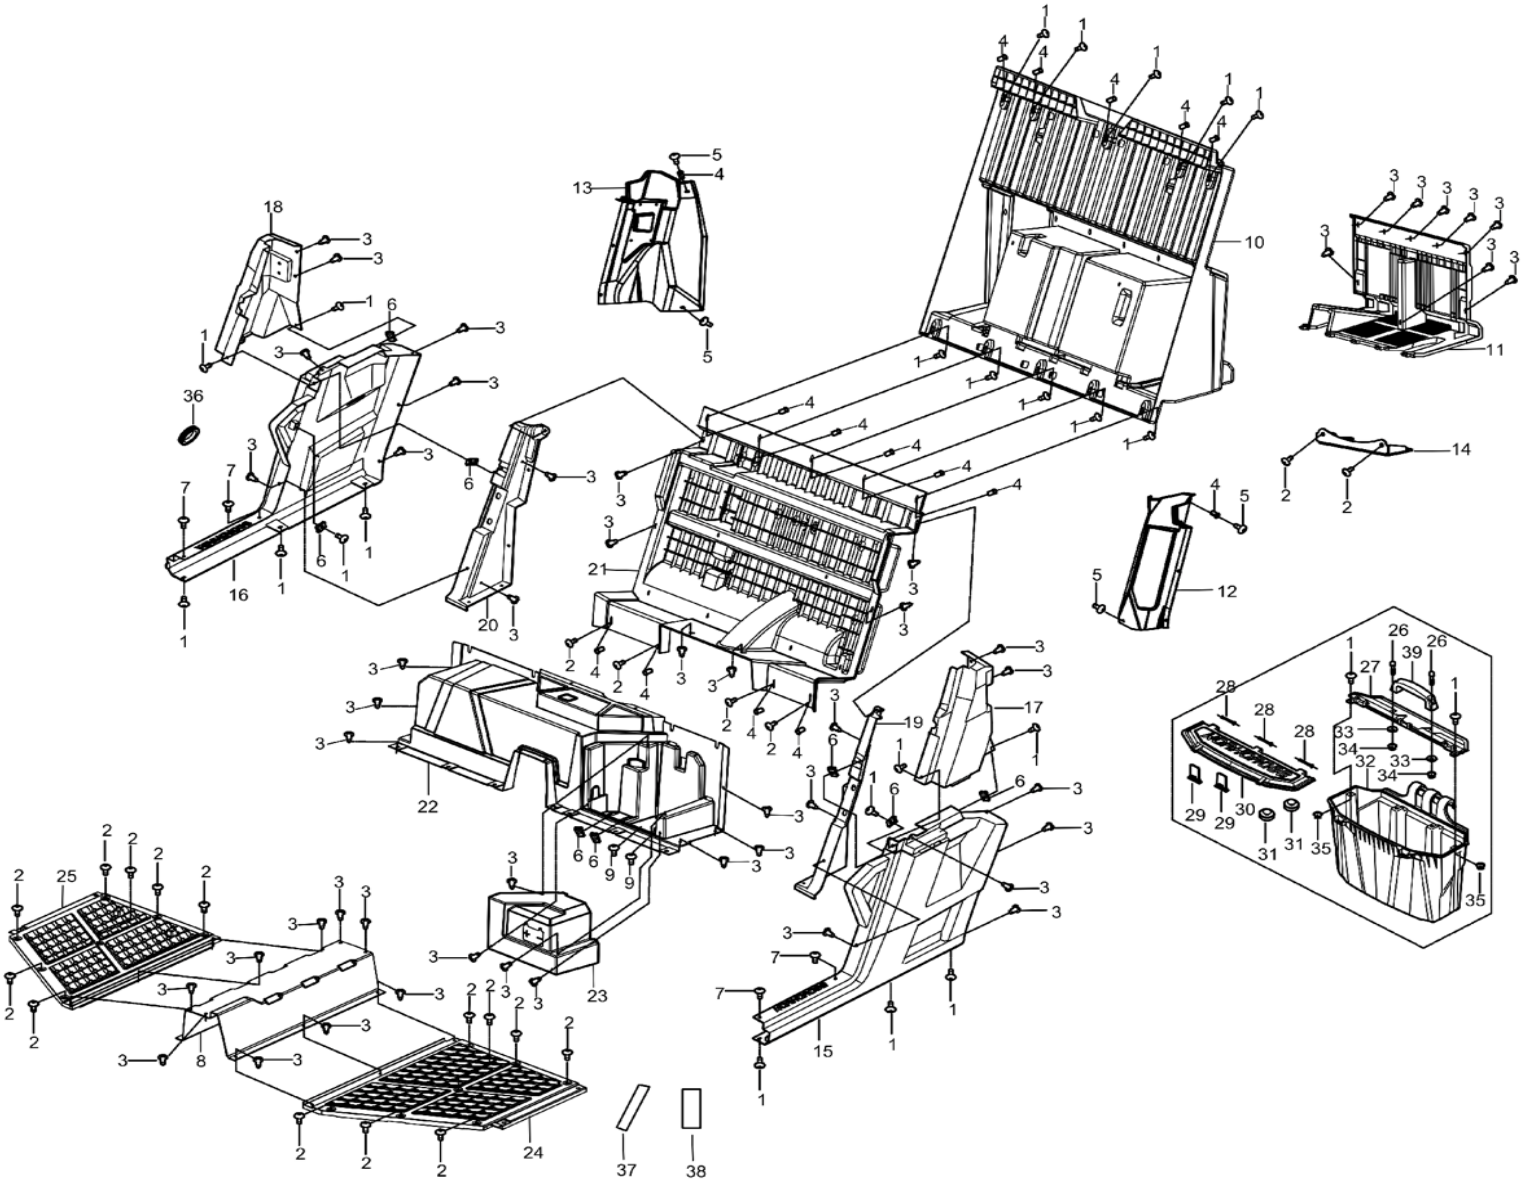


No.	Part Number	Description	Pieces
1	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	20
2	03414060204	Inner Hexalobular Socket Pan Head Screws M6×20	22
3	10410190000	Push Pin M8X15	50
4	04512060127	Rivet Nut M6	14
5	03414060104	Inner Hexalobular Socket Pan Head Screws M6X10	4
6	04922060024	Plate Nut ,Long M6	8
7	03414060254	Inner Hexalobular Socket Pan Head Screws M6×25	4
8	19310320100	Front Transmission Shaft Shield	1
9	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	2
10	19310280000	Seat Back Guard Plate	1
11	19307020200	Air filter intake guard cover	1
12	19310330031	Rear Mudguard,LH	1
13	19310330041	Rear Mudguard,RH	1
14	19309010160	Fuse Box Mounting Plate	1
15	16810290111	LH Lower Rear Side Panel Outer	1
16	16810290121	RH Lower Rear Side Panel Outer	1
17	16810290150	LH Upper Rear Side Panel	1
18	16810290160	RH Upper Rear Side Panel	1
19	16810290050	Rear Side Panel Inner,LH	1

REAR MUDGUARD AND FOOTBOARD (TWO DOOR) *CONTINUED*

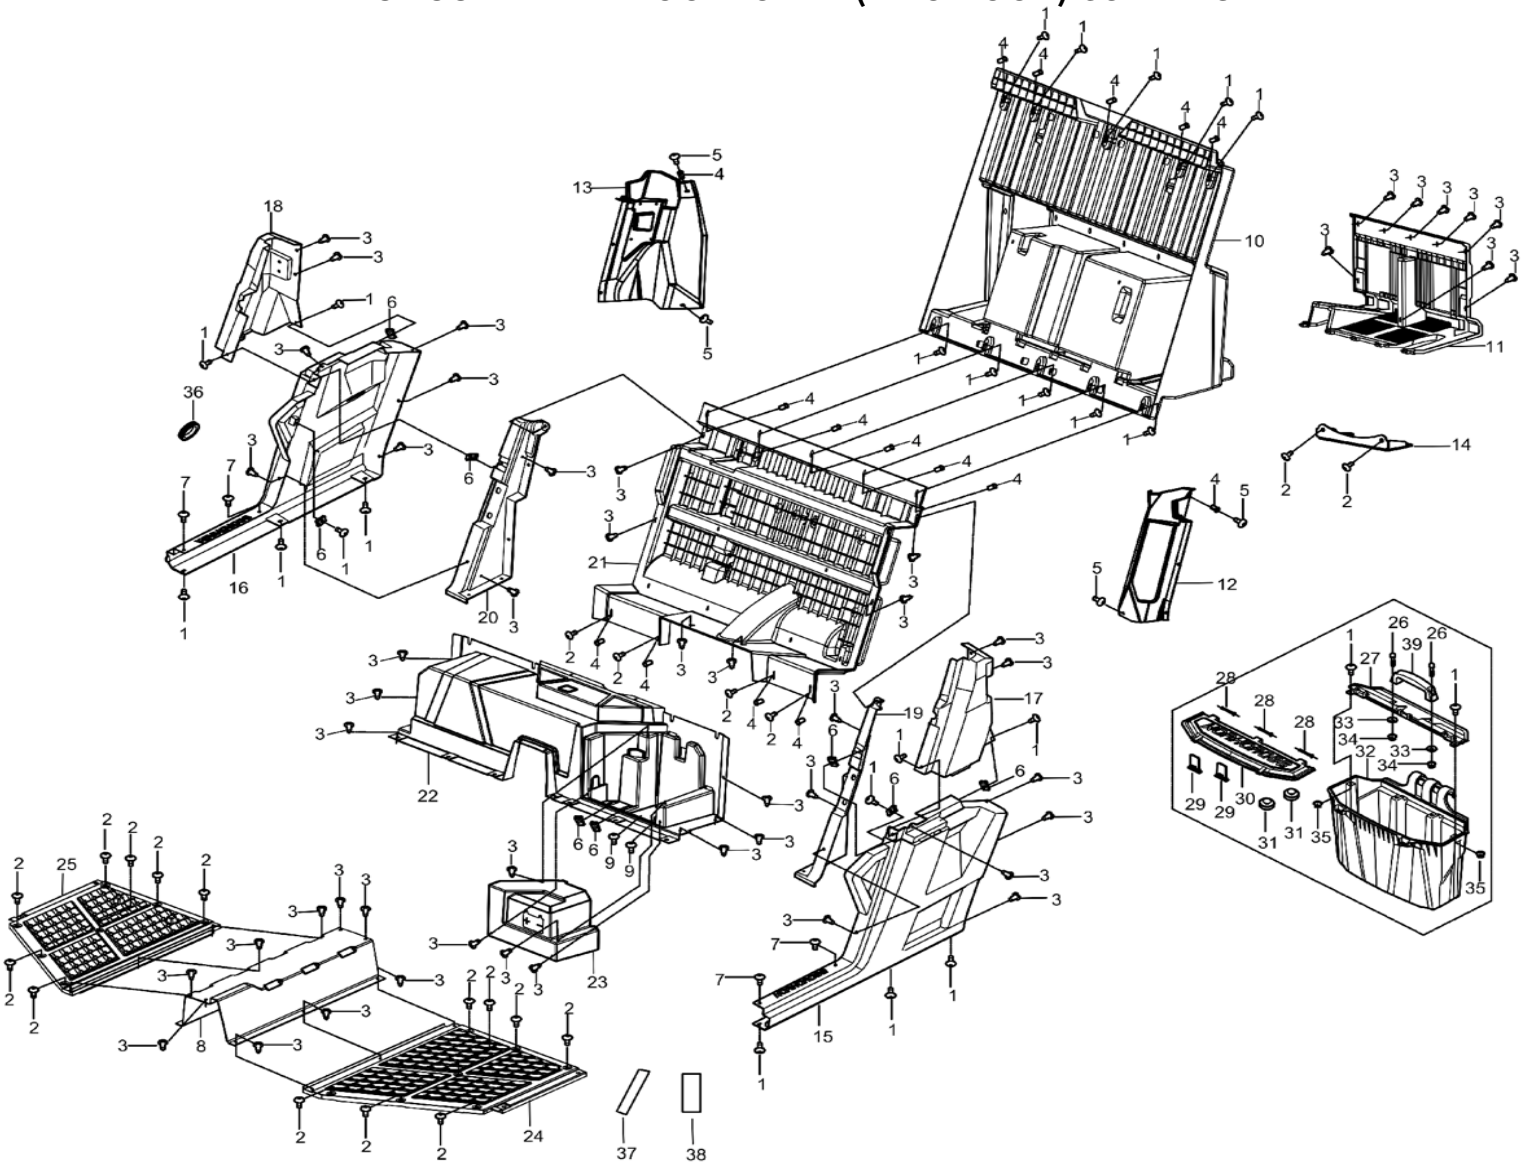


No.	Part Number	Description	Pieces
20	16810290060	Rear Side Panel Inner , RH	1
21	19310280030	Seat Back Guard Plate	1
22	19309090130	Seat Bottom Guard Plate	1
23	19309090040	Battery Cover	1
24	19310080010	Front Foot Pedal, LH	1
25	19310080020	Front Foot Pedal, RH	1
26	03344080255	Hexagon Socket Cap Screws M8×25	2
27	16810630160	Storage Box Cover 1	1
28	16814210060	Rear Trunk Pin	3
29	16810410040	Storage Box Cover Trim	2
30	16810630151	Storage Box Cover 2	1
31	16810630210	Cargo Box Bottom Rubber	2
32	16710630010	Storage Box	1
33	06119091605	Washer φ8.5×φ16×1.5	2
34	04612080026	Hex Flange Locking Nut M8	2
35	04612060026	Hex Flange Locking Nut M6	2
36	17004020010	Fuel Tank Opening Rubber Gasket	1
37	19310080060	Foot Pedal Shock Absorber Pad 2	4
38	19310080050	Foot Pedal Shock Absorber Pad 1	11
39	16614100050	Handle	1

FRONT WINCH AND BUMPER

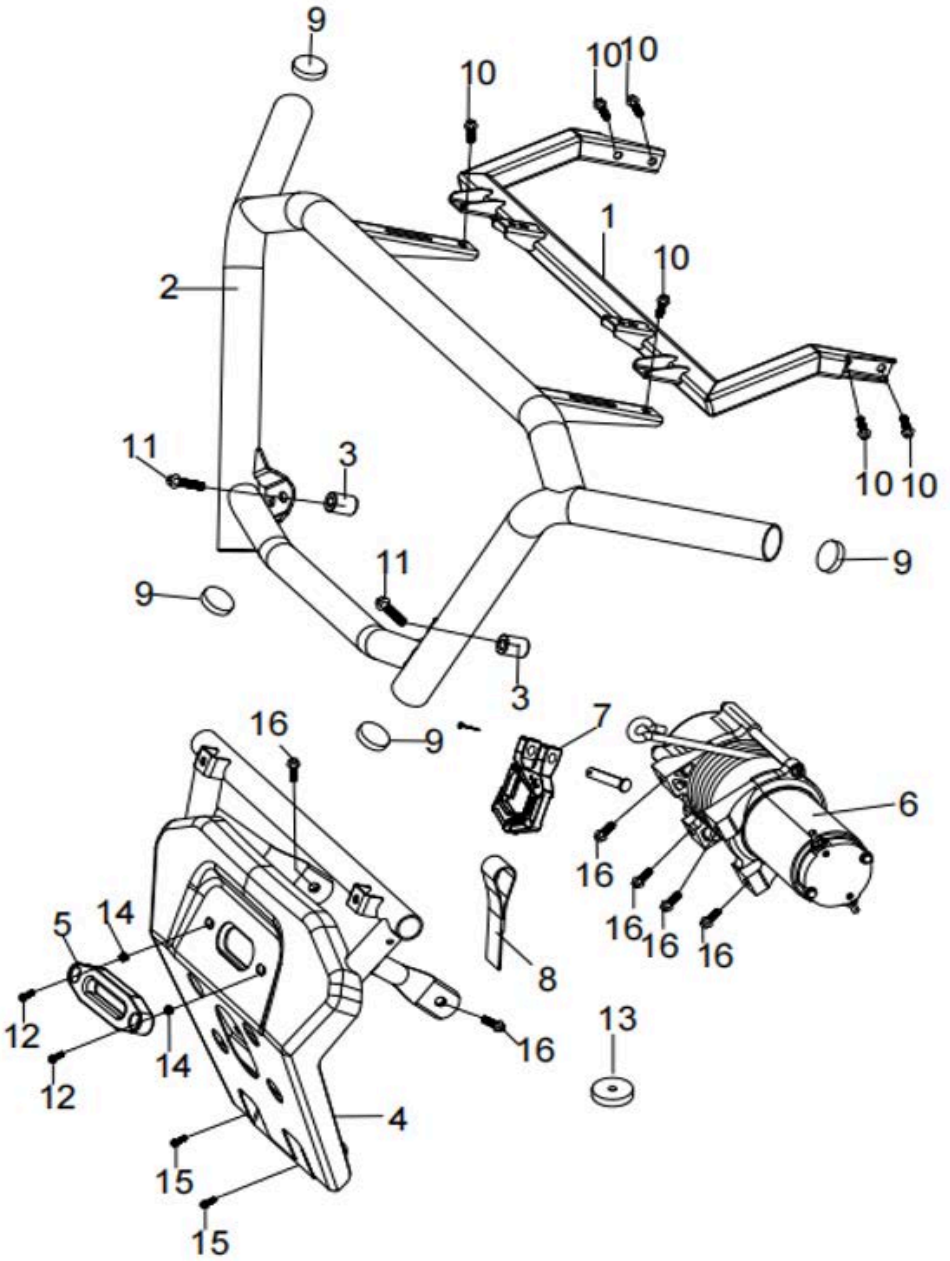

No.	Part Number	Description	Pieces
1	19308110030	Mount bracket on front bumper	1
2	19308110000	Front bumper	1
3	16808110220	Front Bumper Mounting Sleeve	2
4	19308860000	Traction machine support	1
5	19414170030	Winch Front Roller Bracket	1
6	17314150111	Front Winch Body, 3500XLbs,Nylon Wire	1
7	10914150081	Hook	1
8	10914150090	Anchor Rope	1
9	16108110010	Front Bumper Plug	4
10	01224080166	Hex Flange Bolt M8×16	12
11	01214080456	Hex Flange Bolt M8x45	2
12	03344080254	Hex Socket Head Cap Screw	2
13	17014160100	Winch Protection Pad	1
14	04612080024	Hex Flange Locking Nut M8	2
15	01256100206	Hex Flange Bolt M10X20X1.25	2
16	01224080206	Hex Flange Bolt M8×20	6


CARGO BOX IMAGE

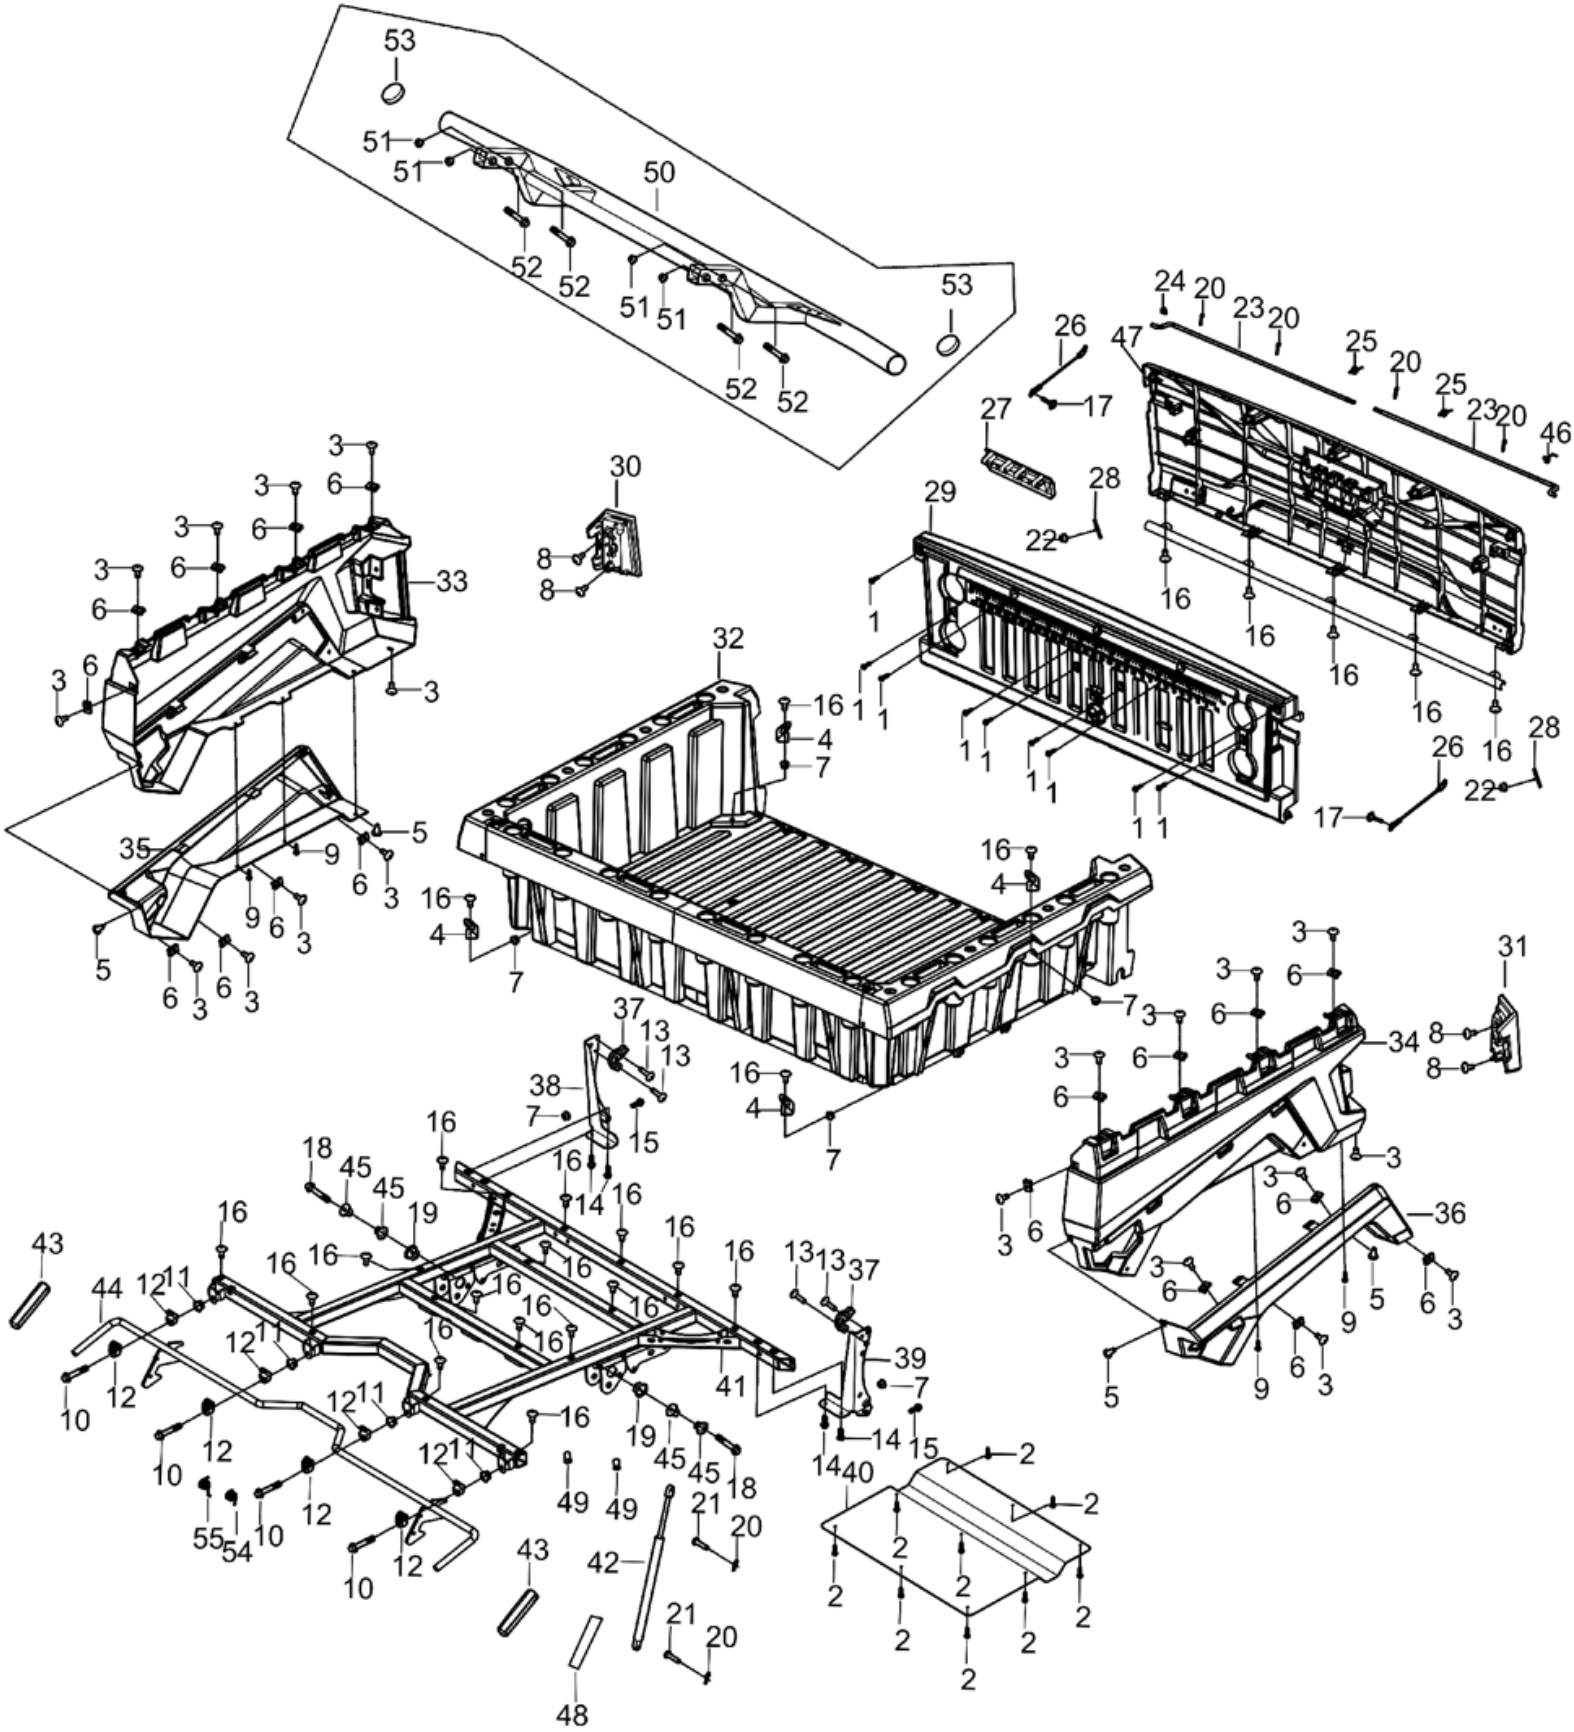

CARGO BOX PART NUMBERS

No.	Part Number	Description	Pieces
1	03714550404	Hexagonal Head Self-Tapping Screw	9
2	03714550164	Hexagonal Head Self-Tapping Screw	9
3	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	13
4	16810150180	Cargo Hook Ring	4
5	10410190000	Push Pin M8X15	4
6	04922060024	Plate Nut ,Long M6	18
7	04612060026	Hex Flange Locking Nut M6	4
8	01224050125	Hex Flange Bolt M5X12	4
9	03734550164	Hexagonal Head Self-Tapping Screw	4
10	01214080456	Hex Flange Bolt M8×45	4
11	04612080026	Hex Flange Locking Nut M8	4
12	16810151770	Cargo Handle Fixing Block	8
13	03414060404	Inner Hexalobular Socket Pan Head Screws M6×40	4
14	01224080206	Hex Flange Bolt M8×20	4
15	01254060166	Hex Flange Bolt M6×16	2
16	03414060204	Inner Hexalobular Socket Pan Head Screws M6×20	24
17	03464060304	Hexagon Socket Countersunk Step Bolt	2
18	01256120756	Hex Flange Bolt M12X75X1.25	2
19	04622120026	Hex Flange Locking Nut M12X1.25	2
20	16810151780	R Pin	6
21	10908410020	Dumo Bed Lower Fixation Pin	2
22	04112050025	Hex Flange Locking Nut M5	2
23	19310150010	Cargo Box Door Lock Latch	2
24	16810151370	Cargo Box Door Switch Limiting Spring,RH	1
25	16810150050	Cargo Box Door Switch Torsion Spring	2
26	16810150150	Dump Bed Wire Rope	2
27	16810150800	Cargo Box Rear Door Lock Handle	1
28	13609180080	Reflector (Rectangular Red)	2
29	19310150060	Cargo Box Rear Door Floor	1
30	16809070021	Rear Tail Light,RH	1
31	16809070011	Rear Tail Light Left	1
32	19310150030	Rear Cargo Box Floor	1
33	19310151180	Cargo Box Guard (Right) (Titanium Gray)	1
	19310151940	Cargo Box Guard (Right) (Obsidian Black)	1
34	19310151170	Cargo Box Guard (Left) (Titanium Gray)	1
	19310151930	Cargo Box Guard (Left) (Obsidian Black)	1
35	19310110000	Rear Fender,RH	1
36	19310100000	Rear Fender,LH	1
37	16810151760	Cargo Box Door Lock Latch	2
38	16810151570	Rear Tail Light Mounting Bracket ,RH	1
39	16810151560	Rear Tail Light Mounting Bracket,LH	1
40	19301120120	Cargo Box Heat Plate	1
41	19308710000	Cargo Box Frame	1
42	19310150100	Dump Bed Air Springs	1
43	16110150070	Dumm Bed Handrail Rubber Sleeve	2
44	19310150140	Dumm Bed Handrail Rubber Sleeve	1
45	14610470070	Rotating Shaft Nylon Sleeve	4
46	16810151360	Cargo Box Door Switch Limiting Spring ,LH	1
47	19310150300	Cargo Box Rear Door Panel	1
48	19310080060	Foot Pedal Shock Absorber Pad 2	8
49	04512080127	Hexagonal Riveting Nut M8	2
50	19308350010	Rear Bumper	1
51	01256100656	Hex Flange Bolt M10×65×1.25	4
52	04622100026	Hexagon Flange Locking Nut M10X1.25	4
53	16108110010	Front Bumper Plug	2
54	16810150440	Cargo Handle Limiting Spring ,LH	1
55	16810150450	Cargo Handle Limiting Spring ,RH	1

ELECTRICAL COMPONENTS

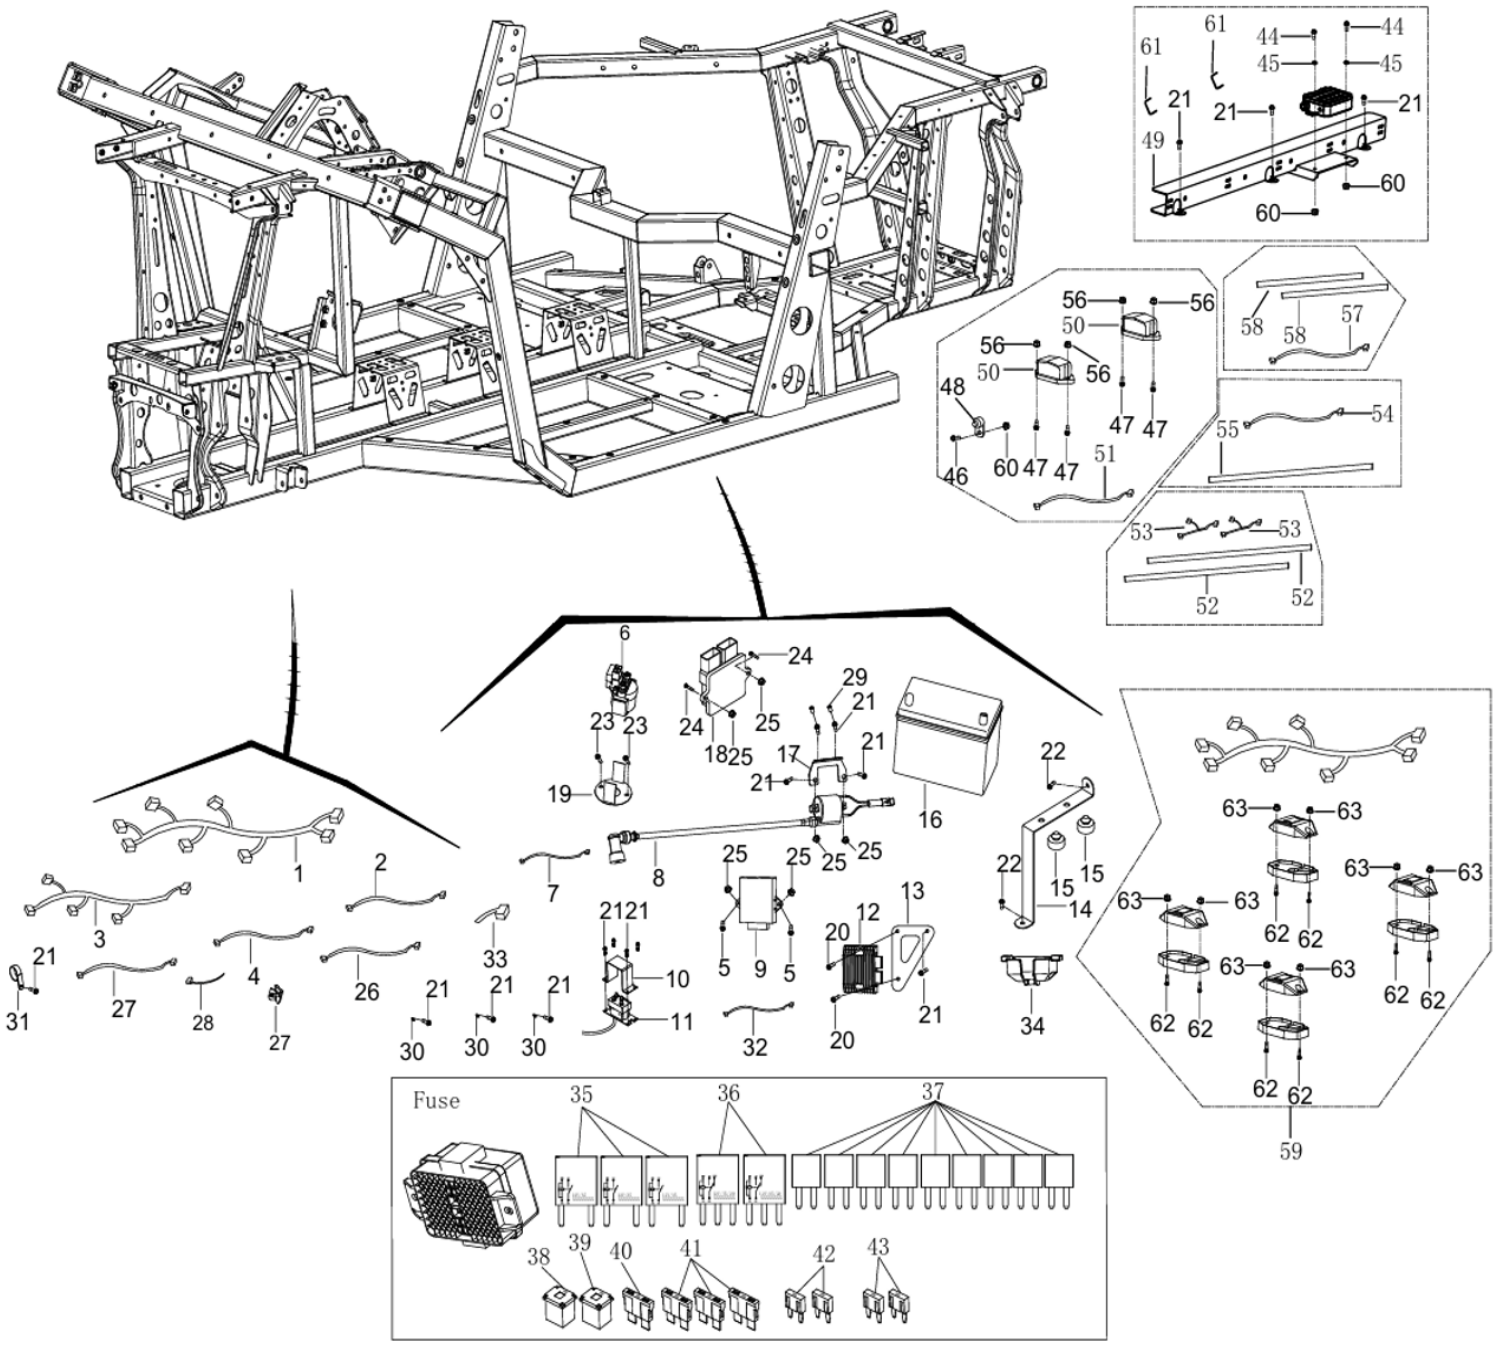


No.	Part Number	Description	Pieces
1	19309010560	Wiring Harness	1
2	19309410001	Engine Wire Harness	1
3	19309210000	Voltage Regulator Power Cord	1
	19309010100	Negative Cable	1
4	16809010130	Starter Wire Harness	1
5	01214060456	Hex Flange Bolt M6×45	2
6	18809350000	Starter Relay	1
7	18809010090	Starting Motor Line	1
8	19302230010	Ignition Coil	
9	19309370010	Body Control Module	1

ELECTRICAL COMPONENTS CONTINUED


No.	Part Number	Description	Pieces
10	10914150010	Winch Controller Box Cap	1
11	19314150340	Winch Relay And Wire Assy	1
12	21170103504	Voltage Regulator	1
13	19309210010	Regulator Mounting Plate	1
14	19309090200	Battery Fixing Plate	1
15	10114090430	Cargo Box Bottom Rubber	1
16	1A109090000	Battery	1
17	19309220010	Ignition Coil Mounting Plate	1
18	19302200000	ECU (Unlimited Speed)	1
19	19309010310	Starter Relay Bracket	1
20	01254060306	Hex Flange Bolt 6x30	2
21	01254060166	Hex Flange Bolt M6×16	16
22	01254060206	Hex Flange Bolt M6×20	1
23	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	6
24	03414060254	Inner Hexalobular Socket Pan Head Screws M6X25	2
25	04612060026	Hex Flange Locking Nut M6	6
26	16809070230	Negative Iron Wire	1
27	90103040053	Fixed Clip	50
28	90103040052	Nylon Cable Tie	30
29	04512060127	Rivet Nut M6	2
30	06819060004	External Tooth Washer	3
31	14612080000	Clip φ36	1
32	19314150060	Towing Machine Relay Power Cord	1
33	17309160280	Vehicle Departure Alarm Terminal Connector	1
34	16809010320	Fuse Box Cover	1
35	16809010410	Relay (4-Claw)-30A	3
36	16809010420	Relay (5-Claw)-30A	2
37	16809010400	Relay (4-Small Claw)-20A	9
38	16809010530	Slow Melting Fuse-40A	1
39	17009010510	Fuse-20A	1
40	10909010040	Fuse-15A	1
41	10909010070	Fuse-20A	3
42	004-EL-3700-2114-03	Fuse-10A	2
43	004-EL-3700-2114-04	Fuse-15A	2
44	03344040105	Hexagon Socket Cylindrical Head Screw M4×10	2
45	06119040905	Flat Washer 4×9×1	2
46	03144040165	Cross Recessed Pan Head Screw M4×16	1
47	03144050205	Cross Recessed Pan Head Screw M5×20 (Army Green)	4
48	16809540020	Cargo Box Door Light Control Switch	1
49	19309010300	Wiring Harness Bracket	1
50	16809280190	Cargo Box Door Light	2
51	16809280200	Cargo Box Door Light Connecting Harness	1
52	19309280250	Grille Ambient Light	2
53	19309280260	Grille Ambient Light Adapter Cable	2
54	16809280220	Rear Cargo Box Ambient Light Adapter Cable	1
55	19309280210	Rear Cargo Box Ambient Light	1
56	04112050025	Hexagon Flange Nut M5 (Army Green)	4
57	16809280240	Roof Ambient Light Connecting Cable	1
58	16809280230	Roof Ambient Light	2
59	16809280180	Chassis Light (with Remote Control)	1
60	04212040025	Hexagon Lock Nut M4	3
61	16510340140	Windshield Wiper Blade Sweep Strip	2
62	01224060165	Hex Flange Bolt M6x25	8
63	04612060025	Hexagon Lock Nut M6	8

ENGINE

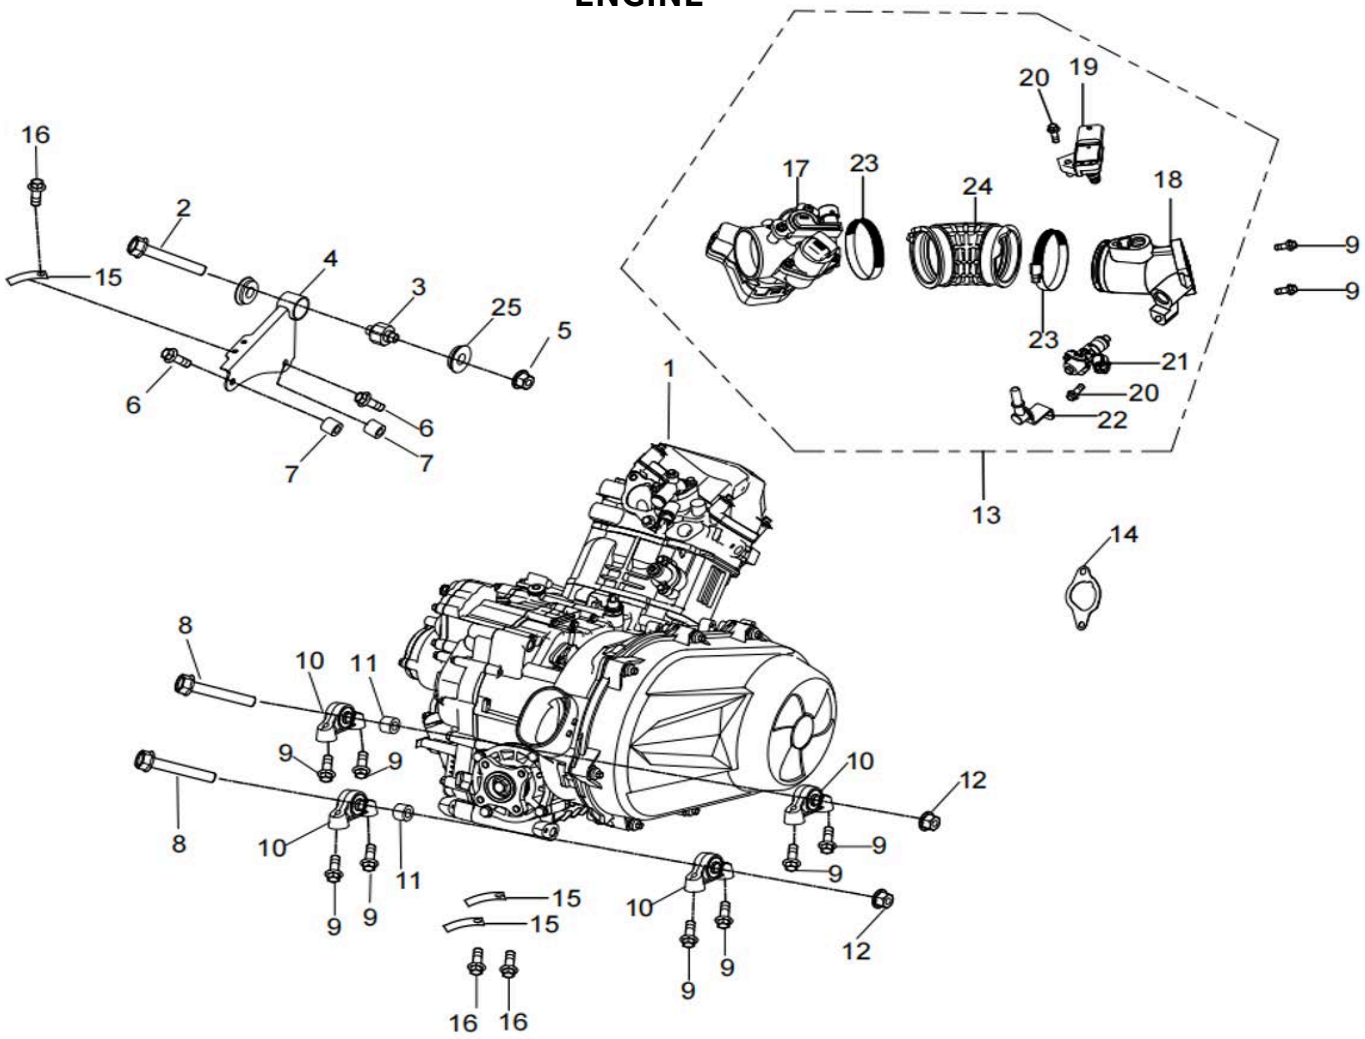

No.	Part Number	Description	Pieces
1	19302010000	Engine Assembly 500cc	1
2	01256100706	Hex Flange Bolt M10x70	1
3	21040401801	Upper Shock Absorber	1
4	19308040001	Engine Upper Mount	1
5	04622100026	Hex Flange Locking Nut M10x1.25	1
6	01256100356	Hex Flange Bolt M10X35X1.25	2
7	17705100140	Steering Gear Bushing	2
8	01256122406	Hex Flange Bolt M12X240X1.25	2
9	01214080205	Hex Flange Bolt M8X20	10
10	19302100010	Engine Lower Install buffer blocks	4
11	19302170010	Engine Mounting Bushing	2
12	04622120026	Hex Flange Locking Nut M12X1.25	2
13	19302190000	Engine Intake Pipe and Throttle Body Assembly	1
14	100096995	seal pad	1
15	21040402401	Wire holder	4
16	01254060166	Hex Flange Bolt M6×16	3
17	100814144	Component Of Throttle Body	1
18	100806048	Intake pipe	1
19	100750176	Pressure Sensor Of Intake Air	1
20	100011550-0008	Bolt, M8*20	2
21	100761844	Fuel injector	1
22	100822896	Injector Bracket	1
23	100079205	Intake pipe clamp	2
24	100809040	Inlet pipe rubber sleeve	1
25	10402070000	Engine Rubber	2


FRONT DOOR DRIVER'S SIDE LH (TWO DOOR) IMAGE

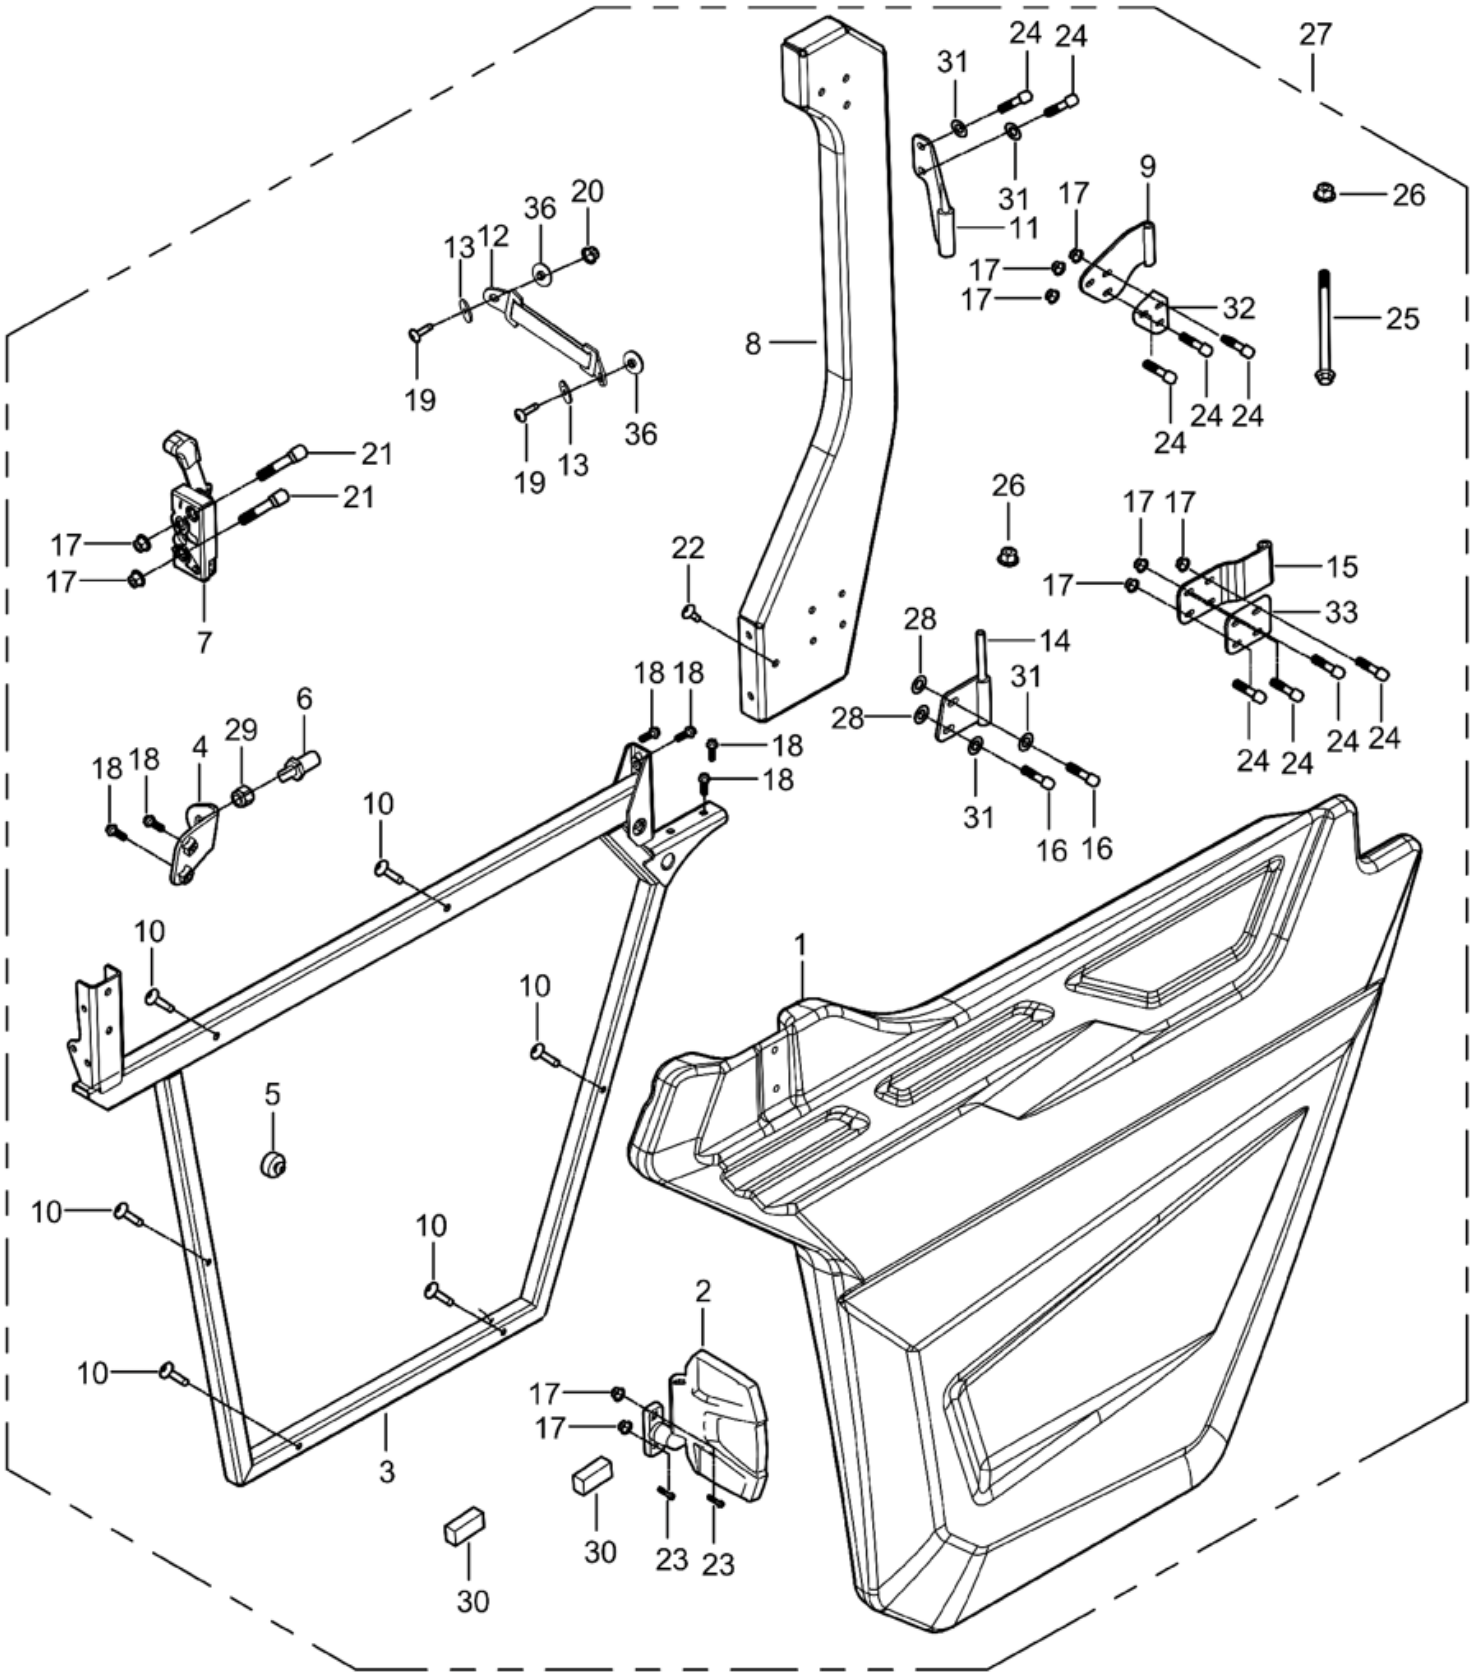

FRONT DOOR DRIVER'S SIDE LH (TWO DOOR) PART NUMBERS

No.	Part Number	Description	Pieces
1	16710340150	Front Half Door,LH	1
2	16805140000	Rear View Mirror,LH	1
3	16810340170	Front Half Door Bracket,LH	1
4	16810340511	Front Impact Mounting Plate ,LH	1
5	16710340250	Half Door Rubber Pad	1
6	16810340490	Door Striker	1
7	16810340080	Half Door Lock,LH	1
8	16810340220	Half Door Upper Fixed Bracket,LH	1
9	16810342020	RH Upper Front Door Upper Dynamic Hinge	1
10	03414060354	Inner Hexalobular Socket Pan Head Screws M6×35	6
11	16810342070	Rear Door Static Hinge ,Rear Upper Left	1
12	19310340300	Door Check Strap	1
13	19310340220	Door Check Strap Outer Bushing	2
14	16810342110	LH Lower Rear Door Static Hinge	1
15	16810340030	Half Door Lower Hinge	1
16	01214080254	Hexagon Flange Head Bolt M8X25	2
17	04612080024	Hexagon Flange Locking Nut	13
18	01224080166	Hex Flange Bolt M8×16	6
19	03414060254	Inner Hexalobular Socket Pan Head Screws M6×25	2
20	04612060026	Hex Flange Locking Nut M6	2
21	03324080405	Sunk Head Screw M8x40	2
22	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	1
23	03344080355	Countersunk Allen Screw M8X35	2
24	01214080204	Hex Flange Bolt M8X20	9
25	01214101554	Hex Flange Bolt M10×155×1.25	1
26	04612100024	Hex Flange Locking Nut M10×1.25	2
27	Z6810340130	Front Half Door Assembly,LH	1
28	06119093005	Washer φ20×φ8.5×3	2
29	04212120021	Hexagon Flange Nut M12×1.75	1
30	16710340590	Half-Door Lower Cushion Rubber Pad	2
31	06119051805	Washer φ5×φ18×1.5	2
32	16810342410	Hinge Flat Washer,Upper	1
33	16810342420	Hinge Flat Washer,Lower	1
34	16810342070	Rear Door Static Hinge ,Rear Upper Left	1
35	16810342110	LH Lower Rear Door Static Hinge	1
36	19310340200	Door Check Strap Outer Bushing(Half Door)	2


FRONT DOOR PASSENGER'S SIDE RH (TWO DOOR) IMAGE

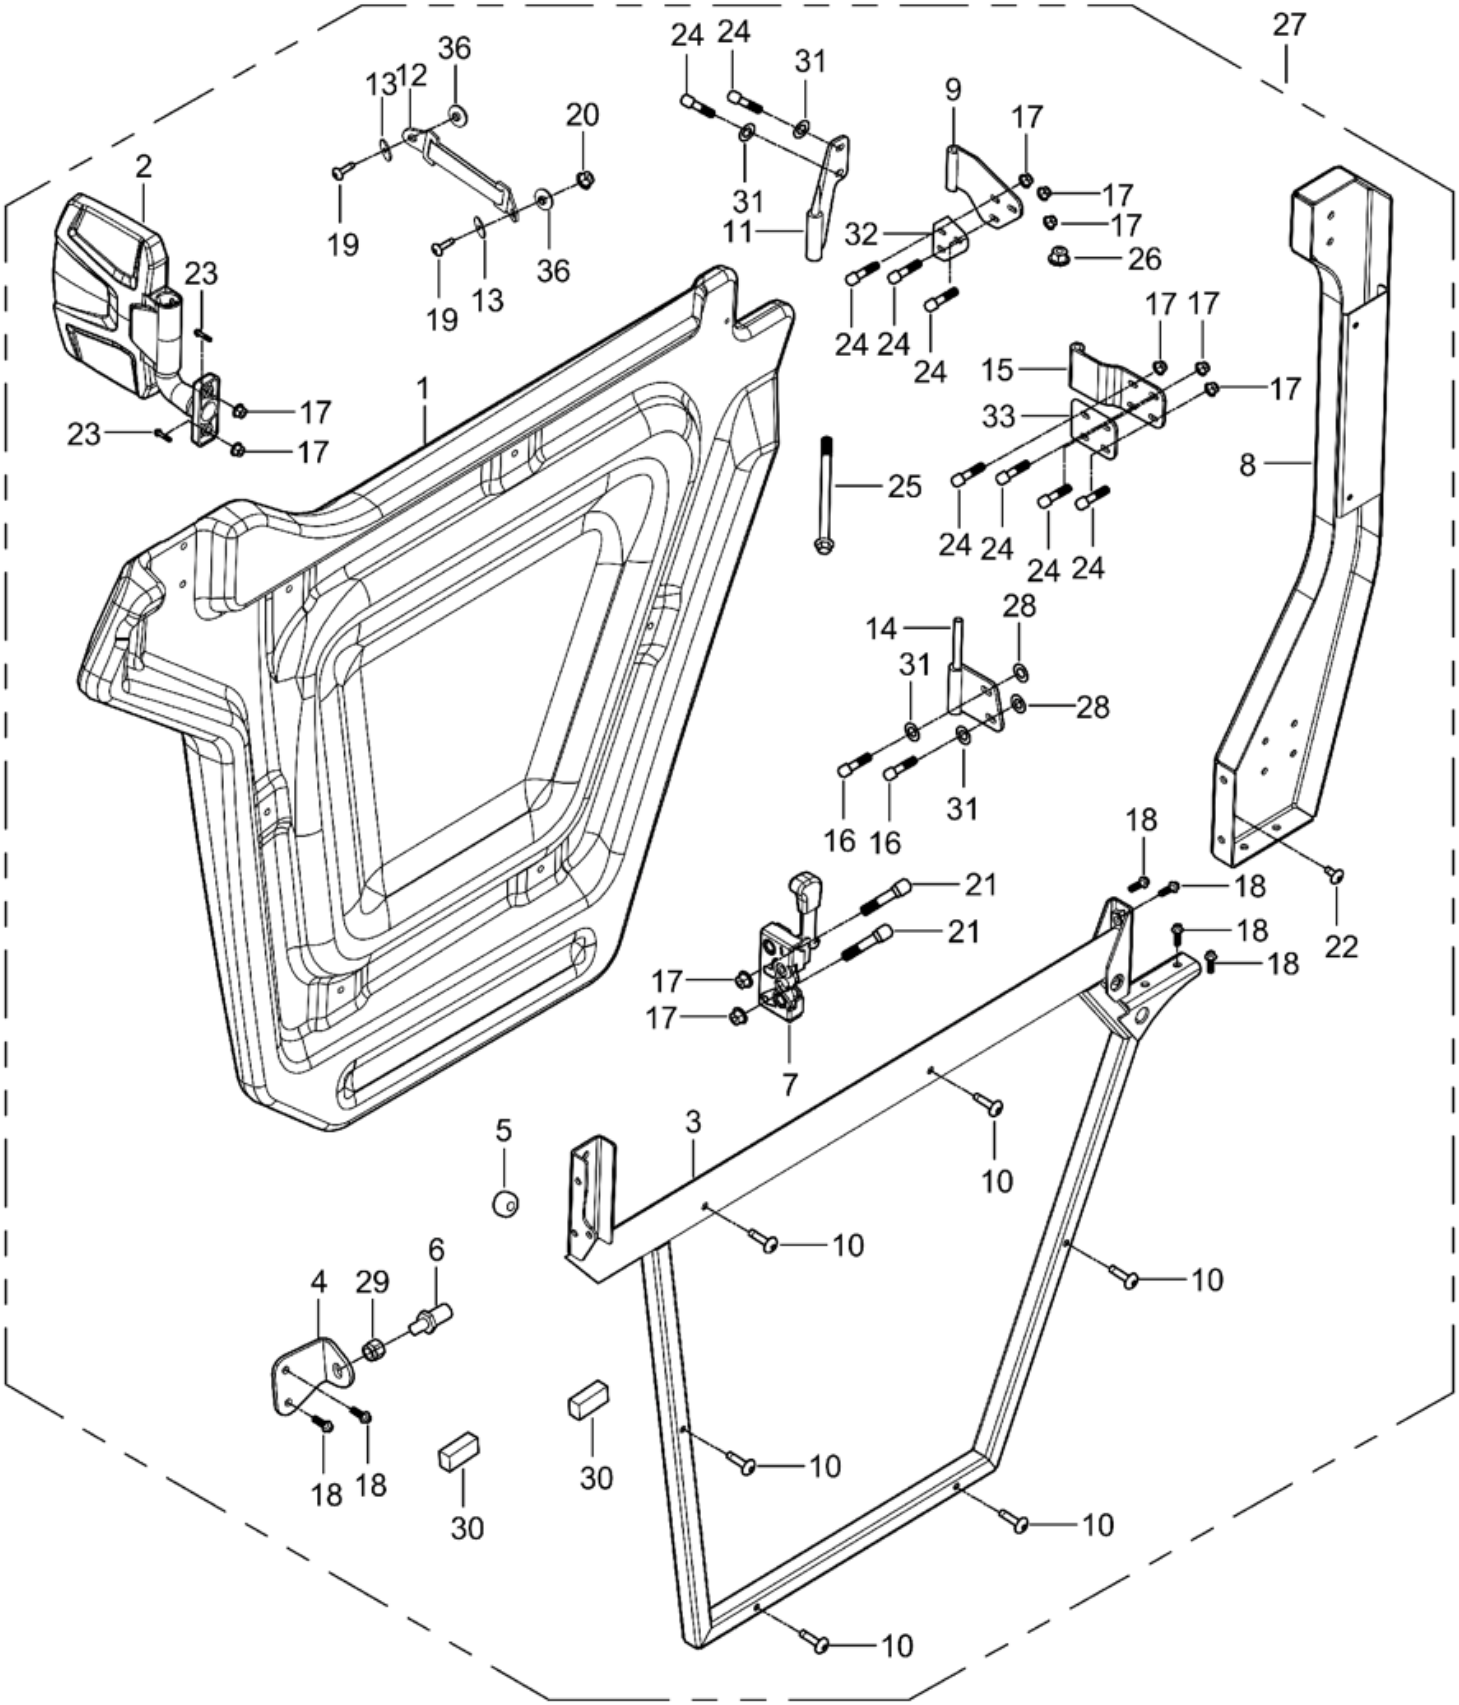

FRONT DOOR PASSENGER'S SIDE RH (TWO DOOR) PART NUMBERS

No.	Part Number	Description	Pieces
1	16710340160	Front Half Door,RH	1
2	16805150000	RH Rear View Mirror	1
3	16810340180	Front Half Door Bracket,RH	1
4	16810340521	Front Impact Mounting Plate,RH	1
5	16710340250	Half Door Rubber Pad	1
6	16810340490	Door Striker	1
7	16810340090	Half Door Lock,RH	1
8	16810340230	Half Door Upper Fixed Bracket,RH	1
9	16810342010	LH Upper Front Door Static Hinge	1
10	03414060354	Inner Hexalobular Socket Pan Head Screws M6×35	6
11	16810342070	Rear Door Static Hinge ,Rear Upper Left	1
12	19310340300	Door Check Strap	1
13	19310340220	Door Check Strap Outer Bushing	2
14	16810342120	RH Lower Rear Door Static Hinge	1
15	16810340030	Half Door Lower Hinge	1
16	01214080254	Hexagon Flange Head Bolt M8X25	2
17	04612080024	Hexagon Flange Locking Nut	13
18	01224080166	Hex Flange Bolt M8×16	6
19	03414060254	Inner Hexalobular Socket Pan Head Screws M6×25	2
20	04612060026	Hex Flange Locking Nut M6	2
21	03324080405	Sunk Head Screw M8x40	2
22	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	1
23	03344080355	Countersunk Allen Screw M8X35	2
24	01214080204	Hex Flange Bolt M8X20	9
25	01214101554	Hex Flange Bolt M10×155×1.25	1
26	04612100024	Hex Flange Locking Nut M10×1.25	2
27	Z6810340140	Front Half Door Assembly,RH	1
28	06119093005	Washer φ20×φ8.5×3	2
29	04212120021	Hexagon Flange Nut M12×1.75	1
30	16710340590	Half-Door Lower Cushion Rubber Pad	2
31	06119051805	Washer φ5×φ18×1.5	2
32	16810342410	Hinge Flat Washer,Upper	1
33	16810342420	Hinge Flat Washer,Lower	1
34	16810342070	Rear Door Static Hinge ,Rear Upper Left	1
35	16810342120	RH Lower Rear Door Static Hinge	1
36	19310340200	Door Check Strap Outer Bushing(Half Door)	2


FRONT AND REAR WINDOW (OPTIONAL) IMAGE

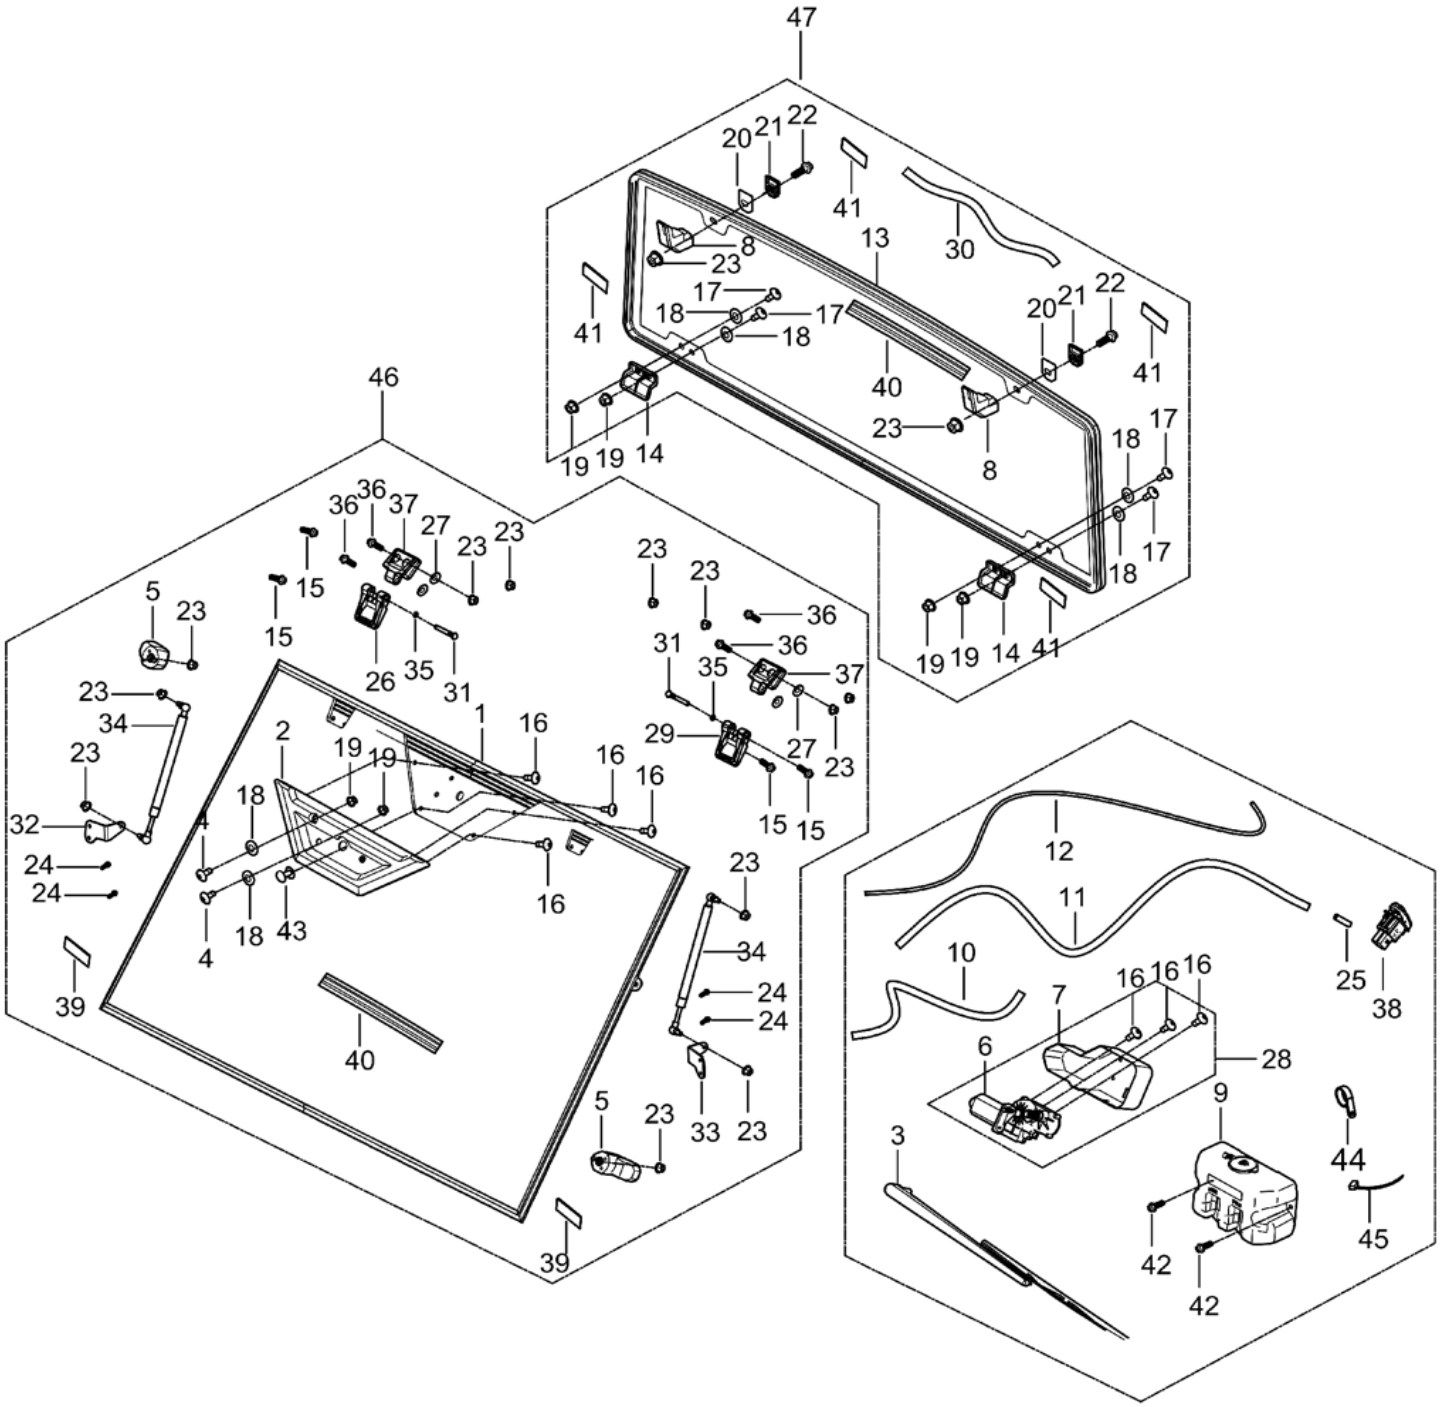

FRONT AND REAR WINDOW (OPTIONAL) PART NUMBERS


No.	Part Number	Description	Pieces
1	19314120010	Front Windshield Assembly	1
2	16814110190	Fixed Mount, Wiper Motor	1
3	19314140000	Wiper Arm	1
4	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	2
5	16814110090	Front Windshield Installation Clip	2
6	16614140601	Wiper Motor, New Style	1
7	16614110851	Motor Cover	1
8	16814110500	Rear Windshield Installation Clip	2
9	16614110701	Glass Water Jug	1
10	16614110830	Glass Water Pipe,Short	1
11	16614110840	Glass Water Pipe,Long	1
12	16814140610	Windshield Wiper Motor Connector Wire	1
13	19314120050	Rear Windshield	1
14	16814110540	Rear Windshield Lower Installation Clip	2
15	01214080145	Hex Flange Bolt M8×14	4
16	03414060124	Inner Hexagonalobular Socket Pan Head Screw M6×12 ,Black	7
17	03414060254	Inner Hexalobular Socket Pan Head Screws M6×25	4
18	10914110060	Hinge Gasket, Windshield	4
19	04612060025	Hexagon Flange Locking Nut M6	6
20	16814110530	Rear Windshield Upper Mounting Plate Spacer	2
21	16814110520	Rear Windshield Upper Mounting Plate	2
22	01214080305	Hex Flange Bolt M8x30	2
23	04612080024	Hex Flange Locking Nut M8	12
24	01254060166	Hex Flange Bolt M6×16	8
25	16614110820	Connector, Glass Water Pipe	1
26	16814110340	Front Windshield Static Hinge,RH	1
27	06219092205	Washer φ8.5×φ22×2	8
28	16614140030	Motor	1
29	16814110330	LH Front Windshield Static Hinge	1
30	19314110420	Rear Windshield Seal Strip	1
31	16614110270	Hinge Shaft	2
32	16814110360	Front Windshield Gas Spring Mounting Plate,RH	1
33	16814110350	LH Front Windshield Gas Spring Mounting Plate	1
34	16814110301	Front Windshield Gas Spring	2
35	07031060004	E Type Snap Ring	2
36	01224080206	Hex Flange Bolt M8×20	4
37	16814110320	Front Windshield Hinge	2
38	16809190400	Wiper Motor Switch	1
39	16814120040	Front Windshield Seal	2
40	19314110500	Rear Windshield Installation Seal Strip	2
41	16814120050	Rear Windshield Seal	4
42	03414060164	Inner Hexalobular Socket Pan Head Screws M6X16	2
43	16814120030	Front Windshield Rubber Plug ,No Wiper Motor	1
44	10109380010	Wiring Harness Retaining Clip 1	4
45	90103040057	Metal Cable Tie Strap	1
46	Z9314120010	Windshield Assembly (with Wiper)	
46	Z9314120020	Windshield Assembly (without Wiper)	
47	Z9314WR0000	Rear Window Assembly	

CYLINDER HEAD COMPONENT

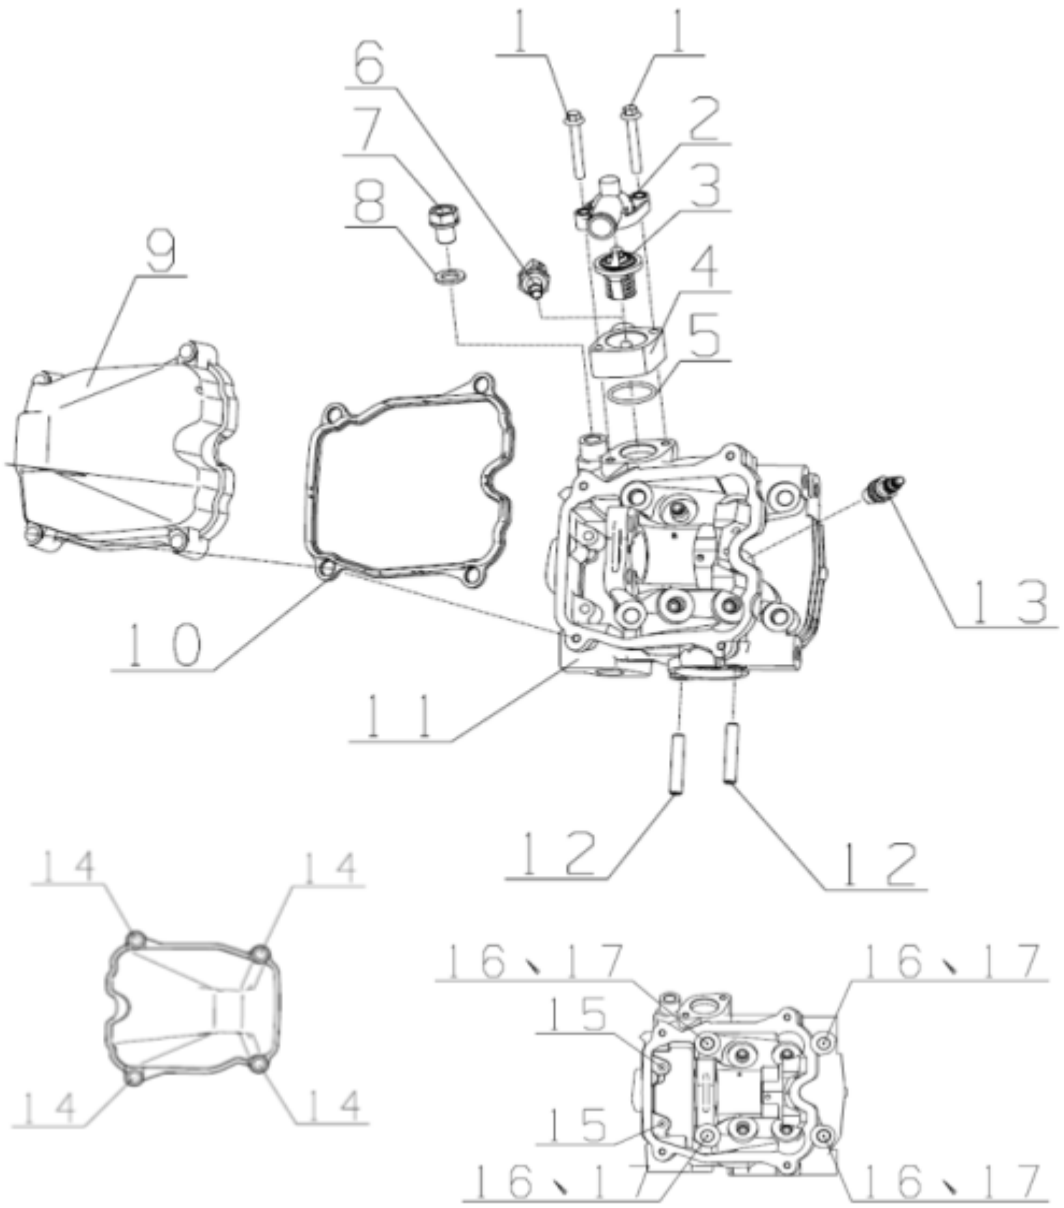


No.	Part Number	Description	Pieces
1	100011540-0013	Bolt, M6×50	2
2	100079393	Thermostat Cover	1
3	100201768	Thermostat Ass.	1
4	100079391-0001	Thermostat Ass Base	1
5	100716042	O ring	1
6	100097091	Temperature Sensor Of Cooling Fluid	1
7	100834782-0002	Oil Drain Plug	1
8	100106548	Washer,φ12.1×2×φ20	1
9	100079445-0001	Upper Cover Cylinder Head	1
10	100079432	Seal Ring	1
11	100079352-0002	Cylinder Head Assy	1
12	100100449-0003	Bolt,M8×44	2
13	100079462	Spark Plug	1
14	100089074-0002	Bolt,M6×1×40	4
15	100081285-0001	Bolt, M6×132	2
16	100079427-0001	Cylinder Head Bolt	4
17	100106393	Washer,φ10.5×2×φ20	4

CYLINDER BLOCK COMPONENT

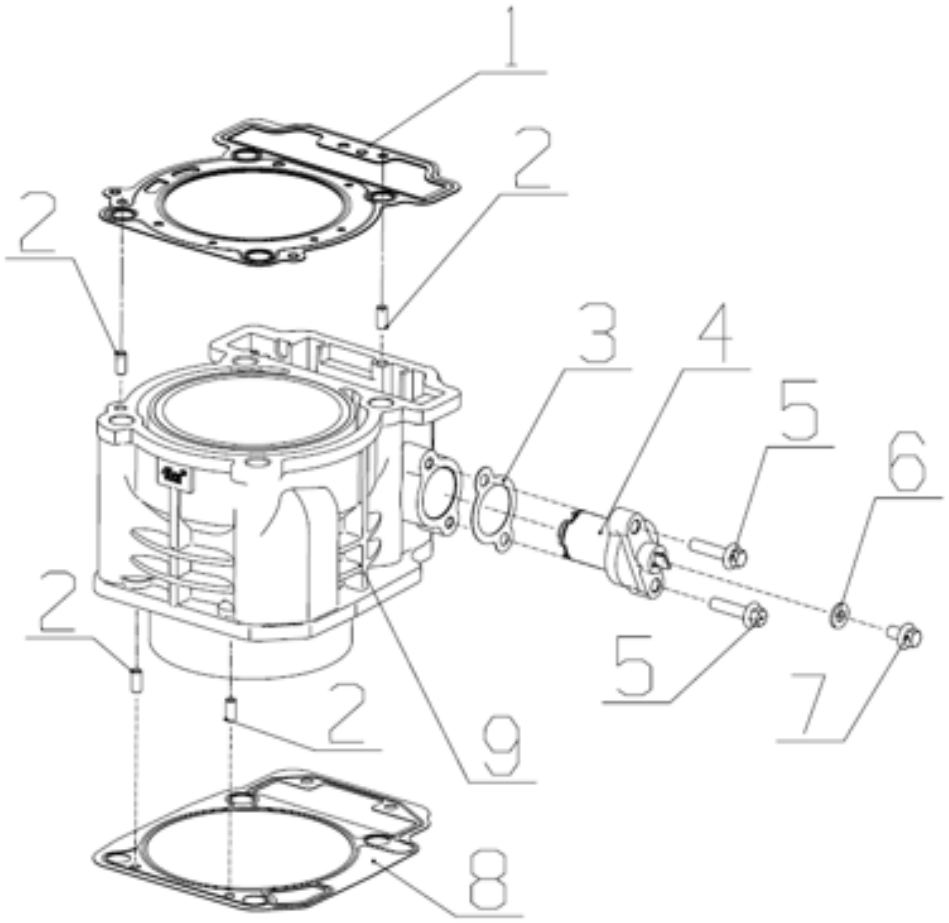


No.	Part Number	Description	Pieces
1	100079365	Gasket Tensioner	1
2	100100909	Pin,φ5×11.8	4
3	100079367	Gasket Tensioner	1
4	100079456	Chain Tensioning Wheel	1
5	100011534-0009	Bolt, M6×25	2
6	100106538	Washer,φ6.2×1.5×φ13	1
7	100055592-0008	Bolt, M6×10	1
8	100079366	Gasket Tensioner	1
9	100079442-0003	Cylinder Block Assembly	1

AIR DISTRIBUTION MECHANISM

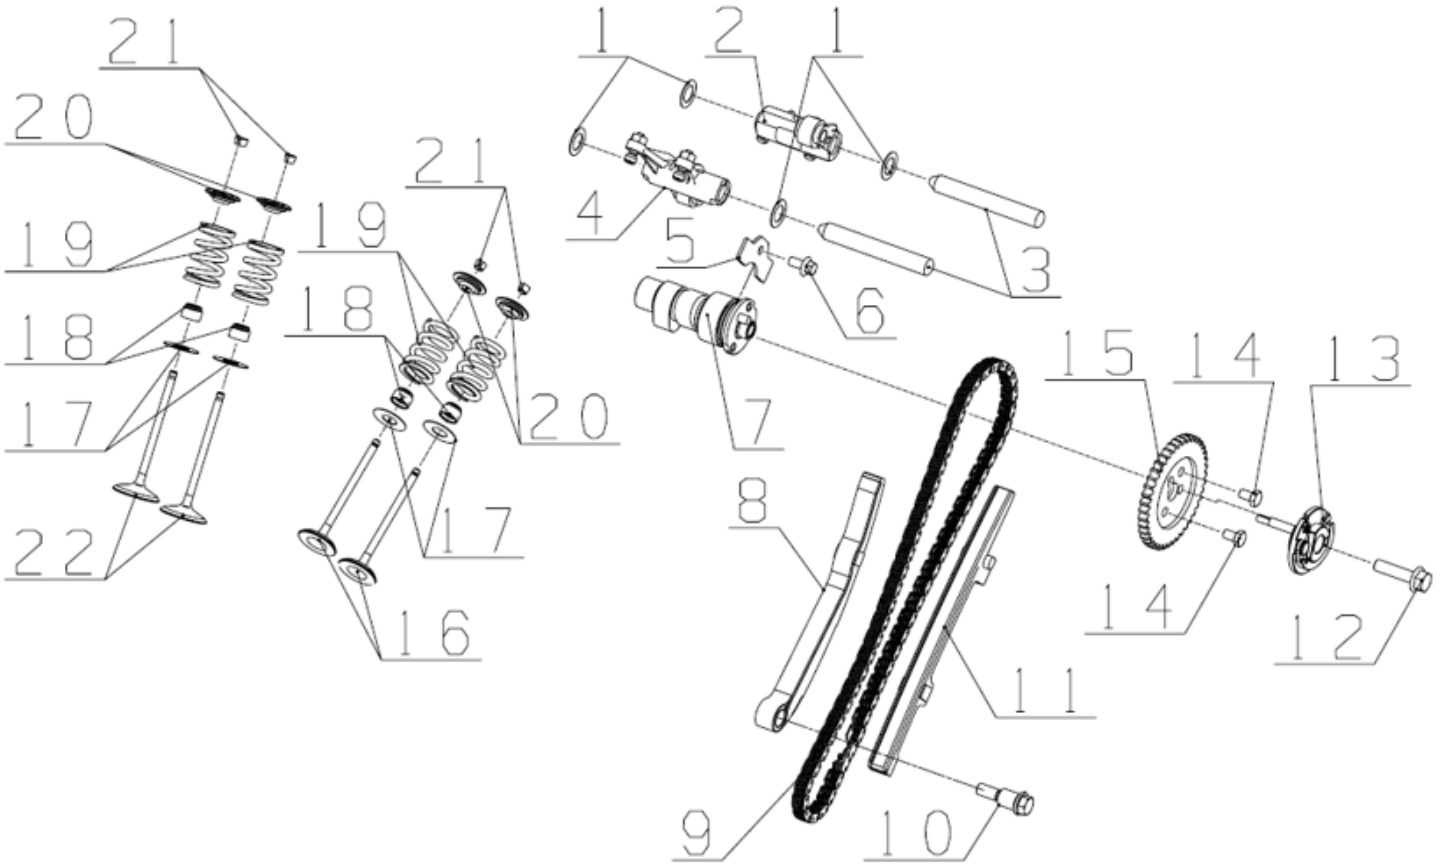


No.	Part Number	Description	Pieces
1	100102761	Washer,φ12.2×0.5×φ20	4
2	100079439	Rocker Arm Assembly Valve	1
3	100079436	Rocker Shaft	2
4	100079440	Rocker Arm Assembly Valve	1
5	100079435	Stop Plate Camshaft	1
6	100055591-0009	Bolt, M6×12	1
7	100079480	Gamp Shaft Comp	1
8	100079399	Tension Plate Assy	1
9	100079408	Sprocket Chain	1
10	100079428	Bolt	1
11	100079398	Guide Plate Chain	1
12	100011319-0001	Bolt, M8×32	1
13	100079479	Pressure Release Valve	1
14	100031911-0004	Bolt, M6×10	2
15	100079478	Timing Driven Sprocket	1
16	100079437	Exhaust Valve	2
17	100079380	Outer Valve SpRing,Retainer	4
18	100105334	Seal Valve Stem	4
19	100079385	Valve Outer Spring	4
20	100079381	SpRing,Seat	4
21	100079382	Valve Locker	8
22	100079438	Intake Valve	2

RIGHT CRANKCASE COVER

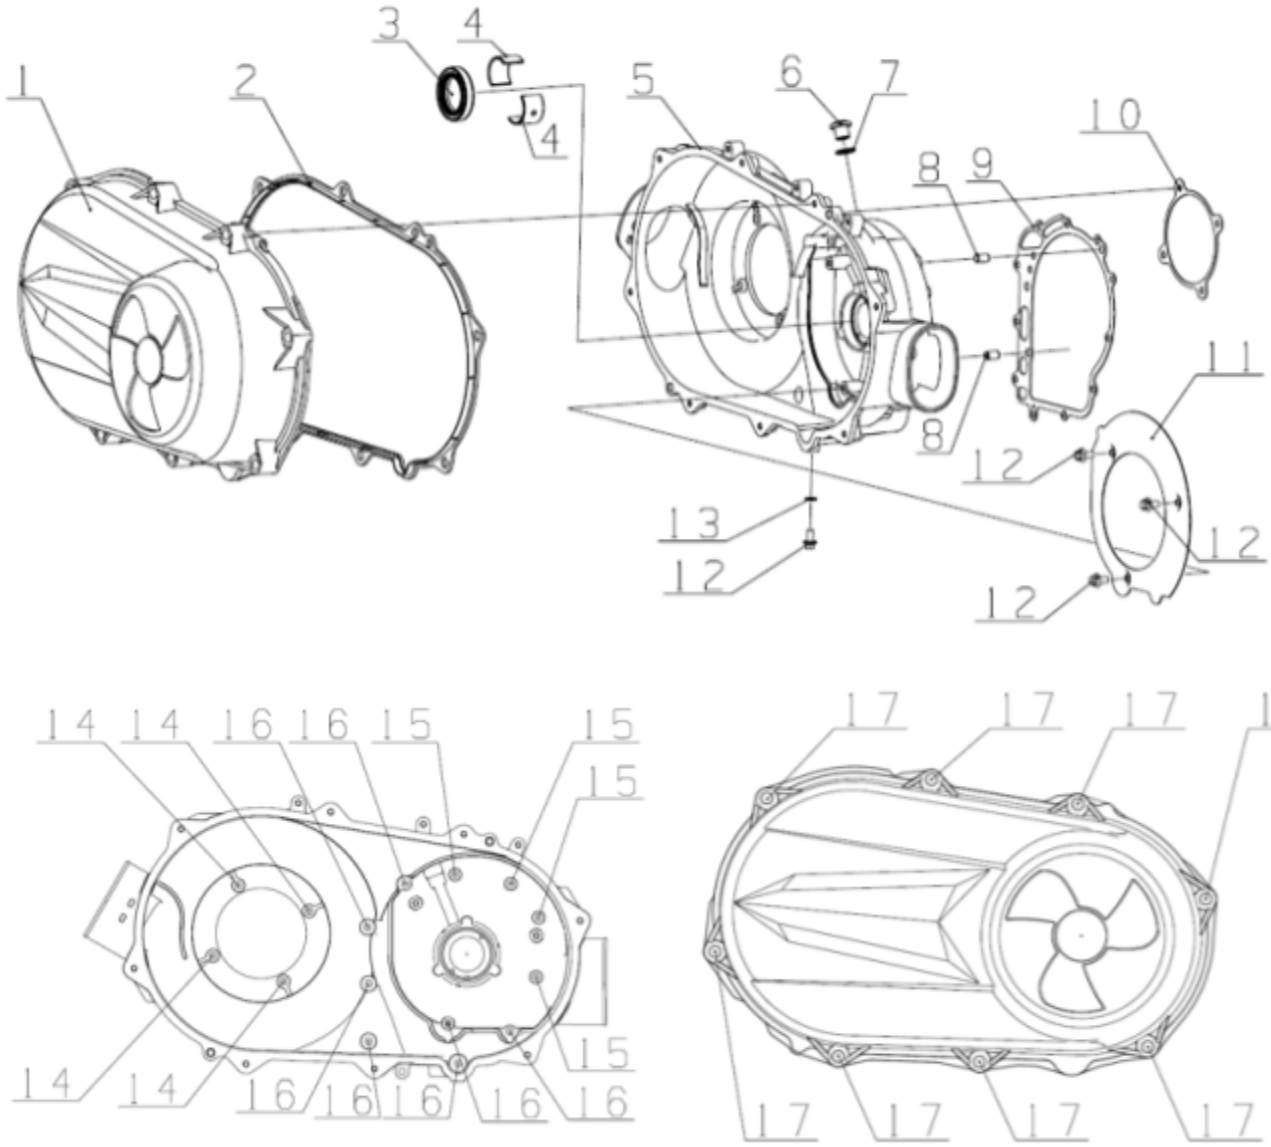


No.	Part Number	Description	Pieces
1	100079454-0001	Cover Comp Right Crankcase	1
2	100079397	Gasket,R.Crankcase Cover	1
3	100079447	Oil Seal, φ32×φ55×10	1
4	100079394	Crankshaft BeaRing	2
5	100079419-0001	Right Crankcase Block Liner	1
6	100079406-0001	Bolt,M14×1.5×12	1
7	100106552	Washer,φ14×1.5×φ20	1
8	100101211	Dowel Pin,φ8×14×φ7	2
9	100079364	Gasket Tensioner	1
10	100079363	Gasket Tensioner	1
11	100079375	Shroud	1
12	100055591-0009	Bolt, M6×12	4
13	100106563	Washer,φ6.2×1×φ12	1
14	100055588-0008	Bolt, M6×20	4
15	100011536-0011	Bolt, M6×30	4
16	100033118-0001	Bolt, M6×40	7
17	100089074-0002	Bolt,M6×1×40	8

ELECTRIC STARTING MECHANISM

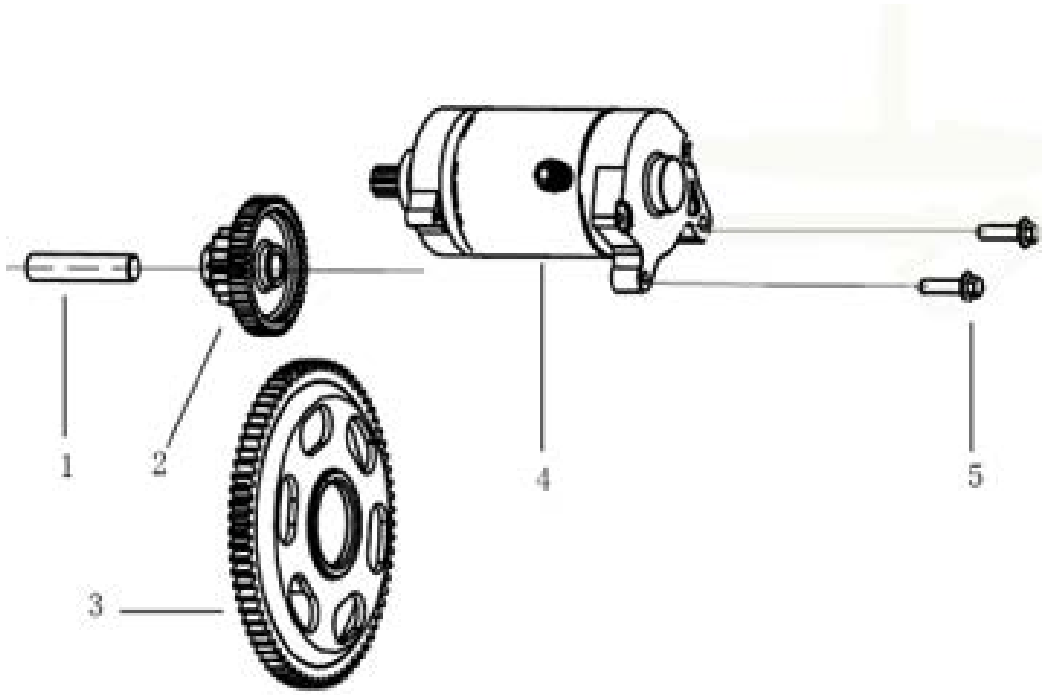


No.	Part Number	Description	Pieces
1	100079387	Shaft Reduction	1
2	100079470	Twin Gear Set	1
3	100079471	Plate Gear Assy	1
4	100079467-0004	Starting Motor Assy	1
5	100011533-0007	Bolt, M6×22	2

MAGNETO MOTOR ASSEMBLY

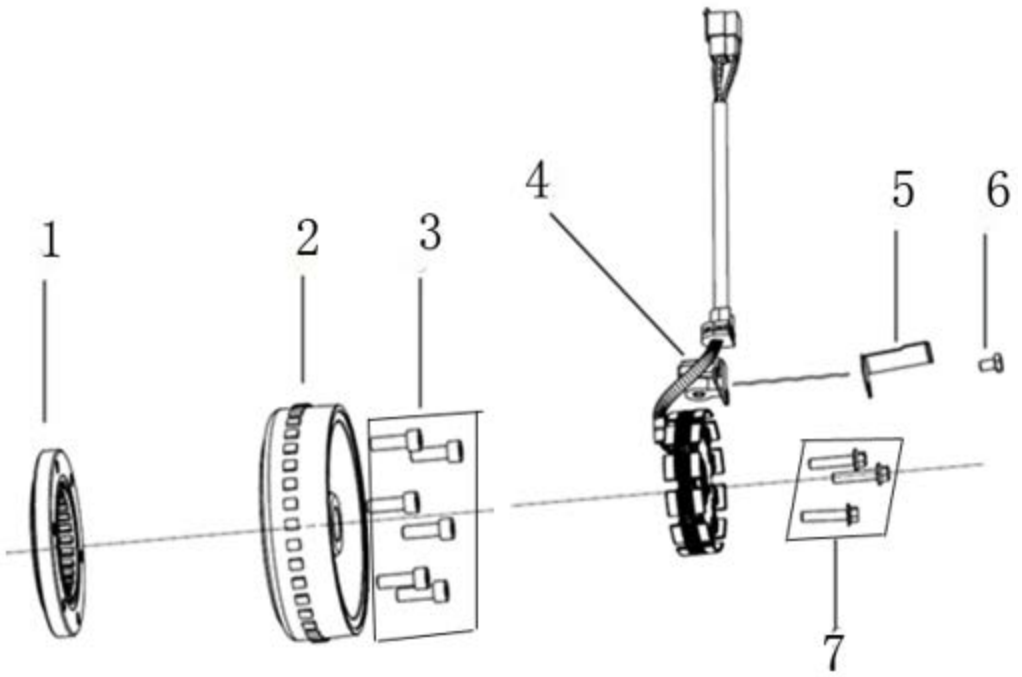


No.	Part Number	Description	Pieces
1	100079466	Assembly Overrunning Clutch	1
2	100788179	Rotor Assy Magneto	1
3	100100499-0002	Bolt, M8×18	6
4	100079468-0002	Stator Assy Magneto	1
5	100079372	Fixing Plate Magneto Cable	1
6	100055592-0008	Bolt, M6×10	1
7	100011536-0011	Bolt, M6×30	3

LEFT CRANKCASE COVER

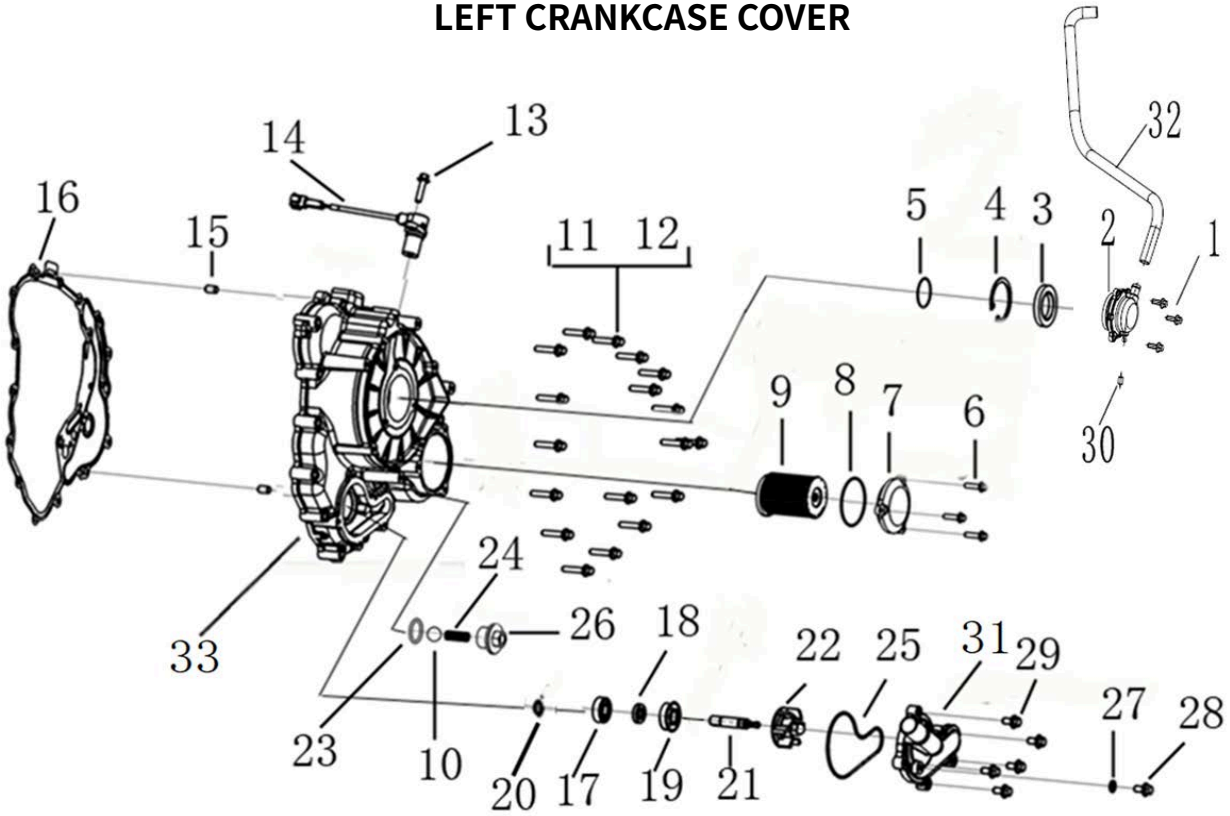


No.	Part Number	Description	Pieces
1	100055589-0012	Bolt, M6×16	3
2	100811126-0001	Cap Big View Hole	1
3	100104798	Oil Seal 27×42×7	1
4	100011084	Retaining Ring, 42	1
5	100079430	O-Ring,φ48×2.5	1
6	100011531-0012	Bolt, M6×18	3
7	100088815-0001	Cap Oil Filter	1
8	100079429	O-Ring,φ62×2.5	1
9	100079378	Oil Filter	1
10	100079563	Steel Ball, φ13.494	1
11	100033118-0001	Bolt, M6×40	16
12	100011544-0010	Bolt, M6×75	2
13	100031967-0009	Bolt, M6×16	1
14	100079404	Tachometric Sensor	1
15	100101211	Dowel Pin,φ8×14×φ7	2
16	100079362	Gasket Tensioner	1
17	100100971	BeaRing,(6000)	1
18	100208940	Oil Seal 10×20×5	1
19	100201478	Mechanism Seal Assy	1
20	100011094	Retaining Ring, 10	1
21	100086905	Water Pump Shaft	1
22	100086904	Water Pump Impeller	1
23	100107699	O-Ring,φ19×2.5	1
24	100079384	Decompression Spring	1
25	100079433	Seal Ring	1
26	100079461-0001	Pressure Relief Valve Cover	1
27	100106563	Washer,φ6.2×1×φ12	1
28	100055591-0009	Bolt, M6×12	1
29	100011533-0007	Bolt, M6×22	5
30	100310070	Sealing Cap	1
31	100079481-0001	Water Pump Cover	1
32	100831805	Breather Pipe	1
33	100826419-0001	Front Part,L.Crankcase Cover	1

RIGHT CRANKCASE COVER

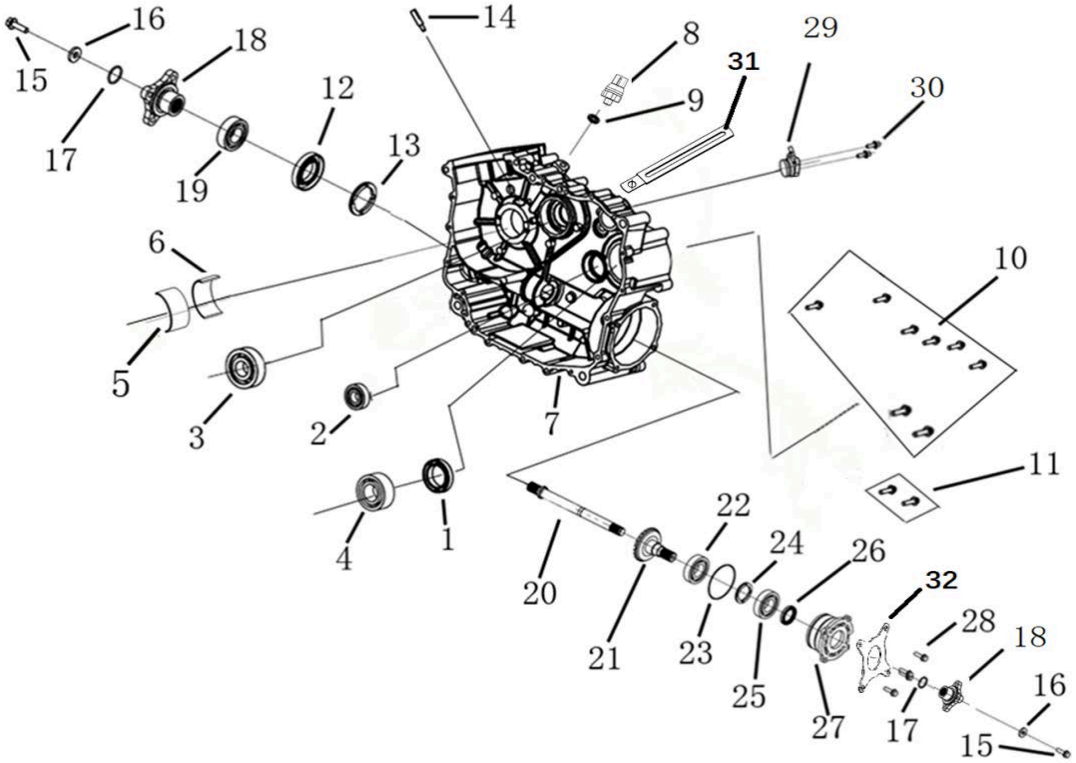


No.	Part Number	Description	Pieces
1	100079448	Oil Seal, φ30×φ45×8	1
2	100059253	BeaRing,(6203)	1
3	100101107	BeaRing,(63/22Jr2C3)	1
4	100084174	BeaRing,(5206 C3)	1
5	100079395	Crankshaft BeaRing	1
6	100079396	Crankshaft BeaRing	1
7	100079443-0001	Right Crankcase Block	1
8	100810984	Oil Pressure Sensor	1
9	100053725	Plain Washer,φ10×1.5×φ17	1
10	100011540-0013	Bolt, M6×50	8
11	100011331-0005	Bolt, M8×50	2
12	100079446	Oil Seal, φ34×φ61×9	1
13	100079426	Lock Nut	1
14	100100725	Oil Puss	1
15	100011378-0003	Bolt, M10×1.25×20	2
16	100079368	washer	2
17	100107728	O-Ring,φ25×2.4	2
18	100079353	Spline Cover	1
19	100010776	Bearing, 6205	1
20	100079354	Rear Wheel Shaft	1
21	100079474	Output Driven Cone	1
22	100101102	BeaRing,(6207 C3Spx1)	1
23	100080916	O-Ring,φ90×2.5	1
24	100081523	Lock Nut	1
25	100079105	BeaRing	1
26	100079434	Oil Seal, φ35×φ50×7	1
27	100081276-0001	End Cover Clutch	1
28	100011317-0003	Bolt, M8×28	4
29	100079377-0001	Gearshift Switch Comp	1
30	100031967-0009	Bolt, M6×16	2
31	100072663	Clamp	1
32	100079473	Rear Output Shaft End Cap Assembly	1
33	100079472-0001	Connecting Flange	1

LEFT CRANKCASE A

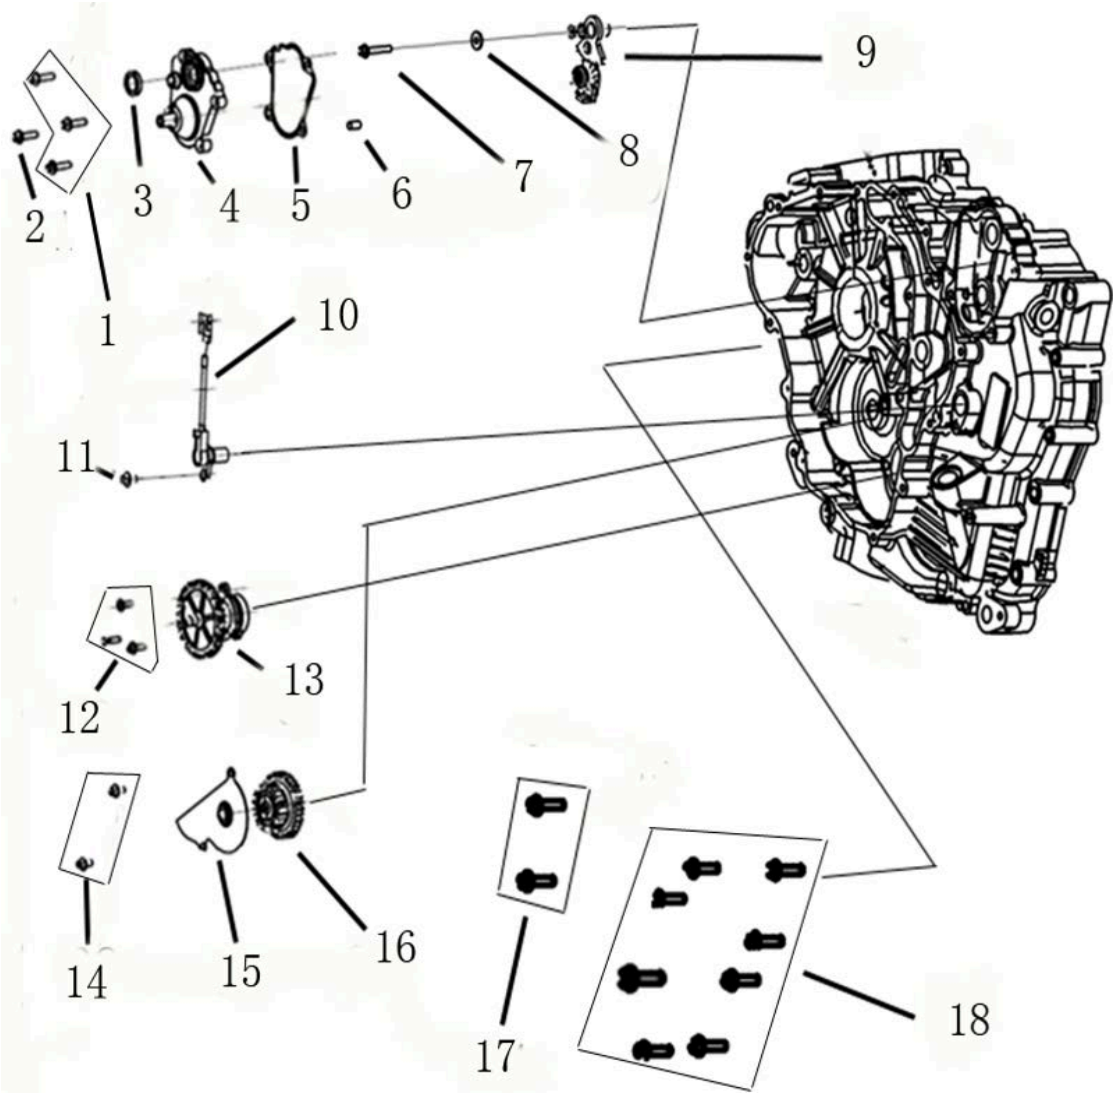


No.	Part Number	Description	Pieces
1	100011534-0009	Bolt, M6×25	3
2	100031957-0012	Bolt, M6×32	1
3	100079449	Oil Seal, φ15×φ25×5	1
4	100079379-0001	Gear Shift Mounting Cover	1
5	100079361	Gasket Tensioner	1
6	100101211	Dowel Pin,φ8×14×φ7	1
7	100011537-0002	Bolt, M6×35	1
8	100053259	Stop Plate Shaft	1
9	100079463	Gearshift Lever Comp	1
10	100789812	Speed Sensing	1
11	100011570-0012	Bolt, M6×12	1
12	100011520-0002	Bolt, M5×16	3
13	100080855	Oil Pump	1
14	100055591-0009	Bolt, M6×12	2
15	100079374	Oil Pump Cover	1
16	100080856	Oil Pump Gear	1
17	100011331-0005	Bolt, M8×50	2
18	100011542-0013	Bolt, M6×60	7
19	100101209	Dowel Pin,φ8×10×φ6.6	1

LEFT CRANKCASE B

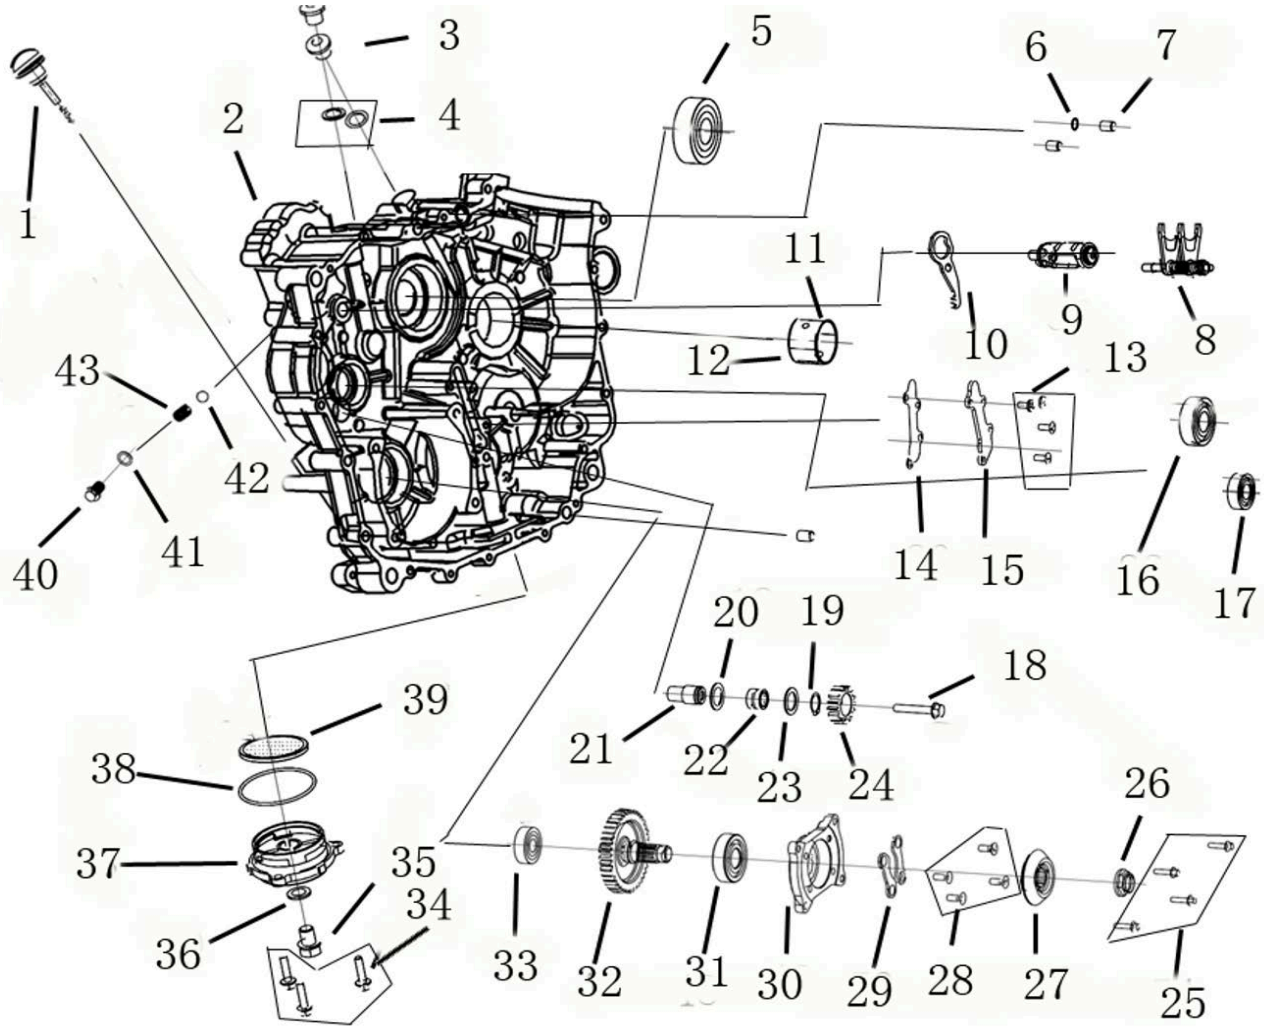


No.	Part Number	Description	Pieces
1	100079455-0001	Oil Ruler Assy	1
2	100079444-0001	Half-Crankcase Flywheel Side	1
3	100079406	Bolt,M14×1.5×12	2
4	100106552	Washer,φ14×1.5×φ20	2
5	100059253	BeaRing,((63/22-RS-P6)	1
6	100300390	O-Ring,φ10×1.6	1
7	100010557	Pin,φ10×14	3
8	100079416	Fork Assy	1
9	100079417	Gearshift Drum Comp	1
10	100079371	Parking Brake Plate	1
11	100079396	Crankshaft BeaRing	1
12	100079395	Crankshaft BeaRing	1
13	100055591-0009	Bolt, M6×12	4
14	100079453	Gasket Tensioner	1
15	100079373	Oil Duct Cover Plate	1
16	100160369	BeaRing,(6203)	1
17	100100984	BeaRing,(6202)	1
18	100011330-0002	Bolt, M8×48	1
19	100011102	Retaining Ring, 20	1
20	100079369	washer	1
21	100079388	Pivot Reverse Gear Idler Wheel	1

LEFT CRANKCASE B *CONTINUED*

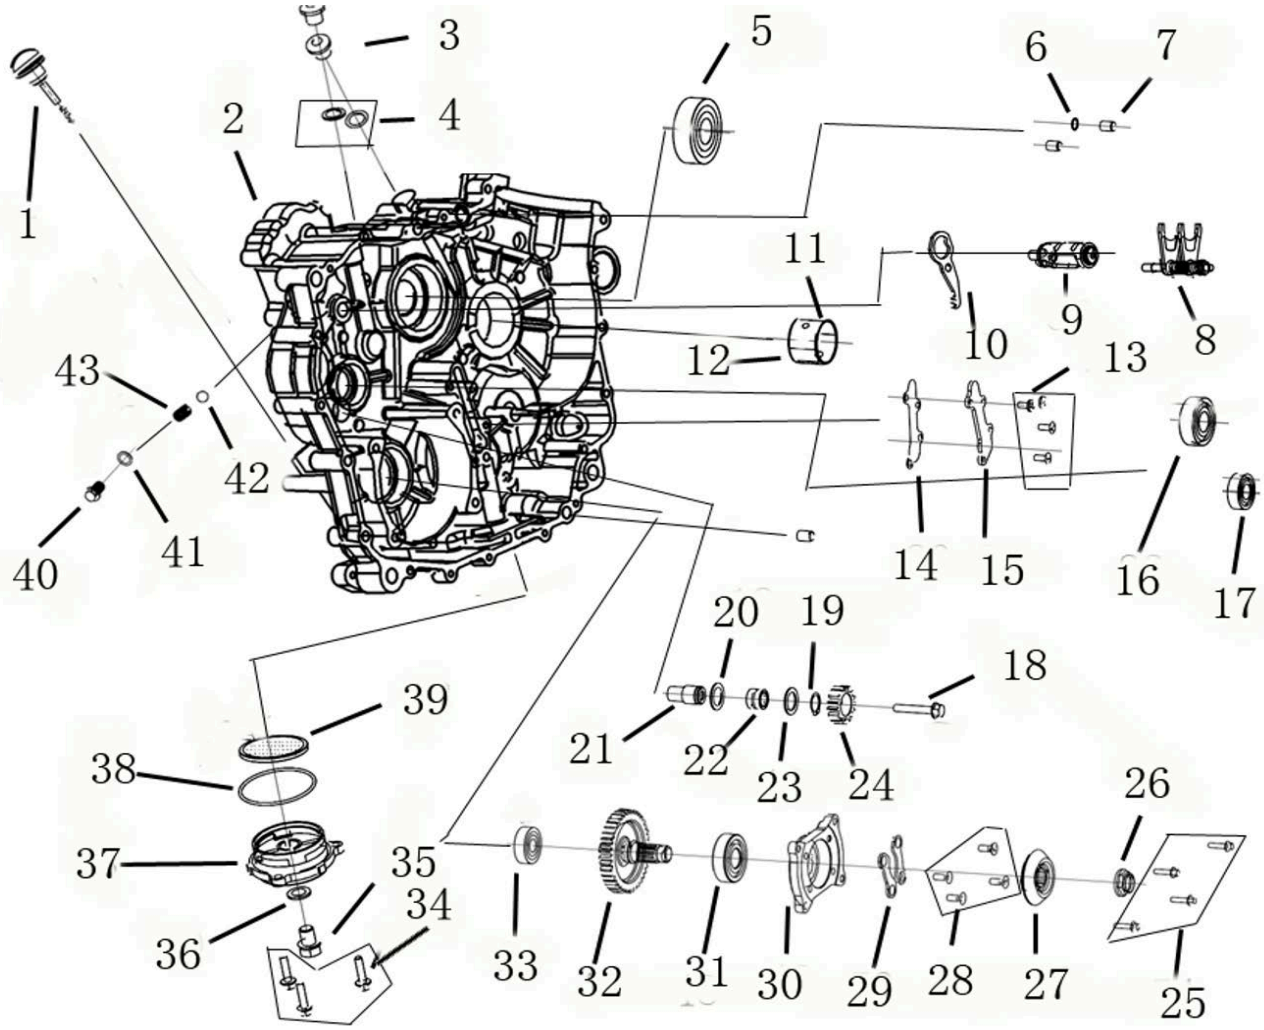


No.	Part Number	Description	Pieces
22	100079464	Needing Bearing (20×25×12)	1
23	100079369	washer	1
24	100785328	Revers Idler	1
25	100011317-0003	Bolt, M8×28	4
26	100080857	Lock Nut	1
27	100081281	Output Active Cone Assembly	1
28	100081286-0001	Bolt, M8×20	4
29	100081277	Cover Board	2
30	100081278-0001	Ignition Seat	1
31	100079105	BeaRing	1
32	100785325	Output Active Cone Assembly	1
33	100054649	Bearing,(6303_C3)	1
34	100055588-0008	Bolt, M6×20	3
35	100054898-0002	Oil Drain Plug	1
36	100106548	Washer,φ12.1×2×φ20	1
37	100079458-0001	Cap Oil Strainer	1
38	100079429	O-Ring,φ62×2.5	1
39	100079376	Oil Strainer	1
40	100079424-0001	Bolt,M14×1.5×23	1
41	100106552	Washer,φ14×1.5×φ20	1
42	100010937	Steel Ball, φ9.5	1
43	100079383	Lower Rocker Arm	1

CRANKSHAFT / PISTON / BALANCE SHAFT

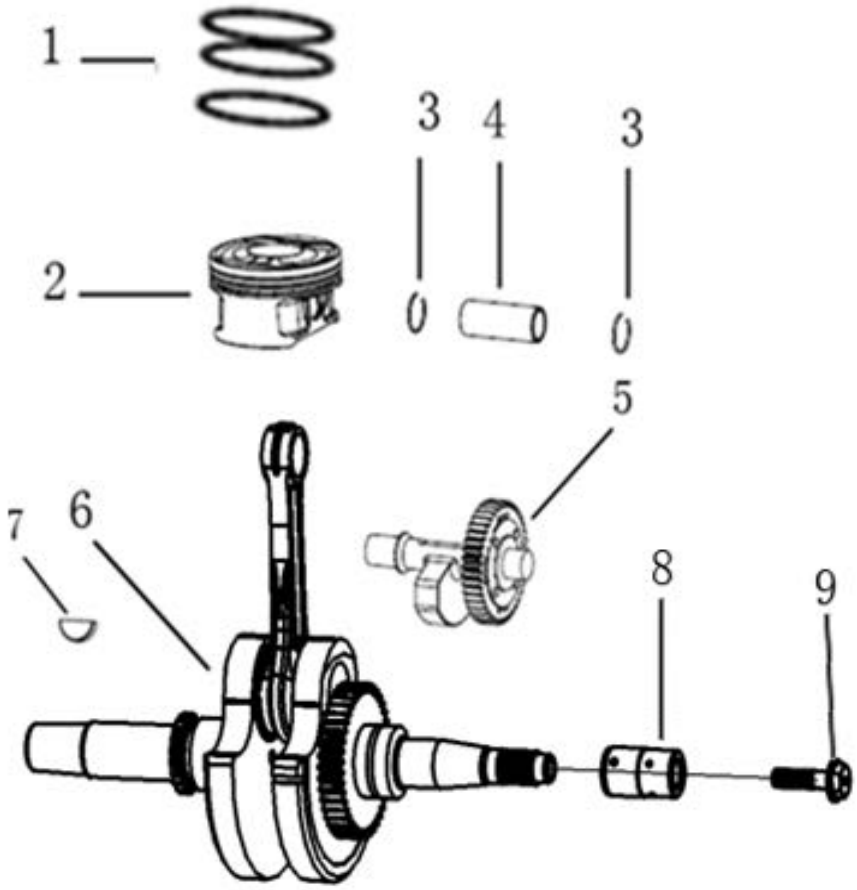

No.	Part Number	Description	Pieces
1	100811730	Piston Ring,Comp	1
2	100079477	Piston	1
3	100079441	Piston pin ring	2
4	100079389	Pin,Piston	1
5	100079412	Balance Shaft Assembly	1
6	100079413	Crankshaft Connecting-Rod Assy	1
7	100031699	Woodruff Key 4×5×φ16	1
8	100079386	Magneto Rotor Shaft Sleeve	1
9	100079425	Bolt,M10×1.25×40	1

VARIABLE SPEED MECHANISM

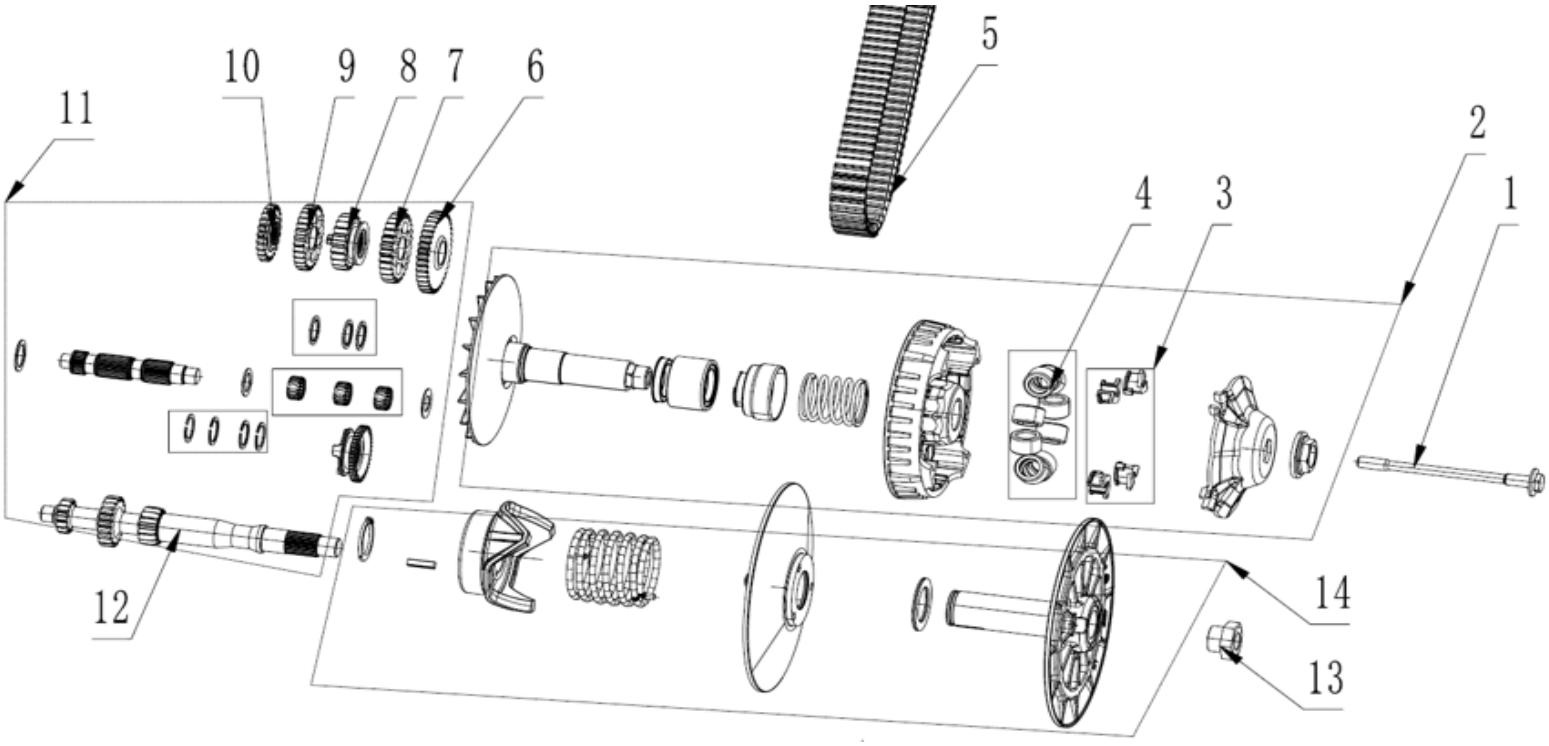

No.	Part Number	Description	Pieces
1	100079421	Bolt,M12×1.5×138	1
2	100818271	Drive Pulley Comp	1
3	100755110	Buffer block	4
4	100755111	Roller	8
5	100079409	Drive Strap Of Oil Pump	1
6	100785338	Countershaft Low Speed Gear Combination	1
7	100785342	Countershaft High Speed Gear	1
8	100785343	Countershaft Output Gear	1
9	100785344	Countershaft Reverse Gear	1
10	100785345	Parking Gear	1
11	100785335	Transmission Main Counter Shaft	1
12	100785336	Main Shaft Transmission	1
13	100079420	Lock Nut	1
14	100079410	Driven Pulley Comp	1